

Licensed to Marco Antonio Meggiolaro, PUC-Rio



ViDa
2002

Visual Damagemeter for Windows

Windows 95/98/2000/NT

32-bit Version

Copyright 1996-2001

ViDa Inc.

User Manual

Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express permission of ViDa Inc.

Copyright ©1996-2002 ViDa Inc. All rights reserved.

ViDa is a registered trademark of ViDa Inc.

Windows is a registered trademark of Microsoft Corporation

This software is provided 'as is' and any expressed or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall the author or his contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage. Any liability of ViDa Inc will be limited exclusively to product replacement or refund.

Contents



Chapter 1 Welcome	5
ViDa Main Features	6
ViDa at a Glance	6
Making your First Damage Calculation with ViDa	6
Loading a History	7
Changing the Material	7
Calculating Life of Welded Structures	7
Drawing Elastoplastic Hysteresis Loops	8
Calculating Crack Growth	8
Bidimensional Crack Growth	8
 Chapter 2 Installing ViDa	 9
Before You Begin	10
Running ViDa Setup	10
Registering ViDa	12
 Chapter 3 Using ViDa Windows	 13
Main Window	14
Handling all ViDa Graphs	22
Standard Open/Save File Window	24
Open CSV/Excel File Window	25
Material Window	26
Open Material window	33
Find Material Window	34
Browse Material Window	35
Calculate b and c for SN Window	36
Equations Database Window	37
Calculate Life (SN) Extended Window	39
Calculate Life (SN) Simplified Window	43
Calculate Effective Diameter Window	44
Calculate Typical Stress Concentration Factor (Kt) Window	45
Calculating Stored Stress Concentration Factors (Kt)	47
Calculate Notch Sensitivity (q) for Steels and Alumina Window	48
Calculate Life of Welded Structures Window	49
Calculate Life (eN) Extended Window	51
Calculate Life (eN) Simplified Window	55
Crack Growth (da/dN) Extended Window	56
Typical da/dN Curves Window	62
Typical Stress Intensity Factor Window	63
Crack Growth (da/dN) Simplified Window	65
Bidimensional Crack Growth (da/dN and dc/dN) Window	66
Calculation Logbook Window	72
Calculate Equivalent Stress Window	73
Smart Calculator Window	78
Options Window	80
Multimedia Window	84
Tip of the Day Window	84

Chapter 4 ViDa Tutorials.....	86
How do I Calculate Damage using the SN method ?	87
How do I Calculate Damage of Welded Structures ?	89
How do I Calculate Damage using the eN Method ?	90
How do I Calculate Unidimensional Crack Growth ?	92
How do I Calculate Bidimensional Crack Growth ?.....	94
How do I Use the Materials Database ?	96
How do I Handle Experimental Data Points ?	97
How do I Use the Equations Database ?	98
How do I Handle Tridimensional Stress Histories / Rosette Data?	98
How do I Use the Smart Calculator ?	99
Useful Tips about ViDa.....	100
General Tips	100
Material Database Tips	101
SN Method and Welded Structures Tips	102
eN Method Tips	104
Crack Growth Calculation Tips	104
Other Tips.....	106
 Chapter 5 Advanced Issues	 107
Troubleshooting.....	108
Database Information	109
Input File Formats.....	110
 References	 112



Welcome

Welcome to **ViDa**, the Fatigue Damage Calculator.

Fatigue and Fracture Mechanics calculations can be a very laborious task without a powerful software like **ViDa**, mainly when we need to calculate the accumulated damage or the remaining life of a structure or equipment which work under complex loading. In these cases, all we really wish is just specify the material, the applied stresses or strains and the appropriate stress concentration factor, and let the computer do (fast and accurately!) the dog work.

However, most powerful computational tools are written by software-oriented people: their terminology is normally so strange, not to mention how non-intuitive most of the user interfaces are, that you first have to learn how they internally work before being able to reliably perform even the most simple calculation. But **ViDa** is different. It has been developed by fatigue engineers to satisfy our design needs. Having a basic fatigue training, anyone can learn how to use its basic features in a glance. Take the one minute challenge! See how fast you can make a full calculation of fatigue damage with **ViDa**!

Contents

- ViDa Main Features

- ViDa at a Glance

 - Making your First Damage Calculation with ViDa

 - Loading a History

 - Changing the Material

 - Calculating Life of Welded Structures

 - Drawing Elastoplastic Hysteresis Loops

 - Calculating Crack Growth

 - Bidimensional Crack Growth

ViDa Main Features

ViDa is a powerful software for calculating the fatigue damage caused by complex loading. It includes **all** the traditional fatigue design methods, and introduces a series of improvements to enhance the speed and the accuracy of the numerical results, e.g.:

- Calculates the Fatigue Damage by the SN, eN and the da/dN Methods
- Plots the **Correct** Elastoplastic Hysteresis Loops calculated by the eN Method
- Solves the Neuber System for Stress Concentration
- Rainflow Counts and Racetrack Filters Complex Loading Histories
- Predicts the Uni and Bidimensional Growth of Fatigue Cracks, **Including** Retardation Effects
- Calculates **Kt**, **q**, **KI** and Other Constants Required by the Various Design Methods
- Automatically Adjusts Experimental Curves
- Has Friendly and Expandable Data Banks of Materials Properties, Stress Intensity Factors, and More!

ViDa at a Glance

Making your First Damage Calculation with ViDa

This is a quick step-by-step tutorial that'll show you how to work with **ViDa**. Even if you're not a fast typist you'll take close to the minute to make your first calculation.

Scenario

You've applied 100,000 cycles at 10 Hz of a pulsating 200 MPa stress on a specimen. We want to calculate the damage done to the specimen (0 being no damage and 1 being failure) and its remaining life in days (considering that the same rate of loading will be applied).

Are you ready? Check your clock, off we go!

1. In the Main Window, click on the cell right below '**Alternate**' in the **Loading Window**. Type '100'. Press the right arrow key ('->') and type '100' below the '**Mean**' heading (the load is pulsating, therefore it has equal alternate and mean components). Now press the right arrow key ('->') and type '200000' (meaning 200000 ½ cycles, equal to 100000 cycles). We are on the first of three steps.

2. Click on the **box next to 'Loading Time'** and type '10000' (which is the duration in seconds of your loading history). Also check if the '**Table**' option (above the **Loading Window**) is set for Stress(MPa).

3. Select **Life | SN Method...** from the menu. The SN Method window will appear. Check if the stress concentration factor **Kt** (on the bottom of the window) is set to 1. Click on the **OK Button**.

You're done ! The damage and remaining life time are almost instantly displayed on the 2 bottom rows of the **Loading Window** as predicted by the Soderberg, the Goodman, the Gerber and even by a custom model!

How long did that take you? Even if you didn't break the one minute barrier first time around, consider this: you have just completed a full SN Method fatigue life calculation, all in about a minute! Now that wasn't hard was it?

Loading a History

In addition to typing the loading history, with **ViDa** you can import files from other software. It is possible to load comma separated value files (e.g. generated from the **Instron's Wavemaker** software), previously saved Alternate/Mean or Peak/Valley files or even experimentally generated files by the **Kyowa RHS-500A histogrammer**.

1. On the Main Window, choose the **File | Open command**. A standard load file window will appear.
2. Click on the complex.alt file and press **OK**.

Done ! The **Datasheet** is now loaded with Alternate and Mean components of your loading history. These values represent stresses since the **Table Option** is set to 'Stress' (refer to the **Tools | Options command** to define if these stress values are in MPa or ksi). Now you can proceed to calculate life in the same way you did on the previous example.

Note also that you can view these Alternate/Mean components as a sequence of Peaks and Valleys by clicking on Peak/Valley in the **Sequencing Option**. You can also add or delete rows by using the **Edit menu**. Refer to the **Edit menu** for more information on data handling in the **Loading Window**.

Changing the Material

ViDa has a complete Materials Database with stress-strain curves, SN, eN and da/dN data and many other properties of over 1500 materials. This database can be expanded by the user with no storage limits and all the materials can be searched by user defined criteria (e.g. searching for Alumina with **Su** between 400 and 500 MPa and sorting by their price). The next example will show you how to choose the material you're working with.

1. From the Main Window, choose the **Data | Material command**. The Material Window will appear with the properties of the current material.
2. Choose the **File | Open command**. A list with all the materials in the database will appear.
3. Click on the name of the desired material.

It's done. All the stored properties for that material will appear in the Material Window. Even experimentally measured points for this material (if any) will be loaded and available through the **Experimental Points tab**.

If you want you can change some of the properties, but you'll need to use the **File | Save command** in order to be able to use these changes in the calculations. Note that some values are written in red in the Material Window. The red color denotes properties that were calculated/estimated from others, without having been directly measured. This color can be toggled by pressing the space bar on the desired value.

When you return to the Main Window by using the **File | Exit command** the name of the selected material will be displayed in the **Material field** and any further calculations will use its properties.

Calculating Life of Welded Structures

ViDa calculates the damage associated to the loading history for welded structures. This calculation is independent of the **current Material** since it depends only on the Weld Joint class.

1. From the Main Window, click on the **Life | Welded Structures command**. The Calculate Life of Welded Structures window will appear.
2. Click on the **drawing of the desired weld joint**. Its **class** and **description** will be shown on the bottom of the window, and press **OK**.

The damage and remaining life time are almost instantly displayed on the 2 bottom rows of the **Loading Window**. Also, **Damage x Event** and **Accumulated Damage x Event** graphs are plotted to better display the results.

Drawing Elastoplastic Hysteresis Loops

To achieve reliable results when calculating fatigue damage under complex loading by the eN strain-life method, it is necessary to draw the correct elastoplastic hysteresis loops which act at the critical notch root.

1. In the Main Window, make sure that the **Extended Modeling option** is chosen using the **Tools | Options command**. This option is required to let **ViDa** calculate and plot hysteresis loops.
2. Choose the **Life | eN Method command**, and the Calculate Life (eN) window will appear.
3. Turn on the **Calculate Hysteresis Loops option** and check if the **Loop Corrections option** is checked as well.
4. Press the **OK button**.

The hysteresis loops for the loading history are calculated and plotted. The damage and remaining life time are almost instantly displayed on the 2 bottom rows of the **Loading Window**. Also, **Damage x Event** and **Accumulated Damage x Event** graphs are plotted to better display the results

Calculating Crack Growth

To quantify fatigue damage in cracked structures, **ViDa** calculates crack growth using any da/dN equation specified by the user, recognizing retardation and even crack arrest effects.

1. From the Main Window choose the **Life | Crack Growth command**, and the Crack Growth (da/dN) window will appear.
2. Type the **initial crack size** and the **specimen width**.
3. Choose **which da/dN equations you want to use** in the calculations and press the **OK button**.

The total and average crack growth are almost instantly displayed on the 2 bottom rows of the **Loading Window**.

Bidimensional Crack Growth

Surface cracks grow bidimensionally, i.e, both sideways and in depth. Certainly we cannot rely in pure unidimensional crack growth calculations. **ViDa** handles these bidimensional cracks and calculates crack growth in both directions, considering the changes in crack shape and retardation and crack arrest effects.

1. In the Main Window, make sure that the **Extended Modeling option** is chosen using the **Tools | Options command**. This option is required to let **ViDa** calculate bidimensional crack growth.
2. From the Main Window choose the **Life | Bidimensional Crack Growth command**, and the Bidimensional Crack Growth (da/dN and dc/dN) window will appear.
3. Choose the **type of the crack** in your specimen among **(Semi-)Elliptic**, **Corner**, **Internal** crack or even surface cracks on a cylinder wall under pressure.
4. Type the **initial crack size dimensions a** and **c** and the specimen **width** and its other dimensions.
5. Choose **which da/dN equations you want to use** in the calculations and press the **OK button**.

The total and average crack growth in both directions are almost instantly displayed on the 2 bottom rows of the **Loading Window**.

What's next ?

ViDa still has many other features: Rainflow counters, Tridimensional Stress handling, Rosettes, Stress Concentration Factor tables, and much more! To know more about **ViDa**, refer to 'Working with **ViDa** Windows' (see the Contents).

CHAPTER 2



Installing ViDa

It is quick and easy to install **ViDa** in your computer. The **ViDa CD-ROM** features autorun and a setup wizard, making the installation process easier than ever.

Contents

- Before You Begin

- Running ViDa Setup

 - Installing ViDa

 - Viewing the Book "Fatigue Design under Complex Loading"

- Registering ViDa

Before You Begin

Before you install **ViDa**, make sure your computer meets the following minimum requirements:

- 486DX/66 MHz or higher processor; Pentium or higher processor recommended
- Microsoft Windows 95 or later operating system or Microsoft Windows NT® operating system version 4.0 with Service Pack 3 or later
- 16 MB of RAM for Windows 95 or later (32 MB recommended); 24 MB for Windows NT 4.0 (32 MB recommended)
- Hard-disk space required for typical installation: 45 MB
- CD-ROM drive
- VGA or higher-resolution monitor; Super VGA recommended
- A mouse or other suitable pointing device

To run Setup, you need to have the **ViDa CD** or network access to **ViDa** files.

Running ViDa Setup

You can only install **ViDa** if you have **Windows 95** or later, or **Windows NT 4.0** or later.

Installing ViDa

- Insert the ViDa disc into the CD-ROM drive.
- If autorun doesn't start, double-click AUTORUN.EXE in Explorer.
- Click '**Install**' on your screen and follow the instructions.
- When you run ViDa for the first time, you'll see the screen below. Just click on the idiom of your choice and ViDa starts running (NOTE: you must register ViDa to make it fully functional).

If you have installation problems, please refer to the Troubleshooting section.

Once you have installed ViDa, read the License Agreement in the LICENSE.TXT file. You must accept the terms of the License Agreement before you can use this product.

The following files are installed in the application directory (**ViDa2002** by default):

ViDa.exe - the main program.

ViDa.ini - contains all user settings since the last time **ViDa** was loaded.

ViDa.mdb - **ViDa** database file.

ViDa.hlp and **ViDa.cnt** - **ViDa** help file and table of contents file.

Data directory - sub-directory containing examples of loading history files.

Media directory - sub-directory containing all sounds, videos and slides from ViDa.

Figures directory - sub-directory containing all KI, da/dN and Kt figures.

The remaining files are Windows resources files which are installed in the **Windows\System** directory.



Viewing the Textbook "Fatigue Design under Complex Loading"

The textbook "Fatigue Design under Complex Loading" can be found on your hard-disk after the **ViDa** installation.


- To access the Textbook "Fatigue Design under Complex Loading" from the **ViDa** program, click 'Multimedia' from the Help menu, and choose 'Slide Show'.

Registering ViDa

ViDa must be registered to become fully functional. If not registered, ViDa expires after 21 days.

To register ViDa :

- Once you have installed ViDa, click 'Register' from the Help menu.
- Send us by fax or e-mail the Software Code shown on the screen of each computer you've installed **ViDa**, and we'll send you the Liberation Key(s).
- In the 'Register' window, type in the Liberation Key, your Name, and click 'Register'. **ViDa** becomes fully functional after registering.

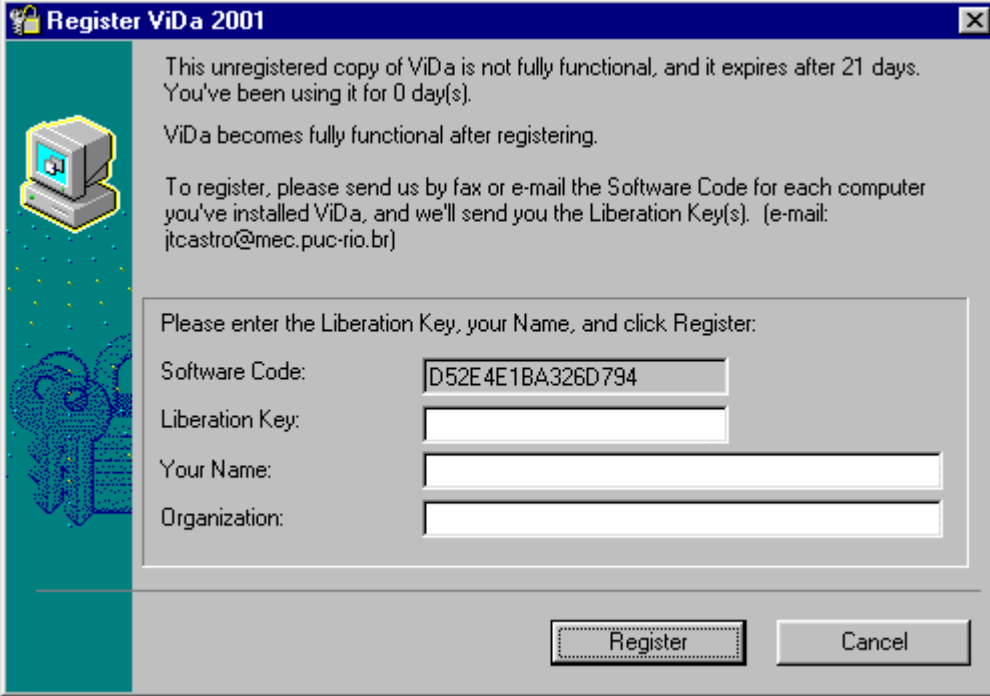

Register ViDa 2001

This unregistered copy of ViDa is not fully functional, and it expires after 21 days. You've been using it for 0 day(s).

ViDa becomes fully functional after registering.

To register, please send us by fax or e-mail the Software Code for each computer you've installed ViDa, and we'll send you the Liberation Key(s). (e-mail: jtcastro@mec.puc-rio.br)

Please enter the Liberation Key, your Name, and click Register:

Software Code:

Liberation Key:

Your Name:

Organization:

Read the REGISTER.TXT file for more information on registering.

CHAPTER 3



Using ViDa Windows

It is fast and easy to make calculations of fatigue damage with **ViDa**. **ViDa** has been developed by fatigue engineers to satisfy our design needs. Having a basic fatigue training, anyone can learn how to use its basic features in a glance.

Contents

- Main Window

- Handling all ViDa Graphs

- Standard Open/Save File Window

- Open CSV/Excel File Window

- Material Window

 - General Tab

 - Fatigue and Fracture Tab

 - Experimental Data Tab

 - Open Material window

 - Find Material Window

 - Browse Material Window

 - Calculate b and c for SN Window

- Equations Database Window

- Calculate Life (SN) Extended Window

 - Calculate Life (SN) Simplified Window

 - Calculate Effective Diameter Window

 - Calculate Typical Stress Concentration Factor (Kt) Window

 - Calculating Stored Stress Concentration Factors (Kt)

 - Calculate Notch Sensitivity (q) for Steels and Alumina Window

- Calculate Life of Welded Structures Window

- Calculate Life (eN) Extended Window

 - Calculate Life (eN) Simplified Window

- Crack Growth (da/dN) Extended Window

 - Typical da/dN Curves Window

 - Typical Stress Intensity Factor Windows

 - Crack Growth (da/dN) Simplified Window

- Bidimensional Crack Growth (da/dN and dc/dN) Window

- Calculation Logbook Window

- Calculate Equivalent Stress Window

 - Tridimensional Peaks and Valleys Tab

 - Rosette Peaks and Valleys Tab

- Smart Calculator Window


- Options Window

- Multimedia Window

- Tip of the Day Window

Main Window

The **ViDa** Main Window is where the user inputs the loading history (in the **Loading Windows**) and where the calculation results and plots are shown.

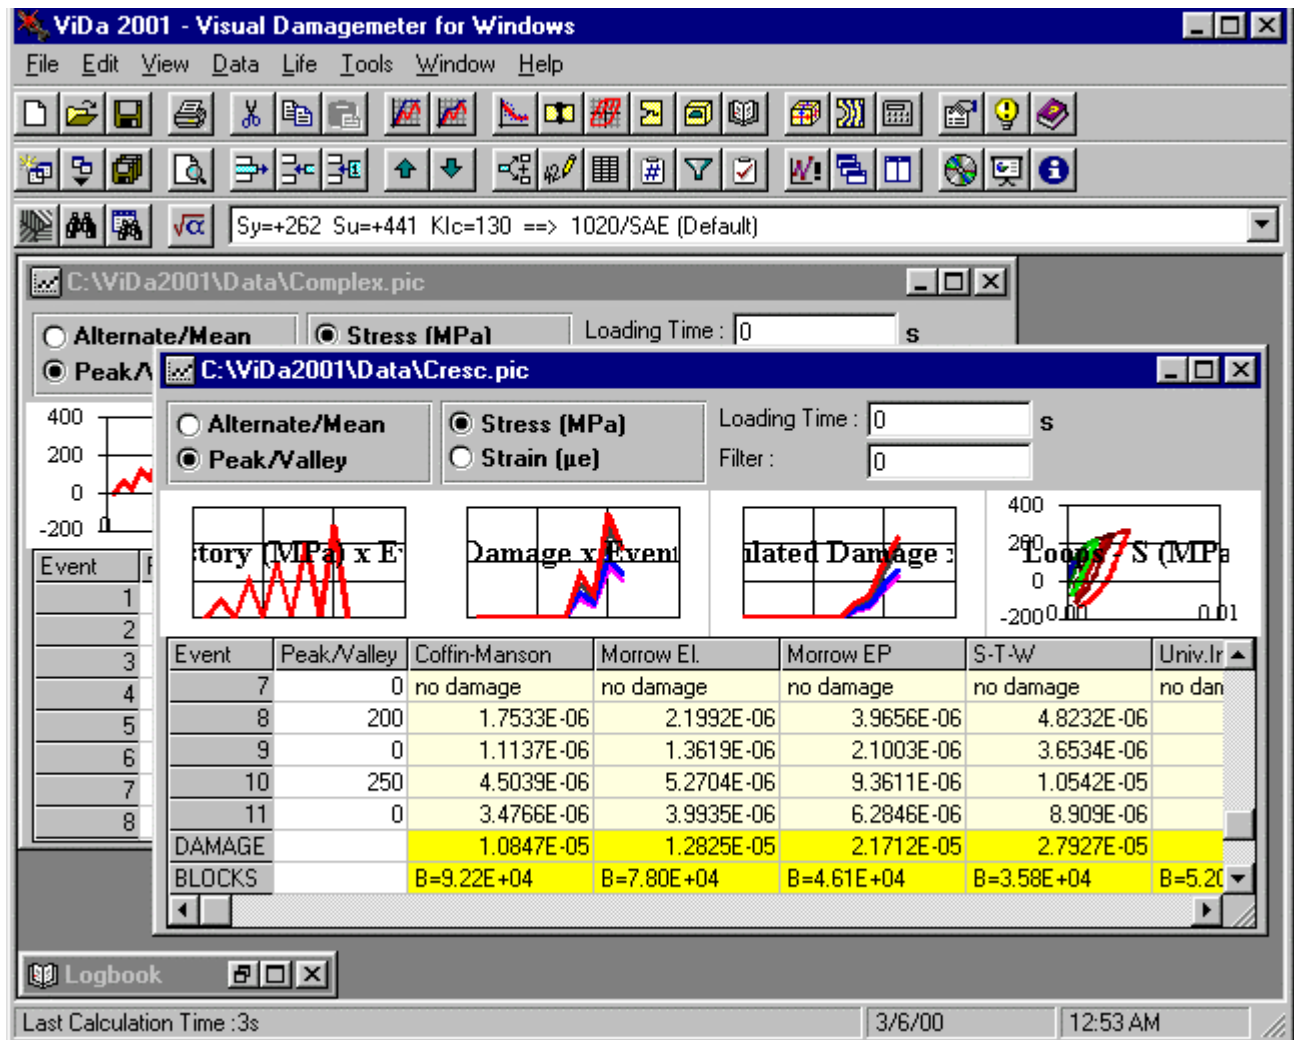

Standard Toolbar

Main Toolbar of the ViDa Main Window, with buttons for the most common commands. To see the ToolTip of each button, just point at it with the mouse and wait for 2 seconds.

Edit Toolbar

Toolbar with buttons for editing the current Loading Window. You can, for instance, Add or Delete one or more rows from the **Loading Window**. This Toolbar has essentially the same functionality as the **Edit menu**. To see the ToolTip of each button, just point at it with the mouse and wait for 2 seconds. You can hide this toolbar using the **View menu**.

Material Toolbar

Toolbar with shortcuts for the Material Window, Equation Window, and the Find Material and Browse Material Windows. This toolbar also contains a list with all available Materials (see below). To see the ToolTip of each button, just point at it with the mouse and wait for 2 seconds. You can hide this toolbar using the **View menu**.

Material List

Name of the material that will be used in the calculations (except for welded structures, which depend only on the IIW weld class). To change the material, use the Data | **Material command** or just click on the list box to change it.

Status Bar

Shows a Progress bar on how long it takes to perform a calculation. To stop a calculation in progress just press ESC.

Loading Window

One of the windows from the Main Window containing the loadings for each event, which can be either typed or loaded from a file. The first column shows the number of the event (each event can consist of many cycles). When the Alternate/Mean option is chosen at the **Sequencing Option**, the next 3 columns show the alternate and mean components of the loading and the number of $\frac{1}{2}$ cycles that it is applied. If the Peak/Valley option is chosen at the **Sequencing Option** then these 3 columns are replaced by a single one containing the peaks and valleys of the loading.

After the calculations, the table also shows the damage (or crack growth) associated with each model. The 2 bottom rows contain the total damage and the residual life of the specimen (considering that the loading history continues to be applied on the specimen at the same rate defined in '**Loading Time**'). For crack growth calculations, the 2 bottom rows show instead the average da/dN and the total crack growth.

In order to edit the datasheet, just click on the desired cell and start typing. Other keyboard commands are:

[Enter - move down one cell] [Arrows - move along cells] [Ctrl+Arrows - jumps to the beginning or end of table] [Shift+Arrows - selects group of cells, for copying, etc.] [Ctrl+dragging the mouse - copies current cell value to all your selection] [Shift+Delete - deletes the selected rows] [Shift+Ins - inserts rows].

Table Option

Option that defines if the values from the **Loading Window** represent stresses (in MPa or ksi) or strains (in microstrains).

Sequencing Option

Defines the data format from the **Loading Window**: either alternate/mean components or peak/valley counts. The loadings in the **Loading Window** are automatically converted from one to the other format.

Loading Time

Duration in seconds of ALL events in the **Loading Window**. It is used in the residual life estimate calculation.

Filter

Amplitude filter that can be automatically used when calculating **Rainflow** or **Sequential Rainflow** of a **Peak/Valley** history. Note that you need to enter its value **prior** to the Rainflow calculation. You can also Filter the history by using the **Edit | Filter** command. Set the Filter to zero in order not to filter the loading datasheet.

Loading Graph

Plots the loading history from the datasheet. To redraw it, right-click with the mouse and select Redraw. You can also paste almost any previous data copied in Windows. For instance, you can select a group of cells in Excel, copy them, right-click on this graph and select Paste. You can also copy the contents of the graph in order to paste in almost any other application. To expand or shrink the graph, just double-click on it. This graph is shown only if the **Show Loading Graph option** is checked on the Options window.

Loading Histogram Graph

Plots a 3D bar-chart of a loaded bidimensional histogram. Bidimensional histograms are loaded by opening a **CSV** (*.csv) or **Excel** (*.xls) file and turning on both the **Histogram** and the **Mean Interval** options. To expand or shrink the graph, just double-click on it. This graph is shown only if the **Show Loading Histogram Graph option** is checked on the Options window.

Damage Graph

For the SN, IIW and eN Methods shows the damage, and for the da/dN Method the crack growth associated with each event. To expand or shrink the graph, just double-click on it.

Accumulated Damage Curve / 2D Crack Graph

For the SN, IIW and eN Methods shows the accumulated damage, whereas for the da/dN shows the total crack growth (since the first event) after each event. For Bidimensional Crack Growth calculations, this graph shows one of the several plots that can be chosen by the user. To expand or shrink the graph, just double-click on it.

Hysteresis Loops / Elliptic Cracks Graph

Shows the elastoplastic hysteresis loops calculated by the eN Method, or one of the several plots that can be chosen by the user in the Bidimensional Crack Growth window. To expand or shrink the graph, just double-click on it. This graph is shown only if the **Show Hysteresis Loops Graph option** is checked on the Options window.

File Menu



File | New Command

Creates a new **Loading Window** for entering a new loading history.

File | Open Command

Opens a loading file. It can be:

- a file in which the loading is described by a series of alternate and mean components, and by the number of **half** cycles they act (*.alt).
- a file in which the loading is described by a series of peaks and valleys (*.pic).
- a comma separated value file (*.csv) or an Excel file (*.xls). First a Standard Load File window asks you to choose the CSV (or Excel) file and then the Open File window asks you to choose which data field you want to load to the **Loading Window**.
- output files from the Kyowa RHS-500A histogrammer (*.1*).
- A Tridimensional Peak/Valley (*.p3d) or Rosette Peak/Valley (*.ros) file. In this case, ViDa automatically goes to the Equivalent Stress Window and loads the chosen file.
- Calculation Logbook (*.log) files, containing the results of previous life calculations. These files are loaded to the Calculation Logbook Window.
- ADINA output files (*.port), loaded as a Peak/Valley history of the chosen node.

File | Close Command

Closes the current window. It is the same as clicking on the close button on the title bar of each window (the 'X' mark on the top right of any window).

File | Save Command

Saves the loading history (*.alt or *.pic) to a file.

File | Save As Command

Saves the loading history (*.alt or *.pic) as a new file.

File | Save All Command

Saves ALL open windows to their respective files.

File | Print Preview Command

Prints the current **Loading Window Datasheet**.

File | Print Command

Prints the current **Loading Window Datasheet**.

File | Export Command

Saves the loading history (*.alt or *.pic) as a CSV (Comma Separated Values, *.csv) file.

File | (Recent Files) Command

Opens one of the 4 most recent loading files that you've been working on. A list of these 4 files are shown on the menu, with their full path.

File | Exit Command

Asks if you want to save your changes from all modified **Loading Windows** and exits **ViDa**.

Edit Menu

Cut	
Copy	
Paste	
Insert Paste	
<hr/>	
Delete Rows	
Insert Rows	
Replicate Block	
Fill Cells...	
<hr/>	
Reset	
Number of Rows...	
Filter	
Check Peaks/Valleys	
<hr/>	
Convert	
Multiply by Constant...	
Add Constant...	

Edit | Cut Command

Copies to the Clipboard and clears the values of a group of cells from the **Loading Window**. The cells to be cut are defined by the highlighted cells in the table. To highlight them, just drag the mouse while pressing the left button, or press the SHIFT key while using the keyboard arrows. You can Paste these values, for instance, on an Excel worksheet.

Edit | Copy Command

Copies to the Clipboard the values of a group of cells from the **Loading Window**. The cells to be copied are defined by the highlighted cells in the table. To highlight them, just drag the mouse while pressing the left button, or press the SHIFT key while using the keyboard arrows. You can Paste these values, for instance, on an Excel worksheet.

Edit | Paste Command

Pastes the contents of the Clipboard on a group of cells of the **Loading Window**. The cells where the values will be pasted are defined by the highlighted cells in the table. To highlight them, just drag the mouse while pressing the left button, or press the SHIFT key while using the keyboard arrows. If the size of the copied selection was greater than the current selected cells, than only some of the Clipboard data is pasted. On the other hand, if only one cell is selected, then ALL Clipboard values are pasted, filling this cell and the ones to the right and below it. In this case, if the pasted values reach the bottom of the table, new rows are added accordingly to fit ALL the Clipboard data. These pasted values can be, for instance, cells copied from an Excel worksheet.

Edit | Insert Paste Command

Inserts new rows on the **Loading Window** and pastes the contents of the Clipboard on them. The rows are inserted above the first selected cell on the table. These pasted values can be, for instance, cells copied from an Excel worksheet.

Edit | Delete Rows Command

Deletes one or more rows from the **Loading Window**. The rows to be deleted are defined by the highlighted cells in the table. To highlight them, just drag the mouse while pressing the left button.

Edit | Insert Rows Command

Inserts one or more rows to the **Loading Window**. The number of rows to be added is defined by the highlighted cells in the table. To highlight them, just drag the mouse while pressing the left button.

Edit | Replicate Block Command

Copies a group of rows of the **Loading Window** as many times as desired. Use this command to enter repetitive blocks in your history. First select the rows you want to copy by dragging the mouse on them while clicking the left button. Then click on this command and enter the number of times you want to copy this block. The copied blocks will be inserted below the last selected row.

Edit | Fill Cells Command

Sets the value of a group of cells of the **Loading Window**. First select the rows you want to set by dragging the mouse on them while clicking the left button. Then click on this command and enter the value you want to set for them.

Edit | Reset Command

Deletes all rows and data from the current **Loading Window**.

Edit | Number of Rows Command

Asks the user to enter the number of rows of the current **Loading Window**. If the users enter a smaller number of rows than the current one, the corresponding rows are deleted. If it's greater, the extra rows are added on the bottom of the table.

Edit | Filter Command

Filters a peak/valley or alternate/mean history from the **Loading Window** within a fixed amplitude, previously defined in the **Filter** text box on the **Loading Window**.

Edit | Check Peaks/Valleys Command

Checks the coherence of a peak/valley history from the **Loading Window**, eliminating the incoherent events.

Edit | Convert | MPa->ksi Command

Converts ALL the values of the Alternate and Mean (or Peak/Valley) columns of the **Loading Window** from MPa (mega Pascals) to kpsi (kilo pounds per square inch) by multiplying them by 0.145. Note that this command only changes numerically the values of the **Loading Window**. To use English instead of SI units for the whole program, use the **Tools | Options command**.

Edit | Convert | ksi->MPa Command

Converts ALL the values of the Alternate and Mean (or Peak/Valley) columns of the **Loading Window** from kpsi (kilo pounds per square inch) to MPa (mega Pascals) by dividing them by 0.145. Note that this command only changes numerically the values of the **Loading Window**. To use SI instead of English units for the whole program, use the **Tools | Options command**.

Edit | Convert | Alt/Med -> Max/Min Command

Converts ALL the values of the Alternate and Mean columns of the **Loading Window** to a sequence of Maximum and Minimum values, where Alternate=(Maximum-Minimum)/2 and Mean=(Maximum+Minimum)/2.

Edit | Convert | Max/Min -> Alt/Med Command

Converts ALL the values of a Maximum and Minimum history of the **Loading Window** to a sequence of Alternate and Mean components, where Alternate=(Maximum-Minimum)/2 and Mean=(Maximum+Minimum)/2.


Edit | Multiply by Constant Command

Multiplies ALL the values of the Alternate and Mean (or Peak/Valley) columns of the **Loading Window** by a constant value. An input window will ask the user to enter this constant value.

Edit | Add Constant Command

Adds a constant value to ALL the values of the Alternate and Mean (or Peak/Valley) columns of the **Loading Window**. An input window will ask the user to enter this constant value.

View Menu

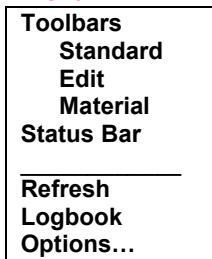

View | Toolbars | Standard Command

Shows/hides the **Standard toolbar**.

View | Toolbars | Edit Command

Shows/hides the **Edit toolbar**.

View | Toolbars | Material Command

Shows/hides the **Material toolbar**.

View | Status Bar Command

Shows/hides the **Status Bar**.

View | Refresh Command

Refreshes the active window, redrawing its graphs, tables, and other components.

View | Logbook Command

Shows the Calculation Logbook window, which keeps track of all previous calculations storing the total damage and residual life of the specimen for each SN, IIW and eN calculation, or the average da/dN and the total crack growth for each crack growth calculation. By filling out the '**Calculation Title**' field in the calculation windows it is possible to easily compare the results of different calculations in the Calculation Logbook window. This command has the same functionality as the **Life | Logbook command**.

View | Options Command

Shows the Options window, where the user can set the ViDa general options regarding Editing of the Loading histories, the Modeling option used for all calculations (Extended or Simplified), the Units used (SI or English) and the idiom used on the user interface (among English, Portuguese, French, German, Italian, Spanish, and more). This command has the same functionality as the **Tools | Options command**.

Data Menu

Material
Equation
<hr/>
Find Material...
Browse Material...

Data | Material Command

Goes to the Material window to select a different material for the calculations.

Data | Equation

Goes to the Equation Database window, where you can work with:

- stress concentration factor (Kt) to add, delete or change **Kt** equations that will be available for future SN, IIW and eN calculations.
- stress intensity factor (KI) database to add, delete or change **KI** equations that will be available for future da/dN and Bidimensional Crack Growth calculations.
- crack growth equations (da/dN) database to add, delete or change da/dN equations that will be available for future da/dN calculations.

Data | Find Material Command

Goes to the Find Material window, where the user can search for materials by their type (steels, alumina, etc.) or by any property ranges (e.g. materials with **Su** between 600 and 800 MPa) or combinations of them. You can also sort the matching materials by any property.

Data | Browse Material Command

Goes to the Browse Material window, where the user can browse all materials from the database, showing all their properties. You can rearrange the columns by dragging the column title with the mouse and dropping it over the desired position. ViDa automatically sorts the table by the first column, so if you want to order the materials e.g. by their **Su**, just drag and drop it on the first column. You can also resize the columns, and all your layout changes are saved. So, just customize your table, start browsing, and double-click on the Materials table on the name of the material you want to load to the Material window.

Life Menu

Rainflow
Sequential Rainflow
<hr/>
SN Method
Welded Structures
eN Method
Crack Growth
Bidimensional Crack Growth
<hr/>
Logbook

Life | Rainflow Command

Calculates the Alternate and Mean components of a **Peak/Valley** history using a Rainflow counter and the **amplitude Filter value**.

Life | Sequential Rainflow Command

Calculates the Alternate and Mean components of a **Peak/Valley** history using a Sequential Rainflow counter and the **amplitude Filter value**. The Sequential Rainflow is a variation of the Rainflow that preserves as much as possible the loading order, which is very useful with the eN method and crack growth calculations.

Life | SN Method Command

Goes to the Calculate Life (SN) window for damage calculation using the current **material** and **Loading Window** load values.

Life | IIW Method (welded structures) Command

Goes to the IIW window for damage calculation of welded structures using the current **Loading Window** values. Note that the material properties will not be used in this calculation since it is sufficient to know the class of the weld.

Life | eN Method Command

Goes to the Calculate Life (eN) window for damage calculation using the current **material** and **Loading Window** load values.

Life | da/dN Method Command

Goes to the da/dN Method window for unidimensional crack growth calculation using the current **material** and **Loading Window** values.

Life | Bidimensional Crack Growth Command

Goes to the Bidimensional Crack Growth window for (elliptical) crack growth calculation using the current **material** and **Loading Window** values.

Life | Logbook Command

Shows the Calculation Logbook window, which keeps track of all previous calculations storing the total damage and residual life of the specimen for each SN, IIW and eN calculation, or the average da/dN and the total crack growth for each crack growth calculation. By filling out the '**Calculation Title**' field in the calculation windows it is possible to easily compare the results of different calculations in the Calculation Logbook window.

Tools Menu

Equivalent Stress Stress Concentration Factor (Kt) Notch Sensitivity (q) Smart Calculator
Options...

Tools | Equivalent Stress Command

Goes to the Rosette and 3D Equivalent Stress window for converting 3D loadings or Rosette measurements into 1D components using Mises or Tresca criteria.

Tools | Stress Concentration Factor (Kt) Command

Goes to the Calculate Stress Concentration Factor (Kt) window, where **Kt** and also the notch sensitivity **q** (for steels or alumina) can be calculated for typical notched and filleted bars and shafts, given its dimensions.

Tools | Notch Sensitivity (q) Command

Goes to the Calculate Notch Sensitivity (q) for Steels and Alumina window, where the notch sensitivity can be calculated for steels or alumina given **Su** and the notch radius.

Tools | Smart Calculator Command

Shows the Smart Calculator window, where the user can use an alphanumeric calculator to compute any formula using the material properties and user-defined variables. Some basic Mechanics of Solids equations are also embedded in the calculator and computed results can be used to multiply the loadings in the **Loading Window**.

Tools | Options Command

Shows the Options window, where the user can set the ViDa general options regarding Editing of the Loading histories, the Modeling option used for all calculations (Extended or Simplified), the Units used (SI or English) and the idiom used on the user interface (among English, Portuguese, French, German, Italian, Spanish, and more).

Help Menu

Contents Search For Help On... Multimedia
Register...
Tip of the Day...
About ViDa...

Help | Contents Command

Loads the **ViDa Help file** and shows its Contents.

Help | Search For Help On Command

Loads the **ViDa Help file** and shows its Search engine.

Help | Multimedia Command

Loads the **Multimedia window**, with links to the Textbook "Fatigue Design under Complex Loading", Published Papers, and video/animations.

Help | Register Command

Loads the **ViDa Registration window**. This window shows the Software Code associated to your computer, which you'll need to inform in order to receive the Liberation Key. After receiving your key, you should type in the Liberation Key, your Name, and click 'Register'. ViDa becomes fully functional after registering.

Help | Tip of the Day Command

Loads the **Tip of the Day window**, which shows tips on working with ViDa. This window is loaded every time you run ViDa if the **Show Tips at Startup option** is selected in the **Options window**.

Help | About ViDa Command


Shows the **About window** with the credits and version of the program.

Handling all ViDa Graphs

With these commands you can work with any graph shown in ViDa. This applies to the graphs on the Loading windows, on the Material window, on the SN, eN and da/dN calculation windows, on the Equivalent Stress window, and on the Calculate Kt and q windows.

1. You can expand or shrink almost any graph by **double-clicking** on it.
2. You can select individual points of the graph by clicking the mouse on it. The values of its coordinates will automatically appear on the **Main Window Status Bar**, as well as on the **graph ToolTip** (the little yellow box that appears by the mouse cursor after 2 seconds).
3. For **3D graphs**, you can rotate the angle of view by pressing the **CTRL key** while moving the mouse.
4. If you **right-click** with the mouse on any graph, a 'pop-up' menu appears with some of these commands (depending on which graph):

Graphs Pop-Up Menu

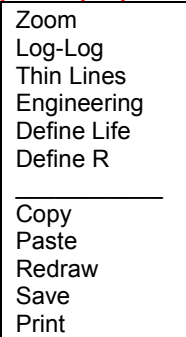

Zoom Command

Lets the user set the minimum and maximum values of the y-axis of the **graph or a range of points to be plotted**. After setting the Zoom, a check mark is placed on the Pop-Up menu. To return the Zoom settings to the original values, just click again on this command to uncheck it.

Log-Log Command

If this option is checked, the graph is plotted in Log-Log format. Uncheck it to plot in Linear-Linear format.

Thin Lines Command

Toggles the line thickness of the **Hysteresis Loops / Elliptic Cracks graph** between thick and thin. Setting thin lines is especially useful when too many hysteresis loops are plotted in the same graph.

Engineering Command

Plots the **Engineering** (instead of **True**) stress-strain curves in the **Hardening Curve Graph** of the **Material window**. If you uncheck this option, the True stress-strain curve is plotted instead.

Define Life (for SaSm Graph) Command

Redraws the **SaSm diagram** of the **SN Method window** for a user defined life (in number of cycles) for reference purpose. The default life for plotting the **SaSm diagram** is 1,000,000 cycles.

Define R (Kmin/Kmax) Command

Plots the da/dN equation shown in the **da/dN Formula field** for different values of **R=Kmin/Kmax**. The user is asked to input the range of **R** values to be considered and the number of curves to be plotted. This command is useful to visualize the influence of **R** (and Kmin and Kmax) in the da/dN equations that include these variables.

Copy Command

Copies ALL points from the graph to the Clipboard. You can then paste it to another graph, paste into any other application, or even paste it directly to an Excel worksheet. If you paste it to an imaging software (like Paint), you'll be get the picture image of the graph.

Paste Command

Pastes the data from the Clipboard into the current graph. You can paste a group of cells copied from any ViDa Loading window or from an Excel worksheet. If more than 1 column was copied, then the graph pairs consecutive columns to plot one against another. So, if you paste 5 columns into the graph, columns 1 and 2 will determine a set of points (coordinates X and Y respectively), 3 and 4 will form another, and column 5 will be ignored (since it can't be paired). If you paste only 1 column, its values are plotted in the Y axis (and the X axis will contain the row number of each point).

Redraw Command

Redraws the graph updating any changes from the user. **Tip:** for the **da/dN graph** in the **Crack Growth window**, you can easily tune in the coefficients of the **da/dN Formula** by interactively editing the **Variables Table** and using this **Redraw command** until the curve is visually compatible with the Paris and Elber curves in the **da/dN graph**.

Save Command


Saves the **graph** data as a Comma Separated Value (CSV). The first row contains the legend titles of each set in the graph and the following rows contain the respective data for each curve.

Print Command

Prints the **graph**.

Standard Open/Save File Window

This is the standard interface window for all Open and Save File commands from **ViDa**.

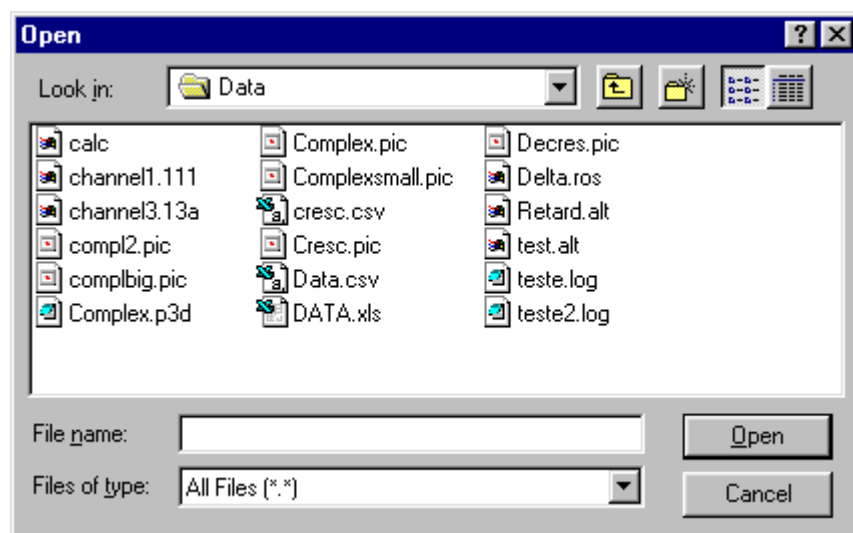

File name

Name of the file to be read.

Found Files

Files found in the current directory (defined in '**Folders**') of the extension chosen in '**List files of type**'. Just double-click on the desired file to choose it.

Files of type

List with the desired file extensions.

Look in

Shows the current directory.

OK Button


Confirms loading/saving the file.

Cancel Button

Cancels loading/saving and returns to the previous window.

Open CSV/Excel File Window

This window shows the fields from the chosen comma separated value (CSV) file or from an Excel file (*.xls), chosen from a Standard Load File window. The user is then asked to choose which field he wants to load to the **Loading Window** and allows him to enter an optional **conversion factor** to multiply these values. You can also Amplitude-Filter these converted values, and even choose to load just a histogram of the file, useful for very large loading histories.

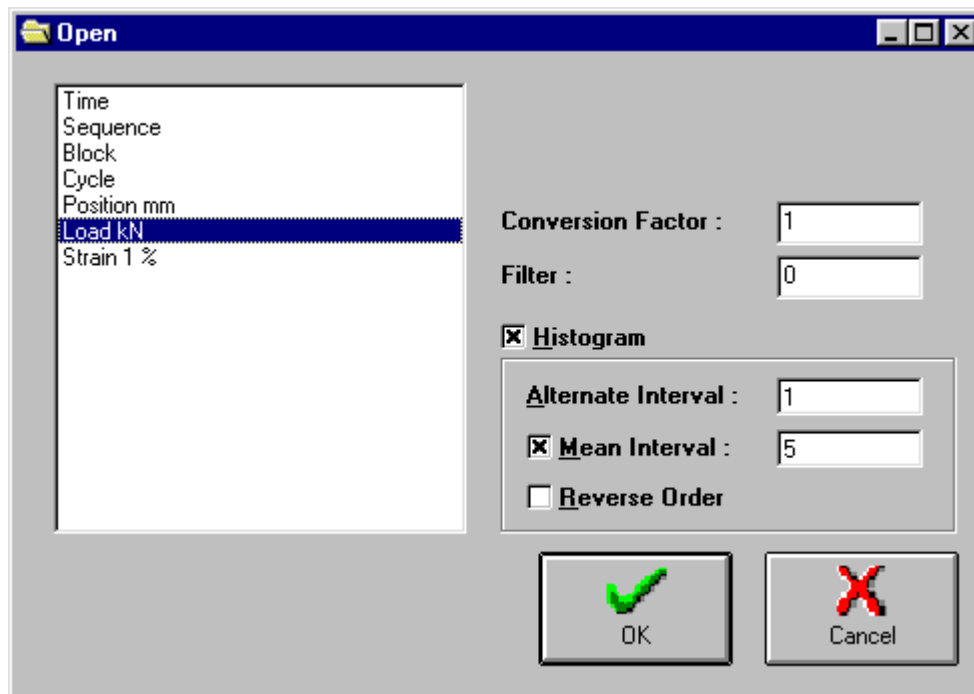

Fields List

Fields from the chosen comma separated value (CSV) or Excel (*.xls) file. Just click on the desired field and press **OK** to load it in the **Loading Window**.

Conversion Factor

Optional conversion factor to multiply the loaded values. For instance if your CSV field contains forces and you know the cross sectional area, you can type its inverse value in the **Conversion Factor** and then obtain stresses in your **Loading Window** (be careful with the units!).

Filter

Optional amplitude filter that can be used to filter the loading history. **Useful for files with long histories.**

Histogram Option

Option to load just a histogram of the file being read. **Useful for files with long histories.**

Alternate Interval

Discretization interval used on the Histogram of the Alternate components of the loading history being read.

Mean Interval

Discretization interval used on the Histogram of the Mean components of the loading history being read. If this option is checked, a bidimensional histogram counting is performed on the Alternate and Mean components. If not checked, all Mean components are set to zero, and only the Alternate components are evaluated.

OK Button

Reads the selected field on the **Fields list** and returns to the Main Window.

Cancel Button

Cancels the loading of the file and returns to the Main Window.

Material Window

In the Material window it is possible to manipulate the Materials database, **adding, deleting, changing** or just **selecting a specific material**. You can alter the material properties by clicking on the respective field and entering the new data. Note that this new value will only be effective after you save it using the **Material | Save command**.

You can also store experimental points for the currently selected material. SN, eN and da/dN (Paris or Elber) curves can be **automatically fitted** to the experimental points, and the calculated properties data can be used in future life calculations.

Values in black represent measured properties, while the values in red reflect estimated properties (which are less reliable). To toggle the black/red colors, press the space bar while typing on the desired field (don't forget to **save the changes** after).

General Tab

Material (Local - vida.mdb)

File Edit Table

Name: 1020/SAE (Default)

General Fatigue and Fracture Experimental Data

Material: Steel Code: 1 Memo:

Source: SAE

Composition: C0.18-0.23;Mn0.3-0.6;P0.04

Condition: HR Plate L

Cost Range: 0 0 \$/kg

T operating: 21 °C

T melting: 1510 °C

Thermal Exp: 11.5 µe/°C

Spec. weight: 76.5 kN/m³

Charpy: 1.30E+02 J

Poisson: 0.292

E (Young): 203 GPa

BHn: 108 MPa

Su: 441 MPa

Sy: 262 MPa

Sy': 241 MPa

σ_f: 710 MPa

ε_f: 0.96

R.A.: 62 %

Hardening

n: 1.90E-01

k: 7.38E+02 MPa

n': 1.80E-01

k': 7.72E+02 MPa

True Hardening Curves

Sigma (MPa)

e (m/m)

Legend:

- Cyclic (until Sy)
- Cyclic (until rupture)
- Tension Test (until Sy)
- Tension Test (until rupture)

Name

Name and comments to tell apart similar materials (each material name+comment must be unique).

Material

Material type (steel, aluminum, etc.).

Code

Sequencing code for the material (automatically administered by ViDa).

Source

Reference source for this material data.

Composition

Chemical composition of the material.

Condition

Consists of 2 fields: **(i)** the mechanical treatment applied to the material and **(ii)** the grain direction resulting from the rolling direction (L = longitudinal, T = transversal, W = width).

Cost Range

Minimum and maximum market prices for this material.

T Operating

Operating Temperature, in which the properties were measured.

T Melting

Melting Temperature of the material.

Thermal Expansion

Thermal Expansion Coefficient of the material.

Specific Weight

Specific weight of the material.

Charpy

Amount of energy absorbed by the Charpy specimen.

Poisson

Poisson coefficient.

E (Young)

Young modulus (be careful with the units!).

BHn

Brinnell Hardness.

Su

Ultimate Strength.

Sy

Yielding Strength.

Sy'

Cyclical Yielding Strength (used in hysteresis loops).

Sigma_f

True Ultimate Strength.

epsilon_f

True Ultimate Elongation.

R.A.

Reduction in cross sectional area after failure (in %).

n, n'

Hardening exponents of the monotonic and cyclic curves (using Ramberg-Osgood equation).

k

Hardening coefficient of the monotonic curve (using Ramberg-Osgood equation).

k'

Hardening coefficient of the cyclical curve (using Ramberg-Osgood equation).

Memo

Additional information about the material.


Estimates Help Button

Shows (just for reference) a window with all the equations used by the **Calculate | Estimate using Nominal Values** command to estimate properties from Nominal Values. These estimates are used by the **ViDa** program to try to fill out all the material properties that have not been measured or are not available.

Hardening Curve

Shows the monotonic (tension test) and cyclic true hardening curves of the material. Note the change in color marking on the graph the values of **Sy** and **Sy'**. The graph is only updated after the **property changes are saved**. To expand or shrink the graph, just double-click on it.

Fatigue and Fracture Tab

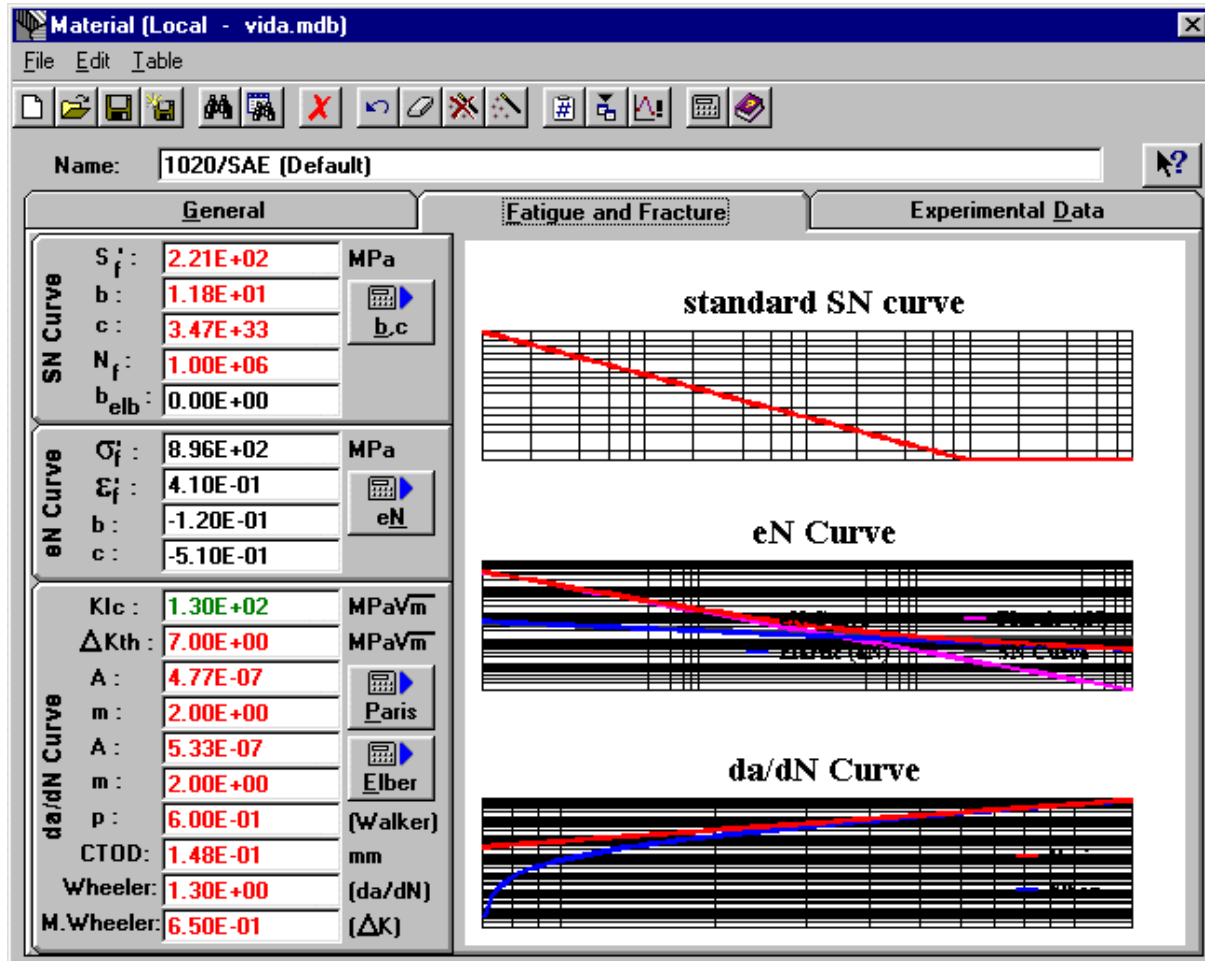

Standard Estimated SN Curve

Shows the estimated SN curve of the material (this plot ignores the values of the endurance limit modifiers **ka**, **kb**, **kc**, **kd** and **ke**). The graph is only updated after the **property changes are saved**. To expand or shrink the graph, just double-click on it.

S_f

Uncorrected Endurance Limit (set it to zero if you don't want any elbow in the SN Curve).

b (SN)

Exponent of the SN Curve ($N \cdot S^b = c$).

c (SN)

Coefficient of the SN Curve ($N \cdot S^b = c$).

N_f

Location of the SN curve elbow.

b_{elb}

Value of the b exponent of the SN Curve after the elbow (set $b_{elb}=0$ to ignore this option).

Calculate b , c Button | Experimental Points Command

Loads the values of the parameters **b** and **c** of the SN curve $N \cdot S^b = c$ from the Experimental Points Window directly into the current window.

Calculate b , c Button | From eN Curve Elastic Component Command

Calculates the constants of the SN Curve ($N \cdot S^b = c$) by making it coincident with the elastic part of the eN Curve (defined by the eN Curve parameters **Sigmaf** and **b**). This estimate is based on the principle that both SN and eN methods should predict the same damage for high cycle calculations. After the calculation the estimated **b** and **c** values are color coded in red.

Calculate b, c Button | For Steels and Alumina Command

Activates the Calculate b and c for SN window that lets the user calculate the constants of the SN curve ($N \cdot S^b = c$) from the material properties **Su** and **Sf**. After the calculation the estimated **b** and **c** values are color coded in red.

eN Curve

Shows the eN curve of the material and also its elastic and plastic components separately. The SN curve is also plotted in order to make a comparison with the elastic component of the eN curve. The graph is only updated after the **property changes are saved**. To expand or shrink the graph, just double-click on it.

Sigmaf'

Elastic coefficient used in Coffin-Manson's eN Curve equation ($de/2 = \text{Sigmaf}'/E \cdot (2N)^b + \text{epsilonf}' \cdot (2N)^c$).

epsilonf'

Plastic coefficient used in Coffin-Manson's eN Curve equation ($de/2 = \text{Sigmaf}'/E \cdot (2N)^b + \text{epsilonf}' \cdot (2N)^c$).

b (eN)

Elastic exponent used in Coffin-Manson's eN Curve equation ($de/2 = \text{Sigmaf}'/E \cdot (2N)^b + \text{epsilonf}' \cdot (2N)^c$).

c (eN)

Plastic exponent used in Coffin-Manson's eN Curve equation ($de/2 = \text{Sigmaf}'/E \cdot (2N)^b + \text{epsilonf}' \cdot (2N)^c$).

Calculate b, c Button | Experimental Points Command

Loads the values of the parameters **b**, **c**, **Sigmaf'** and **epsilonf'** of the eN curve $de/2 = \text{Sigmaf}'/E \cdot (2N)^b + \text{epsilonf}' \cdot (2N)^c$ from the Experimental Points tab directly into the current tab.

da/dN Curve

Shows the da/dN curves of the material using Paris and Elber laws. Note that the value of **deltaKth** substantially affects the Elber law curve. The graph is only updated after the **property changes are saved**. To expand or shrink the graph, just double-click on it.

KIc

Critical Stress Intensity Factor (fracture toughness).

deltaKth (dKth)

Threshold Stress Intensity Factor (if $\Delta K < \Delta K_{th}$ the crack does not propagate).

A (Paris)

Coefficient A used in Paris law ($da/dN = A \cdot \Delta K^m$).

m (Paris)

Exponent m used in Paris law ($da/dN = A \cdot \Delta K^m$).

A (Elber)

Coefficient A used in Elber law ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m$).

m (Elber)

Exponent m used in Elber law ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m$).

p (Walker)

Exponent p used in Walker law $da/dN = A \cdot (\Delta K)^m / (1-R)^p$ and also in the Modified Walker law $da/dN = A \cdot (\Delta K - \Delta K_{th})^m / (1-R)^p$.

CTOD

Value of the critical CTOD (Crack Tip Opening Displacement).

Calculate Paris Button | Experimental Points Command

Loads the values of the **A** and **m** coefficients of the Paris da/dN equation $da/dN = A \cdot \Delta K^m$ from the Experimental Points tab in the Materials Database directly into the current window.

Calculate Paris Button | From eN Curve Command

Calculates the constants of the Paris law ($da/dN = A \cdot \Delta K^m$) from the eN Curve parameters by using the assumption that crack growth is caused by the successive breaking of tiny eN specimens (see the Textbook "Fatigue Design under Complex Loading"). After the calculation the estimated **A** and **m** values are color coded in red.


Calculate Paris Button | Rolfe-Barson Command

Sets the constants of the Paris law ($da/dN = A \cdot \Delta K^m$) depending on the microstructure of the material. These values are tabulated referencing Rolfe-Barson rough estimates. After the calculation the estimated **A** and **m** values are color coded in red.

Calculate Elber Button | Experimental Points Command

Loads the values of the **A** and **m** coefficients of the Elber da/dN equation $da/dN = A \cdot (\Delta K - \Delta K_{th})^m$ from the Experimental Points tab in the Materials Database directly into the current window.

Experimental Data Tab

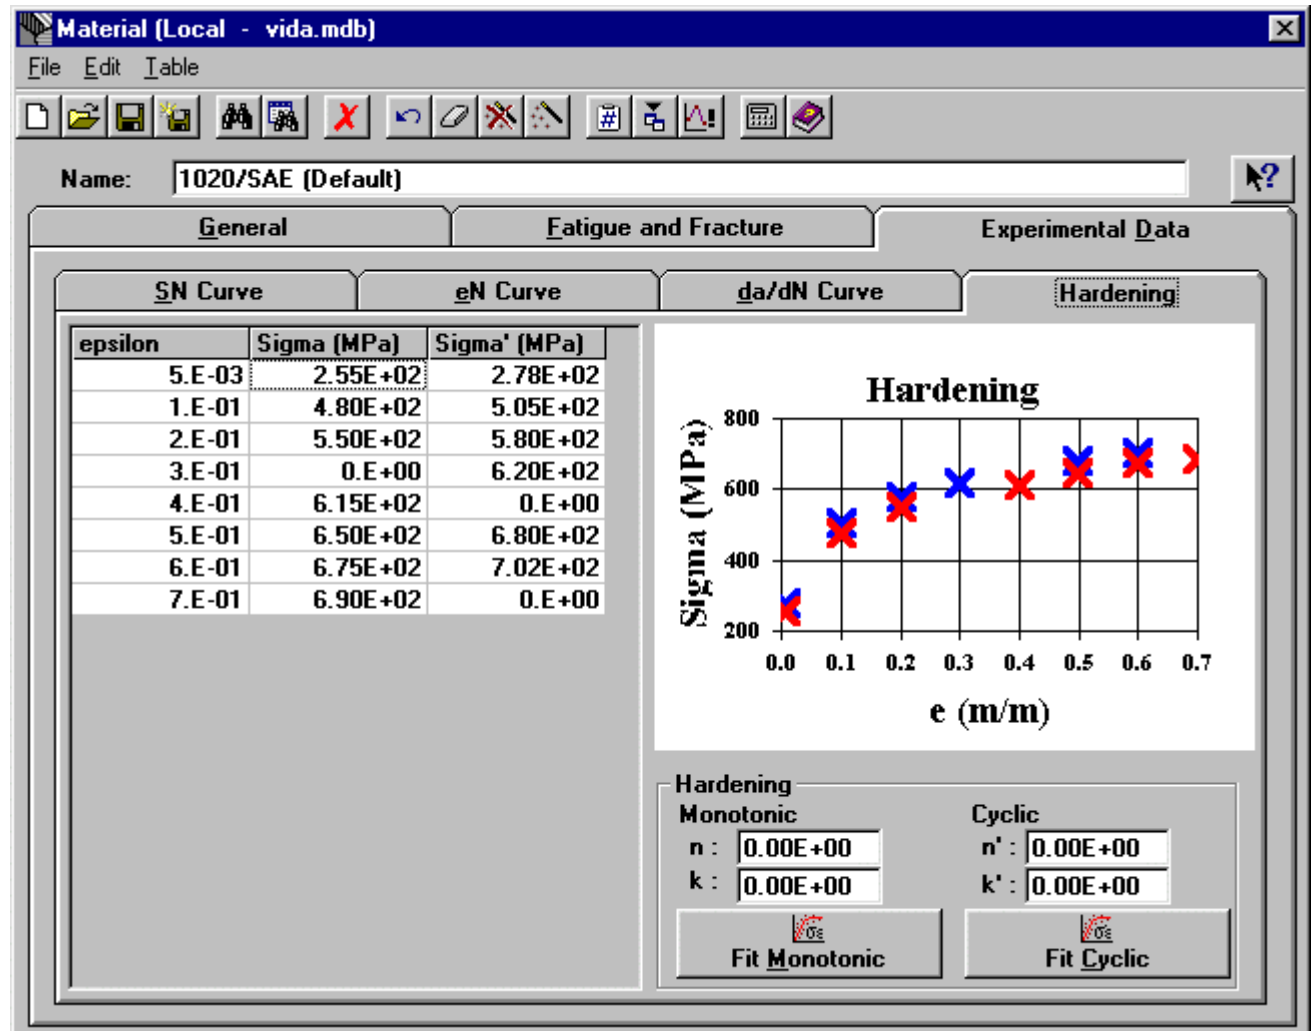

Experimental Points Tables

Tables where the user can input experimental points.

SN, eN, da/dN Tabs

Switches tab to the SN, eN or da/dN curve experimental points table.

Hardening Tab

Switches tab to the hardening curves experimental points table.

SN Graph

Log(S) x Log(N) curve graph, plotting the experimental points and/or the fitted curves from the **calculated properties data**. Note that the graph is only updated after you save the data using the **File | Save** command.

eN Graph

Log(e) x Log(N) curve graph, plotting the experimental points and/or the fitted curves from the **calculated properties data**. Note that the graph is only updated after you save the data using the **File | Save** command.

da/dN Graph

Log(da/dN) x Log(deltaK) curve graph, plotting the experimental points and/or the fitted curves from the **calculated properties data**. Note that the graph is only updated after you save the data using the **File | Save** command.

Hardening Graph

Stress-strain curve graph, plotting the experimental points and/or the fitted curves from the **calculated properties data**. Note that the graph is only updated after you save the data using the **File | Save** command.

Calculated Properties Data

Properties calculated from the curve fittings from the experimental points.

Fit SN Button

Fits the SN experimental data points (using a least squares method) for a Wohler equation ($N \cdot S^b = c$). The **b** and **c** constants are calculated and the fitted curve is plotted on the **SN graph**. To use these calculated **b** and **c** in life calculations, you need to copy them to their respective field in the Fatigue and Fracture tab and use **File | Save**.

Fit eN Button

Fits the eN experimental data points (using a least squares method) for a Coffin-Manson equation. The 4 eN curve constants are calculated and the fitted curve is plotted on the **eN graph** (the Young modulus E comes from the monotonic data). Note that since there are 4 constants in the eN curve (instead of only 2) you need data with not only the number of reversions (2N) and the strain variation ($d\epsilon/2$) but also with the corresponding stress variation $dS/2$. To use these calculated constants in life calculations, you need to copy them to their respective field in the Fatigue and Fracture tab and use the **File | Save command**.

Fit Paris Button

Fits the da/dN experimental data points (using a least squares method) for the Paris law ($da/dN = A \cdot \Delta K^m$). The **A** and **m** constants are calculated and the fitted curve is plotted on the **da/dN graph**. To use these calculated **A** and **m** in life calculations, you need to copy them to their respective field in the Fatigue and Fracture tab and use **File | Save**.

Fit Elber Button

Fits the da/dN experimental data points (using a least squares method) for the Elber law ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m$). The user then inputs the value of ΔK_{th} that will be used in the curve fitting (the default value is the one from the Material window). The **A** and **m** constants are calculated and the fitted curve is plotted on the **da/dN graph**. To use these calculated **A** and **m** in life calculations, you need to copy them to their respective field in the Fatigue and Fracture tab and use the **File | Save command**.

Fit Monotonic/Cyclic Button

Fits the hardening experimental data points (using a least squares method) for a Ramberg-Osgood equation. To use these calculated **n**, **n'**, **k** and **k'** in life calculations, you need to copy them to their respective field in the General tab and use the **File | Save command**.

File Menu

Open...	
Save	
Save as New	
<hr/>	
Find...	
Browse...	
<hr/>	
Delete	
<hr/>	
Exit	

File | Open Command

Goes to the Open Material window, which shows a list of all available materials. Just click on the name of the desired material to load it.

File | Save Command

Saves all the material properties to the database and updates all 7 graphs in the Material window. The black-red (measured-estimated properties) color coding is also saved in the database. It also saves the experimental points and calculated properties data for this material in the database. Note that you need to save the changed properties for them to become effective and available for further calculations.

File | Save as New Command

Creates a new material in the database with all the current properties and experimental data, and updates the 7 graphs in the Material window. Note that each material must have an unique name, so you must change the **Name field** before saving as new.

File | Find Command

Goes to the Find Material window, where the user can search for materials by their type (steels, alumina, etc.) or by any property ranges (e.g. materials with **Su** between 600 and 800 MPa) or combinations of them. You can also sort the matching materials by any property.

File | Browse Command

Goes to the Browse Material window, where the user can browse all materials from the database, showing all their properties. You can rearrange the columns by dragging the column title with the mouse and dropping it over the desired position. ViDa automatically sorts the table by the first column, so if you want to order the materials e.g. by

their Su, just drag and drop it on the first column. You can also resize the columns, and all your layout changes are saved. So, just customize your table, start browsing, and double-click on the Materials table on the name of the material you want to load to the Material window.

File | Delete Command

Deletes the current material permanently from the database. The default material is then automatically loaded.

File | Exit Command

Exits the Material Window and returns to the Main Window. Note that you need to **save the changed properties** for them to become effective for further calculations.

Edit Menu

Clear All Properties
Clear Estimated Values
Estimate using Nominal Values

Edit | Clear All Properties Command

Sets ALL the material properties to zero. Note that the changes are only effective after you click on **File | Save** or **File | Save as New** commands. Use the **Edit | Clear All Properties command** and then **File | Save As New** to create a new material from scratch.

Edit | Clear Estimated Values Command

Sets the estimated (color coded in red) material properties to zero. Note that the changes are only effective after you click on **File | Save** or **File | Save as New** commands. Use this command to discard the estimated (non reliable) properties, either to estimate them again by using the **Edit | Estimate using Nominal Values command** or to replace them with measured properties. Note that to change the color coding (black-red) you need to press the space bar on the desired property field.

Edit | Estimate using Nominal Values Command

Estimates the currently null material properties. To see the estimating formulas that **ViDa** uses click on the **Estimates button**. All estimated properties are color coded in red.

Table Menu

Number of Rows...
Save As...
Import...
MPa->ksi
ksi->MPa

Table | Number of Rows Command

Asks the user to enter the number of rows of the selected experimental data table (SN, eN or da/dN). If the users enter a smaller number of rows than the current one, the corresponding rows are deleted. If it's greater, the extra rows are added on the bottom of the table.

Table | Save As Command

Saves the selected experimental data table (SN, eN or da/dN) as a CSV (Comma Separated Values, *.csv) file.

Table | Import Command

Loads a Comma Separated Values (CSV) file into the selected experimental data table (SN, eN or da/dN). Note that **ViDa** ignores the first row of the CSV file (since it assumes that the first row contains the column titles) and the number and order of the columns in the file must be compatible with the respective table (2 columns for the SN or the da/dN tables and 3 columns for the eN table).

Table | MPa -> ksi Command


Converts the numerical values of all the 3 Experimental Points Tables from SI to English units (MPa -> ksi, MPa/m -> ksi/in, mm/cycle -> in/cycle). Note however that only the numerical values are changed, so if you want to perform calculations in English units you need to select the **Tools | Options command** from the Main Window, and choose **English Units** from the **Units tab**.

Table | ksi -> MPa Command

Converts the numerical values of all the 3 Experimental Points Tables from English to SI units (ksi -> MPa, ksi/in -> MPa/m, in/cycle -> mm/cycle). Note however that only the numerical values are changed, so if you want to perform calculations in SI units you need to select the **Tools | Options command** from the Main Window, and choose **SI Units** from the **Units tab**.

Open Material window

Shows a list of all materials in the database (or the ones that matched a query from the [Find Material window](#)). Just click on the desired material to load the data.

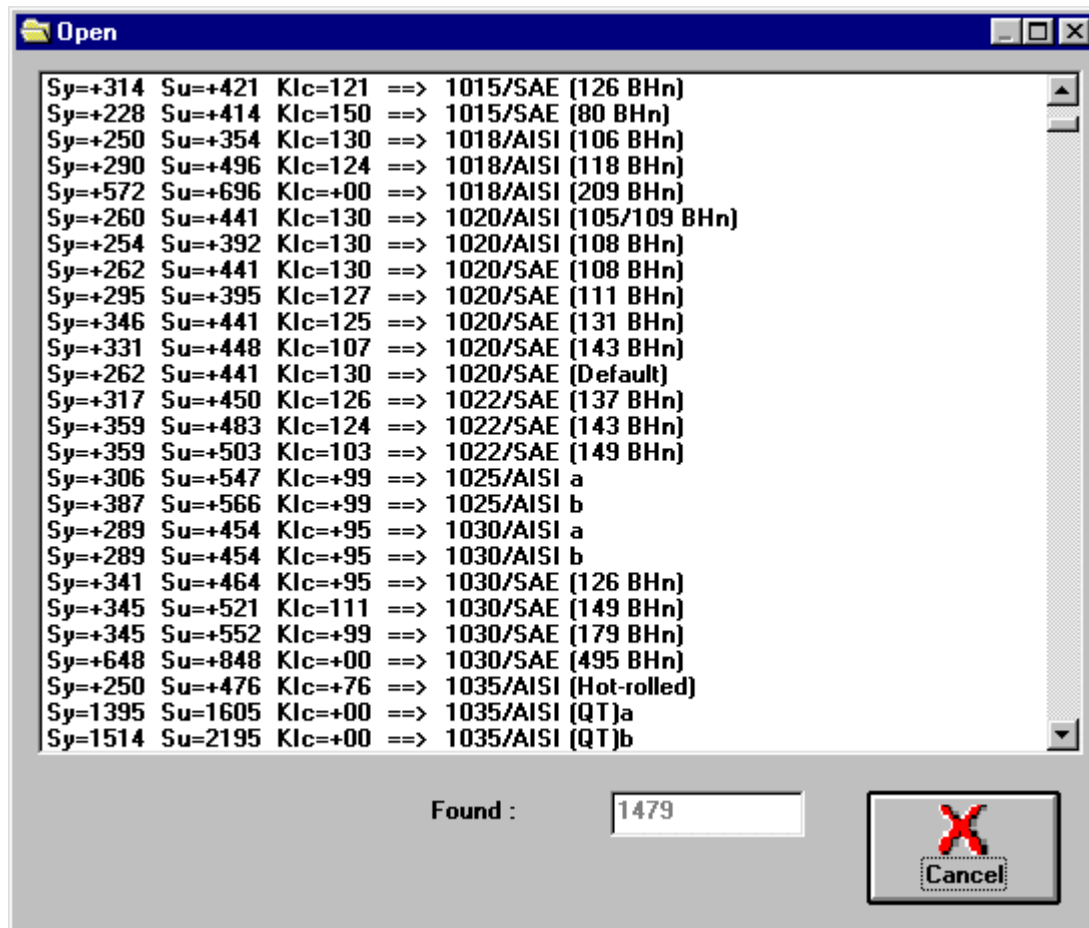

Materials List

List of all materials in the database (or the ones that matched a query from the [Find Material window](#)). Just click on the desired material to load the data.

Found

Total number of materials found in the materials database (or the ones that matched a query).

Cancel Button

Cancels the material selection and returns to the [Material window](#).

Find Material Window

Lets the user search for materials by their type (steels, alumina, etc.) or by any property ranges (e.g. materials with **Su** between 600 and 800 MPa) or combinations of them. You can also sort the matching materials by any property. The results of your query are shown in the Open Material window.

Find Material (Local - vida.mdb)...

Material : **Aluminum**

Field :
Name
Composition
Memo

Contains :

Property :
Su (MPa)

Range :
200 400
0.0001 10000
0.0001 10000
0.0001 10000
0.0001 10000
0.0001 10000
0.0001 10000
0.0001 10000

Order by :
(Klc/Sy)² (mm)

☒ Descending ☐ Ascending
☒ Descending ☐ Ascending

OK Cancel

Material

Type of material to be searched (steels, alumina, etc.).

Property

Choose here the properties that you want to set ranges in your query.

Range

Set the minimum and maximum value of the corresponding material property to be used in your query.

Order by

Choose here the properties that you want to use to sort the results from your query.

Descending/Ascending

Choose the sorting order (descending or ascending) of the results from your query.

OK Button

Evaluates your query and show the results in the Open Material window.

Cancel Button

Cancels your query and returns to the Material window.

Browse Material Window

Lets the user browse all materials from the database, showing all their properties. You can rearrange the columns by dragging the column title with the mouse and dropping it over the desired position. ViDa automatically sorts the table by the first column, so if you want to order the materials e.g. by their Su, just drag and drop it on the first column. You can also resize the columns, and all your layout changes are saved. So, just customize your table, start browsing, and double-click on the material you want to load.

#	Name	Type	BHn	E	Su	Sy	Sxl	RA	Klc	Kth	Sfl	bSn
73	1015/SAE (121 BHn)	Steel	121	207	424	324	200	69	123	7	2.12E+02	1.18E+01
72	1015/SAE (126 BHn)	Steel	126	207	421	314	200	61	121	7	2.11E+02	1.18E+01
19	1015/SAE (80 BHn)	Steel	80	207	414	228	241	68	150	7	2.07E+02	1.18E+01
517	1018/AISI (106 BHn)	Steel	106	200	354	250	193	-	130	7	1.77E+02	1.18E+01
518	1018/AISI (118 BHn)	Steel	118	207	496	290	93	65	124	7	2.48E+02	1.18E+01
519	1018/AISI (209 BHn)	Steel	209	207	696	572	153	68	-	7	3.48E+02	1.18E+01
521	1020/AISI (105/109 BHn)	Steel	105	203	441	260	243	61	130	7	2.21E+02	1.18E+01
520	1020/AISI (108 BHn)	Steel	108	186	392	254	241	64	130	7	1.96E+02	1.18E+01
20	1020/SAE (108 BHn)	Steel	108	203	441	262	241	62	130	7	2.21E+02	1.18E+01
77	1020/SAE (111 BHn)	Steel	111	207	395	295	226	66	127	7	1.98E+02	1.18E+01
76	1020/SAE (131 BHn)	Steel	131	207	441	346	226	67	125	7	2.21E+02	1.18E+01
75	1020/SAE (143 BHn)	Steel	143	207	448	331	226	59	107	7	2.24E+02	1.18E+01
1	1020/SAE (Default)	Steel	108	203	441	262	241	62	130	7	2.21E+02	1.18E+01
80	1022/SAE (137 BHn)	Steel	137	207	450	317	226	63	126	7	2.25E+02	1.18E+01
79	1022/SAE (143 BHn)	Steel	143	207	483	359	226	67	124	7	2.42E+02	1.18E+01
78	1022/SAE (149 BHn)	Steel	149	207	503	359	226	67	103	7	2.52E+02	1.18E+01
522	1025/AISI a	Steel	161	204	547	306	292	62	99	7	2.74E+02	1.18E+01
523	1025/AISI b	Steel	166	207	566	387	350	57	99	7	2.83E+02	1.18E+01
524	1030/AISI a	Steel	128	206	454	289	209	59	95	7	2.27E+02	1.18E+01
525	1030/AISI b	Steel	128	206	454	289	195	59	95	7	2.27E+02	1.18E+01
83	1030/SAE (126 BHn)	Steel	126	207	464	341	195	57	95	7	2.32E+02	1.18E+01

Materials Table

Shows all available materials in the database. You can customize the table layout by dragging and dropping the columns, as well as resizing them. ViDa automatically sorts the table by its first column, and all your layout changes are automatically saved. To load a material to the Material window, just double-click on its name, or select it and press the OK button.

Help Button

Shows more information on this window.

Refresh Button

Updates the table to reflect your most recent changes in the Material database. You only need to use this button if you have made changes to the Material database in this session of ViDa.

Default Layout

Sets the column order and column widths of all properties to the default value used in ViDa. You can use this button if you made too many changes in the table layout and want to revert it back.

Group Cells

Changes the display mode so to group equal values into one larger cell.

OK Button


Loads the selected material and returns to the Material window. Alternatively, you can just double-click on the Materials table on the name of the material you want to load.

Cancel Button

Cancels the material selection and returns to the Material window.

Calculate b and c for SN Window

Calculates the b and c constants of the SN curve ($N \cdot S^b = c$) using the user data and returns to the Material window.

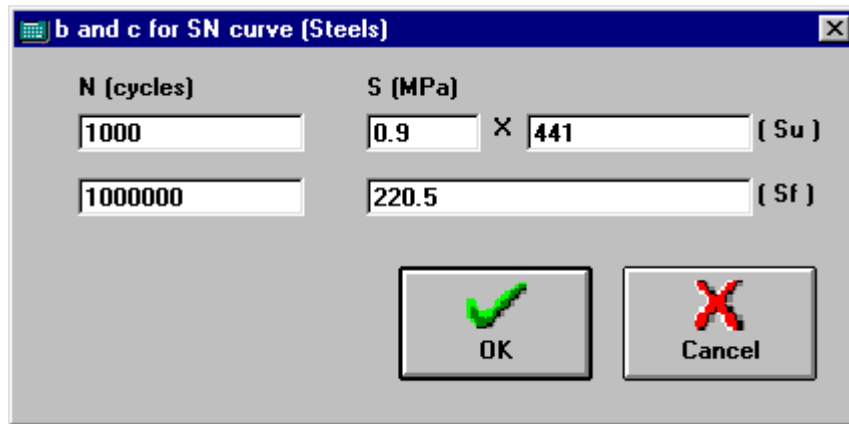

N (cycles)	S (MPa)	
1000	0.9	× [Su]
1000000	220.5	[Sf]

OK Cancel

SN Graph Interpolation Data

Values of 2 points of the SN curve to be interpolated. The default values are 1000 cycles for 0.9***Su** and 1,000,000 cycles for Sf, but the user can change any of these values before pressing **OK**.

OK Button


Calculates the **b** and **c** constants of the SN curve ($N \cdot S^b = c$) using the user data and returns to the Material Window or to the SN Method Window.

Cancel Button

Cancels the calculation and returns to the Material Window or to the SN Method Window.

Equations Database Window

Database of **K_t**, **K_I** or **da/dN** equations that can be used in calculations. In this window you can add, delete or change data of a specific equation. You can alter the equations by clicking on the desired field and entering the new data. Note that this new data will only be effective after you save it.

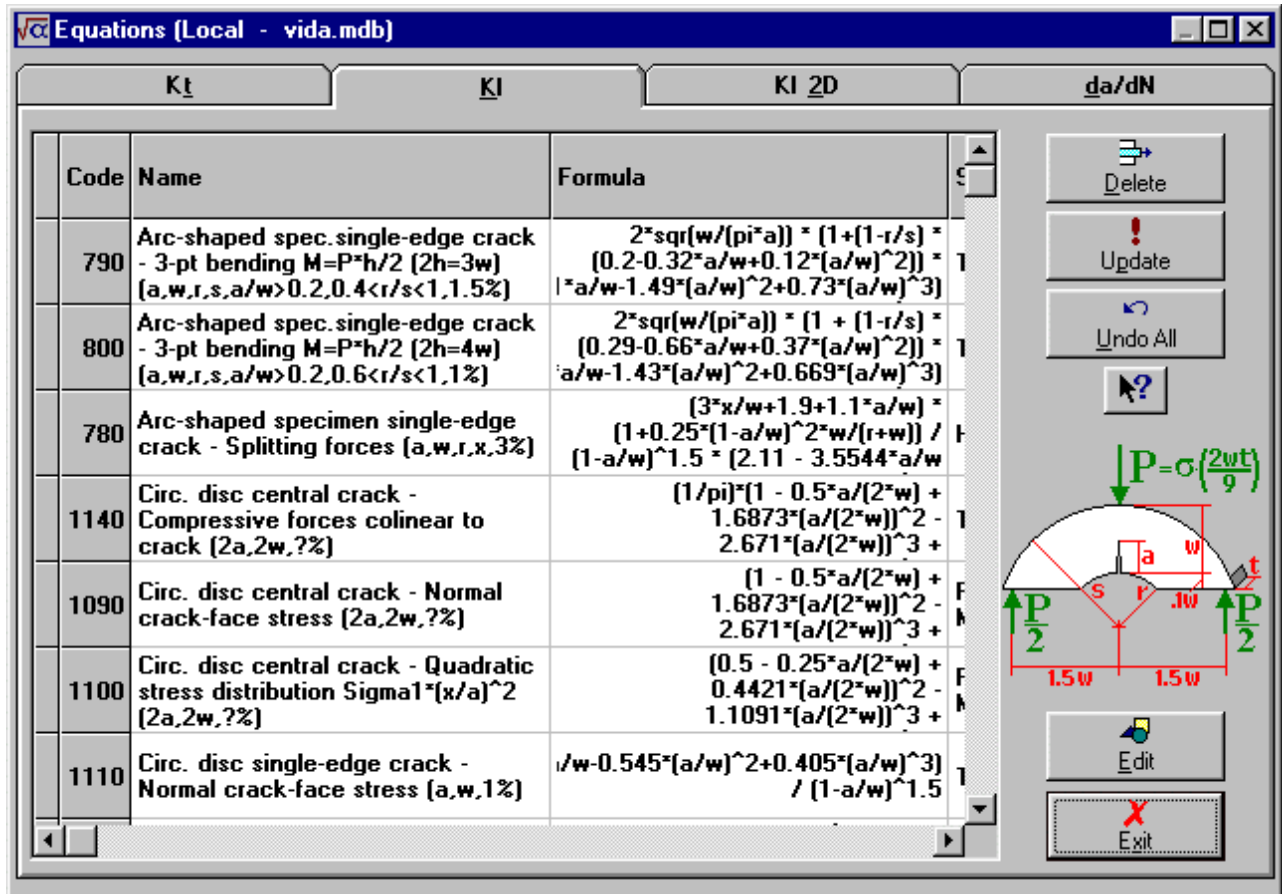

Name

Name of the equation (each equation name must be unique).

Code

Sequencing code for the equations (automatically administered by ViDa).

Source

Reference source for this equation.

Formula

Contains the equation itself. Click on the **Equation Interpreter Help** button to get more information about the equations syntax.

Equation Interpreter Help Button

Shows (just for reference) a window with the equations syntax and all the material properties that can be literally used.

Memo

Additional information about the equation.

Figure

Name of the graphic file containing the selected equation (located in the directory **Vida2002\Figures**).

Delete Button

Deletes the selected equation permanently from the database.

Update Button

Updates all the equation data from the current Tab to the database. Note that you need to use this command for the changes to become effective for further calculations.

Undo All Button

Returns all unsaved equation data to its original values.

Edit Button

Edits the selected figure using the graphical software defined in the File Locations tab of the Options window.

Exit Button

Exits the Equations Database window and returns to the Main Window. Note that you need to **update the changed equations** for them to become effective for further calculations.

Calculate Life (SN) Extended Window

Calculates the damage and remaining life using the SN Method and the loading history from the [Main Window](#). (The SN method is recommended only if the stress/strain history at the critical point – normally a notch root – is **elastic**). The user can input the specimen characteristics to determine the values of **ka**, **kb**, **kc**, **kd** and **ke**, the fatigue strength modifiers due to surface finish, size, loading, temperature and other effects, alter the material SN curve equation, [calculate and input stress concentration factors](#), define user SaSm diagrams and many other options.

Some of the default data in this window comes from the [Materials database](#) and the rest is maintained from your last calculation. A simplified Calculate Life (SN) window (recommended for beginners) is also available by using the **Tools | Options | Simplified command** in the [Main Window](#) prior to calculating life.

After tuning the desired properties, just click on the **OK button** to return to the [Main Window](#) and perform the calculations.

SN Curve Tab

SN Method

Calculation title :

SN Curve **Damage Curve**

SN Curve

Type : ☒ Automatic
☐ b-Sf-Nf
☐ b-c-Nf

b :

c :

☒ Consider SN Curve Elbow
b_{elb} :

Surface Finish :
Type of Loading :
Effective Diameter : mm
Su : MPa
Operating Temperature : °C

S_f' : MPa
ka :
kb :
kc :
kd :
ke :

K_t :
q :

SN Curve

S (MPa)

N

Calculation Title

Title of the calculation that is about to be performed. This is an optional field, useful to identify and compare results from different calculations in the [Calculation Logbook Window](#).

Type of SN Curve Option

ViDa considers 3 ways of obtaining the SN curve $N \cdot S^b = c$:

(i) **Automatic**: calculates **b** and **c** from the pair of points (N,S) = (1000cycles, $0.9 \cdot S_u$) and (1,000,000cycles, $S_f = k_a \cdot k_b \cdot k_c \cdot k_d \cdot k_e \cdot S_f'$) for steels (for alumina the 1,000,000 cycles is switched to 500,000,000). For steels an elbow is placed in the SN curve at $N=1,000,000$.

(ii) **b-Sf-Nf**: determines the SN curve using the point $(N, S) = (N_f, S_f = k_a * k_b * k_c * k_d * k_e * S_f')$ and the exponent **b**.

(iii) **b-c-Nf**: the SN curve is determined from the user supplied values of **b**, **c** and the elbow location **Nf**. Note that only in this option the **Calculate b, c Button** is enabled.

b

Exponent of the SN Curve ($N * S^b = c$).

c

Coefficient of the SN Curve ($N * S^b = c$).

Nf

Location of the elbow in the SN curve (there is no fatigue damage for $N > N_f$).

Calculate b, c Button | For Steels or Alumina Command

Goes to the Calculate b and c for SN Window, where the user can calculate the parameters **b** and **c** of the SN curve $N * S^b = c$.

Calculate b, c Button | Materials Database Values Command

Loads the values of the parameters **b** and **c** of the SN curve $N * S^b = c$ from the Materials Database directly into the current window.

Calculate b, c Button | Experimental Points Command

Loads the values of the parameters **b** and **c** of the SN curve $N * S^b = c$ from the Experimental Points Window directly into the current window.

Consider SN Curve Elbow Option

Option to consider the elbow in the SN curve, which defines no fatigue damage for stresses smaller than $S_f = k_a * k_b * k_c * k_d * k_e * S_f'$ (or number of cycles greater than **Nf**). If this option is off then the elbow is ignored.

belb

Value of the **b** exponent of the SN Curve after the elbow (set **belb** = 0 to ignore this option).

Surface Finish

Surface finish of the specimen, used to automatically calculate the endurance limit modifying factor **ka**.

Type of Loading

Main type of loading applied to the specimen, used to automatically calculate the endurance limit modifying factor **kc**.

Equivalent Diameter

Specimen cross-section diameter (or equivalent diameter), used to automatically calculate the endurance limit modifying factor **kb**.

Calculate d (Equivalent Diameter) Button

Goes to the Calculate Effective Diameter Window, where the user can calculate the effective diameter of various cross section profiles under bending. This diameter is used to calculate the size factor **kb** (used to correct the fatigue endurance limit **Sf'**).

Su

Ultimate strength of the current material, used to automatically calculate the endurance limit modifying factor **ka**. The default value of **Su** is loaded from the Materials Database, but it can be changed by the user.

Operating Temperature

Specimen operating temperature, used to automatically calculate the endurance limit modifying factor **kd**.

Sf'

Uncorrected endurance limit of the material (alternate stress below which there is no fatigue damage).

ka

Surface finish factor that modifies the **endurance limit** (a better surface finish increases the endurance limit).

kb

Size factor that modifies the **endurance limit** (smaller specimens have greater endurance limit than larger ones).

kc

Loading factor that modifies the **endurance limit** (depends on the main type of loading applied to the specimen).

kd

Temperature factor that modifies the **endurance limit** (greater temperatures bring down **Sf**).

ke

Miscellaneous factors that modify the **endurance limit** (e.g. corrosion). Be careful not to include the stress concentration factor **Kt** or **Kf** in the value of **ke**, since **Kt** and **Kf** are already taken care of in the stress calculation.

SN Graph

SN curve of the material, considering the endurance limit modifiers **ka**, **kb**, **kc**, **kd** and **ke**. The graph is updated after changes in its parameters only when the **Graph | Redraw command** is used. To expand or shrink the graph, just double-click on it.

Damage Curve Tab

User Damage Curve

Curve relating combinations of alternate (**Sa**) and mean stresses (**Sm**) that lead to a same life. This equation has the form $(\frac{Sa}{Sf})^m + (\frac{Sm}{Sref})^n = 1$, **Sf** being the corrected endurance limit ($Sf = k_a \cdot k_b \cdot k_c \cdot k_d \cdot k_e \cdot Sf'$), and the user can define any values for **m**, **n** and **Sref**. In the Goodman curve for instance the values are **m=n=1** and **Sref** is the ultimate strength **Su**.

User Damage Curve Name

Name of the **user defined SaSm damage curve**.

Alternate Stress Exponent

Alternate stress exponent **m** of the user defined SaSm damage curve $(\frac{Sa}{Sf})^m + (\frac{Sm}{Sref})^n = 1$.

Mean Stress Exponent

Mean stress exponent **n** of the user defined SaSm damage curve $(\frac{Sa}{Sf})^m + (\frac{Sm}{Sref})^n = 1$.

Reference Mean Strength

Reference mean strength **Sref** of the user defined SaSm damage curve $(\frac{Sa}{Sf})^m + (\frac{Sm}{Sref})^n = 1$. In general its value is chosen as **Su** or **Sy**.

Sm < 0

Slope of the SaSm curve when the mean stress is negative. This slope is measured as a percentage of the Goodman curve slope. If 0% is chosen then the SaSm curve is flat for negative mean stresses. When this percentage is increased the user is valorizing the beneficial influence of compressive mean stresses (which can extend life).

User Damage Curve Help Button

Shows a help window with some basic explanations about the **User Damage Curve**.

SaSm Graph

Graph showing the damage curve relating alternate and mean stresses (Sa and Sm pairs that cause the same damage) for different models: Goodman, Gerber, Soderberg and the user defined damage curve. Since these curves can be plotted for any reference life in cycles, **ViDa** by default plot them for a life associated with the elbow of the SN curve (1,000,000 cycles for most steels). By clicking on the menu command **Graph | Define Life for SaSm** the user can change this default plotting value to see the damage curves for any desired life.

Use Kt in Smean Option

Option to apply the stress concentration factor on the mean stress (not only on the alternate component). Some theories suggest that the **Kt** value should only be applied to the alternate stress and ignored for the mean, so in this case just turn this option off.

Plot Soderberg Option

Option to plot or not to plot the data calculated using the Soderberg damage curve. Since Soderberg is very conservative it calculates damages much greater than the other curves would predict, which makes difficult the visualization in the graphs. In this case just turn this option off and only the Goodman, Gerber and user damage curve results are plotted.

Initial Damage

Initial damage value, before the loading history, using the Palmgreen-Miner rule.

End of Life at Damage

Total damage value that characterizes failure of the specimen. The Palmgreen-Miner rule suggests a total damage value of 1 for the end of life, but other values can be chosen by the user.

Consider Residual Stresses Option

Option that considers residual stresses in the SN life calculation. The program needs to draw hysteresis loops in order to consider residual stresses accurately, which increases the complexity of the calculations. The user can also enter an initial residual stress value.

Initial Residual Stress

Initial value of the residual stress on the specimen (use negative values for compressive residual stresses). Residual stresses are only considered in the life calculation if the **Consider Residual Stresses Option** is on.

Plot Loops

Range of hysteresis loops that the user wants to plot for visualization purposes. This range doesn't affect the calculations (the program needs to calculate ALL the hysteresis loops in order to consider residual stresses accurately). Note that residual stresses are only considered in the life calculation if the **Consider Residual Stresses Option** is on.

Points for Calculation and Plotting

Resolution in number of points of each hysteresis loop, for calculation accuracy and plotting purposes. For calculation, 40 points is in general a good choice. If you're plotting too many hysteresis loops you might have to reduce the number of plotting points for each loop.

Linear / Neuber Option

Strain concentration theory used when considering stress concentration factors on hysteresis loops. Linear theory considers $K_e = K_t$ (strain concentration K_e is equal to **Kt**), while Neuber theory uses $K_e * K_s = K_t^2$.

Kt

Stress concentration factor of the specimen (relating the nominal loading to the stresses at the notch root). Its value can also be calculated using the **Calculate | Kt | Typical** or **Calculate | Kt | Stored** commands.

q

Notch sensitivity factor, which is used to calculate the fatigue or effective stress concentration factor $K_f = 1 + q * (K_t - 1)$.

Calculate Kt Button | Typical Command

Goes to the Calculate Typical Stress Concentration Factor (Kt) Window, where the user can calculate the value of **Kt** for Notched/Filleted Bars or Shafts of any dimensions.

Calculate Kt Button | Stored Command

Goes to the Smart Calculator window, where the user can calculate the value of **Kt** using the equations from the Kt Equations Database (or any other equation defined by the user).

Calculate q (Notch Sensitivity) Button

Goes to the Calculate Notch Sensitivity (q) for Steels and Alumina Window, where the user can calculate **q** for steels or alumina given the notch radius and **Su**.

OK Button

Calculates the damage using the SN Method for the **Loading Window** loadings using the material properties and the chosen options, and goes back to the Main Window.

Cancel Button

Cancels the SN Method calculation and goes back to the Main Window.

Calculate Life (SN) Simplified Window

Calculates the damage and remaining life using the SN Method and the **loading history** from the Main Window. (The SN method is recommended only if the stress/strain history at the critical point – normally a notch root – is **elastic**). The user can input the specimen characteristics (such as surface finish or equivalent diameter to determine the values of **ka**, **kb**, **kc**, **kd** and **ke**), alter the material SN curve equation, calculate and input stress concentration factors and some other options.

Some of the default data in this window comes from the Materials database and the rest is maintained from your last calculation. Many more options are available in the extended Calculate Life (SN) window, which is available by using the **Tools | Options command** in the Main Window and choosing **Extended** in the **Modeling tab**, prior to calculating life.

After tuning the desired properties, just click on the **OK button** to return to the Main Window and perform the calculations.

The screenshot shows the 'SN Method' window with the following components:

- Calculation title :** A text input field.
- SN Curve** tab: Contains a sub-tab 'SN Curve' with radio buttons for 'Automatic' (selected), 'b-Sf-Nf', and 'b-c-Nf'. Below these are input fields for 'b : 9.49E+00' and 'c : 4.53E+27', with a 'b,c' button.
- SN Curve Graph:** A log-log plot of Stress S (MPa) vs. Number of cycles N . The y-axis ranges from 191.642 to 396.9 MPa, and the x-axis ranges from 1000 to $1e+007$. A red line represents the SN curve.
- Input Parameters:**
 - Surface Finish : Ground (dropdown)
 - Type of Loading : Tension (dropdown)
 - Effective Diameter : 10 mm
 - Su : 441 MPa
 - Operating Temperature : 24 °C
 - S'_f : 220.5 MPa
 - ka : 9.42E-01
 - kb : 1.00E+00
 - kc : 9.23E-01
 - kd : 1.00E+00
 - ke : 1.00E+00
- Bottom Section:** Input fields for K_t (2.00E+00) and q (7.67E-01), buttons for 'q' and 'Kt', and 'OK' and 'Cancel' buttons.

To check information on the available commands, please refer to the correspondent **extended** window.

Calculate Effective Diameter Window

Calculates the effective diameter of different cross sectional profiles for bending. This diameter is used in the Calculate Life window for SN or eN methods to calculate the size factor **kb** (used to correct the fatigue endurance limit **Sf'**).

Click on the corresponding button and enter the profile dimensions to calculate the effective diameter and press the **OK button** to return to the previous window with the **calculated value**.

Effective Diameter

Cross Section for Bending:

Circular Rectangular Channel I-Beam

Diagram of I-Beam cross-section with dimensions: a (flange width), b (total height), t (web thickness). Axes 1-1 and 2-2 are indicated.

Inputs:

- a : 10 mm
- b : 10 mm
- t : 2 mm

Outputs:

- Axis 1-1 : 5.111651396564 mm
- Axis 2-2 : 8.08 mm

Effective Diameter : 5.11E+00 mm

Buttons: OK, Cancel

Cross Section Tabs/Drawings

Drawings of the cross section profiles of the available bending effective diameter equations.

Axis fields

Calculated effective diameter under bending on each axis of the chosen cross section. To copy any of these values to the Effective Diameter field, click on the desired Axis field.

Effective Diameter

Shows the calculated effective diameter for the chosen cross section profile.

OK Button

Returns to the previous window and copies the **Calculated Diameter** value to the Equivalent Diameter field in the previous window.

Cancel Button

Returns to the previous window without carrying the **Calculated Diameter** value.

Calculate Typical Stress Concentration Factor (Kt) Window

Calculates the stress concentration factor (**Kt**) for typical specimens. Clicking on the desired **specimen category**, 3 or 4 figures will appear on the screen. Enter the values of **w** (or **D**), **d** and **r** and click on the figure with the desired specimen type. **ViDa** will then calculate the value of **Kt** and plot the **Kt** equation that originated this calculation. The values of the notch sensitivity (**q**) and the effective stress concentration factor **Kf**=1+**q***(**Kt**-1) are also displayed considering that the current material is a steel or an aluminum.

Press the **OK button** to go back to the previous window bringing and updating the calculated values of **Kt** and **q** (or **Cancel** to return without carrying these values).

Stress Concentration Factor (Kt)

Circ. Hole - Rect. Plates **Elliptic Hole** **Diamond/Rectang. Hole** **Multiple Holes**

Notched Cylinders **Tubes/ Filleted Cyl.** **Notched/Fill. Plates** **Circ. Hole - Inf. Plates**

$P = \sigma(D-2h)t$ $M = \sigma(D-2h)^2t/6$ $M = \sigma t^2(D-2r)/6$ $M = \sigma(D-h)^2t/6$

$P = \sigma(D-h)t$ $M = \sigma(D-h)^2t/6$ $P = \sigma(D-2h)t$ $M = \sigma(D-2h)^2t/6$

ate two U-notches - Tension ($0.1 < h/r$)

D: 20 mm h: 3 mm Kt: 3.19E+00
L: 10 mm r: 1 mm q: 7.67E-01
a: 1 mm Su: 441 MPa Kf: 2.68E+00
d: 16 mm
t: 1 mm
v: 10 mm

OK **Cancel**

Specimen Drawing

Drawing of the available specimen types for that chosen **specimen group**. Just click on the desired drawing to see its **Kt graph** and calculate the values of **Kt**, **q** and **Kf**.

Kt Graph

Graph showing the **Kt** values for a specific **specimen type** as a function of its dimensions.

Variables

Values of the dimensions of the specimen drawings, used to calculate **Kt**.

Radius (r)

Value of **r** on the specimen drawings, used to calculate **Kt**, **q** and **Kf**.

Su

Ultimate strength of the material, used to calculate **q**. The default value is loaded from the Materials Database, but it can be changed by the user.

Calculated Kt, q and Kf

Calculated values of **Kt** (stress concentration factor), **q** (notch sensitivity) and **Kf** (fatigue or effective stress concentration factor, **Kf**=1+**q***(**Kt**-1)). These values are automatically calculated for the chosen specimen drawing using

the variables values, **r** and **Su**. The value of **q** is calculated from **r** and **Su** and taking into account if the current material is a steel or an aluminum (for other types of material the steel values are used).

OK Button

Returns to the previous window and copies the **Calculated Kt value** to the **Kt field** in the previous window. If the previous window is the Calculate Life (SN) window, then the value of **q** is also carried.

Cancel Button

Returns to the previous window without carrying the **Calculated Kt value**.

Calculating Stored Stress Concentration Factors (Kt)

You can calculate the stress concentration factor (**Kt**) from stored Kt equations in the database, just choose the desired equation name from a **list**. You can also set the variable values in the **Variables Table** by clicking on the desired cell, or edit the equation in the **Formula box**. **ViDa** automatically calculates the value of **Kt** for the **chosen equation**.

Stress Concentration Factor (Kt)

Kt : **Circ. shaft fillet - Tension (0.25<h/r<2.0)**

$$\{0.25 < h/r\} * \{h/r < 2.0\} * \{[0.927 + 1.149 * \text{sqrt}(h/r) - 0.086 * h/r] + [0.011 - 3.029 * \text{sqrt}(h/r) + 0.948 * h/r] * [2 * h/D] + [-0.304 + 3.979 * \text{sqrt}(h/r) - 1.737 * h/r] * [2 * h/D]^2 + [0.366 - 2.098 * \text{sqrt}(h/r) + 0.875 * h/r] * [2 * h/D]^3\}$$

$$P = \sigma \pi (D - 2h)^2 / 4$$

a: 1.00E+00	h: 1.00E+01	r: 5.00E+00	z: 8.00E-01
A: 5.29E-06	H: 7.50E-01	s: 1.00E+00	
b: 1.00E+02	l: 1.00E+00	t: 3.00E+00	
B: 1.30E+02	L: -5.00E-01	v: 3.00E+01	
c: 2.00E+00	m: 2.00E+00	w: 5.00E+02	
d: 5.00E+02	n: 1.00E+00	x: 1.00E+00	
D: 1.00E+03	p: 6.00E-01	y: 3.50E+00	

Kt : **2.33E+00**

OK Cancel

Kt list

List of names of the available **Kt** equations from the Equations Database. Just click on the desired name to load its **Formula**.

Formula

Formula of the **Kt** equation loaded from the Equations Database through the **Name list**. The formula can also be edited by the user.

Save As New Button

Adds the **Kt** equation present in the **Kt Formula field** to the Equations Database. The user will be asked to enter a name for this new equation.

Variables Table

Table containing variables that can be set by the user. To set a variable, just click on it and type its new value. If these variables are present in the **Kt** Formula then their values are used in the calculations.

Open (Variables) Button

Loads a previously saved Variables Table file (*.var) containing the values of all variables from the **Variables Table**.

Save (Variables) Button

Saves the values of the variables from the **Variables Table** to a Variables Table file (*.var).

Calculated Kt

Calculated value of **Kt** (stress concentration factor). This value is automatically calculated for the chosen equation using the Variables Table values.

OK Button

Returns to the previous window and copies the **Calculated Kt value** to the **Kt field** in the previous window.


Cancel Button

Returns to the previous window without carrying the **Calculated Kt value**.

Calculate Notch Sensitivity (q) Window

Calculates the notch sensitivity (q). Type the value of the **notch radius** and **ViDa** will automatically calculate the value of q depending on your choice of material type in the **Material** option.

Press the **OK button** to go back to the previous window bringing and updating the **calculated value of q** (or **Cancel** to return without carrying this value).

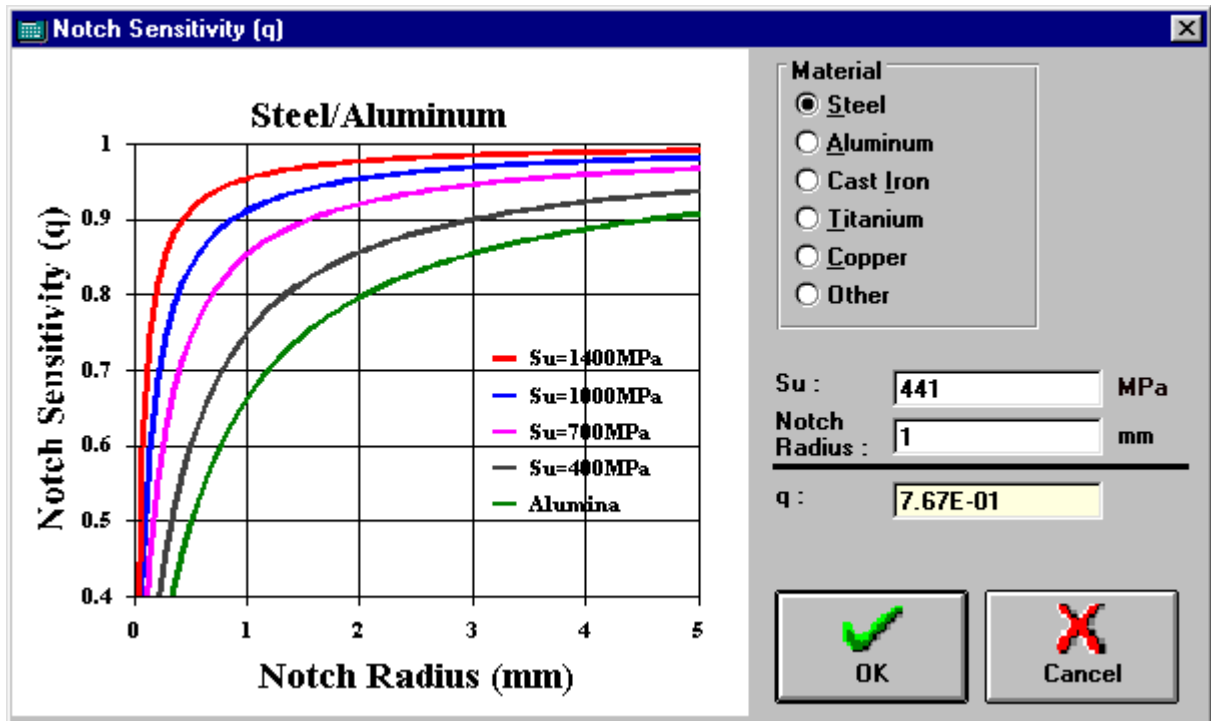

q Graph

Shows the notch sensitivity values as a function of the **Notch Radius** and **S_u** .

Su

Ultimate strength of the material, used to calculate q . The default value is loaded from the Materials Database, but it can be changed by the user.

Notch Radius

Radius of the notch on the specimen, used to calculate q .

Material Option

Option of material type for calculating q . Note that q doesn't depend on **S_u** for Alumina.

q

Calculated value of the Notch Sensitivity for steels or alumina given the **Notch Radius** and **S_u** .

OK Button

Returns to the Calculate Life (SN) window carrying the **Calculated q value**.

Cancel Button

Returns to the previous window without carrying the **Calculated q value**.

Calculate Life of Welded Structures Window

Calculates the damage and remaining life of welded structures using the **IIW** (International Institute of Welding) Method and the **loading history** from the Main Window. The user can input the **weld joint class** (which is the stress range in MPa that leads to a 2,000,000 cycle life to that specific weld type), the **exponent m** from the **IIW** equation $N(\text{cycles}) = 2,000,000 * ([\text{weld class}] / [\text{applied stress}])^m$, the **number of cycles above which there is no fatigue damage**, and even a **reliability factor** for the calculations.

This window also contains the **weld joint class values** for many typical weld joints. Just click on the **drawing of the desired weld joint** to load its class and description.

After tuning the desired properties, just click on the **OK button** to return to the Main Window and perform the calculations.

Calculation Title

Title of the calculation that is about to be performed. This is an optional field, useful to identify and compare results from different calculations in the Calculation Logbook Window.

Exponent m

Exponent **m** from the International Institute of Welding (**IIW**) equation $N(\text{cycles}) = 2,000,000 * ([\text{weld class}] / [\text{applied stress}])^m$. The default value of **m** is 3.0.

Fatigue Limit N

Number of cycles above which there is no fatigue damage for the Weld Joint. The default value of **N** is 5,000,000.

Initial Damage

Initial damage value, before the loading history, using the Palmgreen-Miner rule.

End Life at Damage

Total damage value that characterizes failure of the weld. The Palmgreen-Miner rule suggests a total damage value of 1 for the end of life, but other values can be chosen by the user.

Reliability Factor R

Reliability of the calculation. ViDa uses by default a 97.7% reliability (as defined by the IIW) for the Welded Structures calculations, but the user can also choose another reliability factor.

Consider SN Curve Elbow Option

Option to consider the elbow in the SN curve, which defines no fatigue damage for number of cycles greater than the fatigue limit **N**. If this option is off then the elbow is ignored.

melb

Value of the **m** exponent of the Weld SN Curve after the elbow (set **melb** = 0 to ignore this option).

Weld Joint Class

Class of the Weld Joint to be used in the life calculation according to the International Institute of Welding (**IIW**) data. The class is defined as the alternated stress applied to the specimen associated to a 2,000,000 cycles life for the weld. Click on the **Weld Joint buttons** to retrieve the class values of common Weld Joints.

Weld Joint Description

Description of the chosen Weld Joint.

Weld Joint Buttons

Buttons showing typical weld joints. Just click on each **Weld Joint Button** to load its **class** and **description**.

OK Button

Calculates life for the chosen specimen and weld joint using the **IIW** Method for the **Loading Window** loadings and the chosen options, and goes back to the Main Window.

Cancel Button

Cancels the Weld Joint life calculation and goes back to the Main Window.

Calculate Life (eN) Extended Window

Calculates the damage and remaining life using the eN Method (recommended in the presence of plastic deformations at the critical point, normally a notch root) and the **loading history** from the Main Window. The user can input specimen characteristics (such as surface finish or equivalent diameter to determine the values of **ka**, **kb**, **kc**, **kd** and **ke** to alter the elastic component of the eN curve), alter the material eN curve equation, calculate and input stress concentration factors, choose **to or not to calculate by following and plotting the hysteresis loops** and many other options.

Some of the default data in this window comes from the Materials database and the rest is maintained from your last calculation. A simplified Calculate Life (eN) window (recommended for beginners) is also available by using the **Tools | Options command** in the Main Window and selecting **Simplified** in the **Modeling tab**, prior to calculating life.

After tuning the desired properties, just click on the **OK button** to return to the Main Window and perform the calculations.

eN Curve Tab

The screenshot shows the 'eN Method' software window with the 'eN Curve' tab selected. The window is divided into several sections:

- Calculation title :** A text field for entering the calculation title.
- eN Curve Section:**
 - eN Curve:** A sub-section with input fields for σ_f (8.96E+02 MPa), ϵ_f (4.10E-01), b (-1.30E-01), and c (-5.10E-01). There is a 'b,c' button next to these fields.
 - Consider SN Elbow:** A checkbox that is checked, with a sub-field for b_{elb} (0.00E+00).
 - Initial damage =** 0 and **End of life damage =** 1.
 - Surface Finish :** Ground (dropdown menu).
 - Type of Loading :** Tension (dropdown menu).
 - Effective Diameter :** 10 mm.
 - Su :** 441 MPa.
 - Operating Temperature :** 24 °C.
 - Kt :** 2.00E+00.
- Hysteresis Loops Section:**
 - eN Curve Graph:** A log-log plot showing the relationship between $d\epsilon/2$ (y-axis, ranging from 0.000001 to 1.000000) and $2N$ (x-axis, ranging from 1 to 10000). The graph displays a red curve and a blue curve, with a legend indicating '15N003 curve+010'.
 - Material Properties:**
 - S'_f : 220.5 MPa
 - k_a : 9.42E-01
 - k_b : 1.00E+00
 - k_c : 9.23E-01
 - k_d : 1.00E+00
 - k_e : 1.00E+00
- Buttons:** 'OK' (green checkmark) and 'Cancel' (red X).

Calculation Title

Title of the calculation that is about to be performed. This is an optional field, useful to identify and compare results from different calculations in the Calculation Logbook Window.

Sigmaf'

Elastic coefficient from Coffin-Manson's equation ($d\epsilon/2 = \text{Sigmaf}'/E*(2N)^b + \epsilon_{\text{plastic}}*(2N)^c$).

Epsilonf'

Plastic coefficient from Coffin-Manson's equation ($d\epsilon/2 = \text{Sigmaf}'/E*(2N)^b + \epsilon_{\text{plastic}}*(2N)^c$).

b

Elastic exponent from Coffin-Manson's equation ($d\epsilon/2 = \text{Sigmaf}'/E*(2N)^b + \epsilon_{\text{plastic}}*(2N)^c$).

c

Plastic exponent from Coffin-Manson's equation ($\epsilon_e/2 = \sigma_f/E*(2N)^b + \epsilon_f*(2N)^c$).

Calculate b, c Button | For Steels or Alumina Command

Calculates the values of the parameters **b**, **c**, **Sigma_f'** and **epsilon_f'** of the eN curve $\epsilon_e/2 = \sigma_f/E*(2N)^b + \epsilon_f*(2N)^c$ by loading them from the Materials Database and also correcting the elastic exponent **b** using the value of $S_f = k_a * k_b * k_c * k_d * k_e * S_f'$ (the same approach used in the SN Curve).

Calculate b, c Button | Materials Database Values Command

Loads the values of the parameters **b**, **c**, **Sigma_f'** and **epsilon_f'** of the eN curve $\epsilon_e/2 = \sigma_f/E*(2N)^b + \epsilon_f*(2N)^c$ from the Materials Database directly into the current window.

Calculate b, c Button | Experimental Points Command

Loads the values of the parameters **b**, **c**, **Sigma_f'** and **epsilon_f'** of the eN curve $\epsilon_e/2 = \sigma_f/E*(2N)^b + \epsilon_f*(2N)^c$ from the Experimental Points tab directly into the current tab.

Consider SN Curve Elbow Option

Option to consider the elbow of the SN curve (which defines no fatigue damage for stresses smaller than the corrected endurance limit $S_f = k_a * k_b * k_c * k_d * k_e * S_f'$) in the elastic portion of the eN curve. If this option is off then the elbow is ignored.

belb

Value of the **b** exponent of the **SN Curve** after the elbow (set **belb** = 0 to ignore this option).

Initial Damage

Initial damage value, before the loading history, using the Palmgreen-Miner rule.

End of Life at Damage

Total damage value that characterizes failure of the specimen. The Palmgreen-Miner rule suggests a total damage value of 1 for the end of life, but other values can be chosen by the user.

Surface Finish

Surface finish of the specimen, used to automatically calculate the endurance limit modifying factor **k_a** (the endurance limit from the SN method is used to correct the elastic component of the eN curve).

Type of Loading

Main type of loading applied to the specimen, used to automatically calculate the endurance limit modifying factor **k_c** (the endurance limit from the SN method is used to correct the elastic component of the eN curve).

Effective Diameter

Specimen cross-section diameter (or effective diameter), used to automatically calculate the endurance limit modifying factor **k_b** (the endurance limit from the SN method is used to correct the elastic component of the eN curve).

Calculate d (Effective Diameter) Button

Goes to the Calculate Effective Diameter Window, where the user can calculate the effective diameter of various cross section profiles under bending. This diameter is used to calculate the size factor **k_b** (used to correct the fatigue endurance limit **S_f'**, affecting the elastic component of the eN curve).

Su

Ultimate strength of the current material, used to automatically calculate the endurance limit modifying factor **k_a** (the endurance limit from the SN method is used to correct the elastic component of the eN curve). The default value of **Su** is loaded from the Materials Database, but it can be changed by the user.

Operating Temperature

Specimen operating temperature, used to automatically calculate the endurance limit modifying factor **k_d** (the endurance limit from the SN method is used to correct the elastic component of the eN curve).

S_f'

Uncorrected endurance limit of the material (alternate stress below which there is no fatigue damage). Note that the endurance limit is a concept normally used in the SN method, but in **ViDa** it can also be used to correct the elastic component of the eN curve.

k_a

Surface finish factor that modifies the **endurance limit** (a better surface finish increases the endurance limit). Note that the **endurance limit** and its modifying factors are originally from the SN method, but in **ViDa** they can also be used to correct the elastic component of the eN curve.

k_b

Size factor that modifies the **endurance limit** (smaller specimens have greater endurance limit than larger ones). Note that the **endurance limit** and its modifying factors are originally from the SN method, but in **ViDa** they can also be used to correct the elastic component of the eN curve.

k_c

Loading factor that modifies the **endurance limit** (depends on the main type of loading applied to the specimen). Note that the **endurance limit** and its modifying factors are originally from the SN method, but in **ViDa** they can also be used to correct the elastic component of the eN curve.

kd

Temperature factor that modifies the **endurance limit** (greater temperatures tend to bring down the endurance limit). Note that the **endurance limit** and its modifying factors are originally from the SN method, but in **ViDa** they can also be used to correct the elastic component of the eN curve.


ke

Miscellaneous factors that modify the **endurance limit** (e.g. corrosion). Be careful not to include the stress concentration factor **Kt** or **Kf** in the value of **ke**, since **Kt** and **Kf** are already taken care of in the stress calculation. Note that the **endurance limit** and its modifying factors are originally from the SN method, but in **ViDa** they can also be used to correct the elastic component of the eN curve.

eN Graph

eN curve of the material and also its elastic and plastic components. The SN curve is also plotted in order to make a comparison with the elastic component of the eN curve. The graph is updated after changes in its parameters only when the **Graph | Redraw command** is used. To expand or shrink the graph, just double-click on it.

Hysteresis Loops Tab

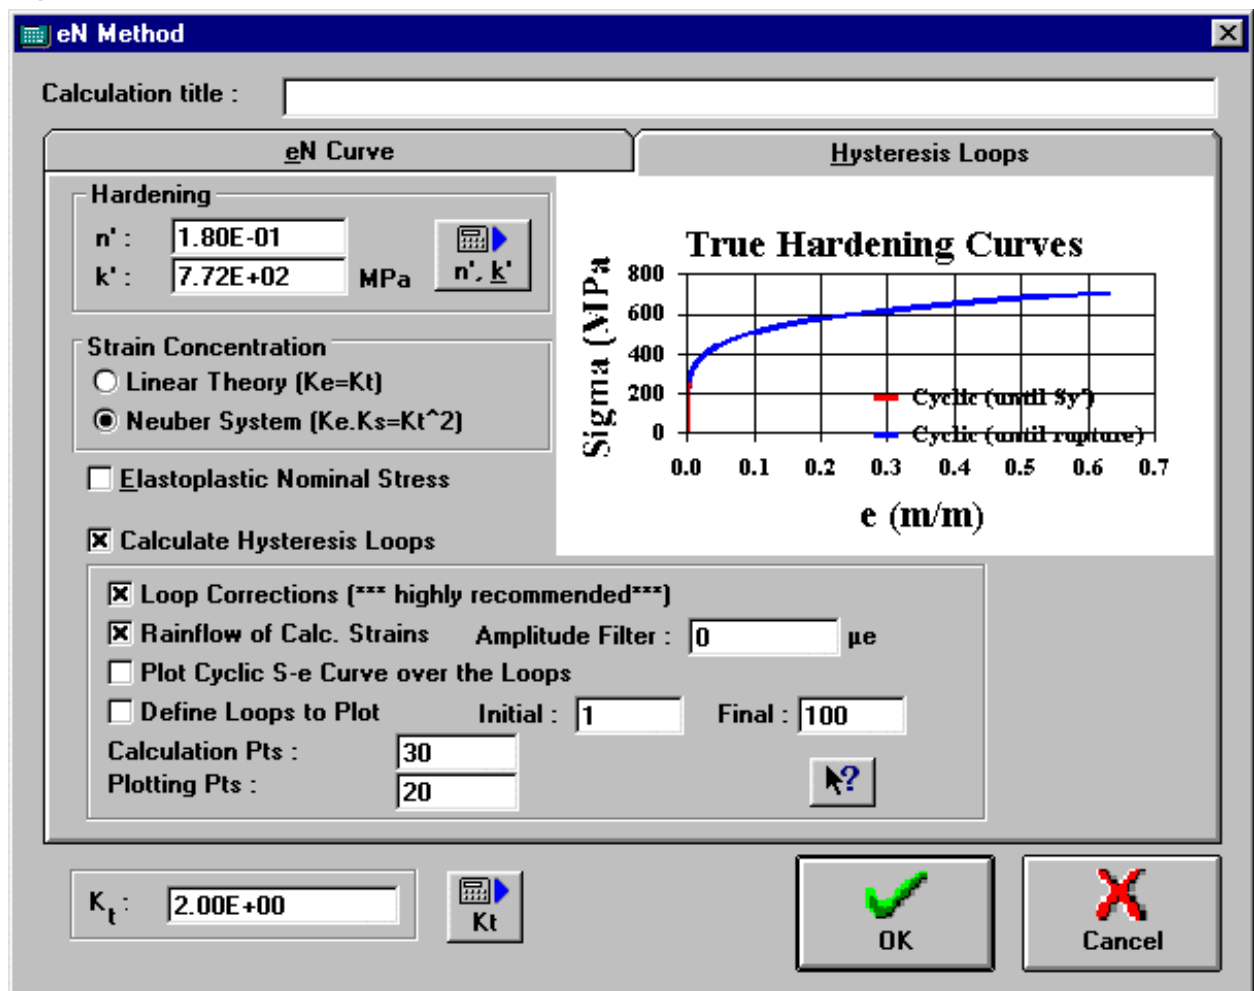

n'

Hardening exponents of the cyclic curve (using Ramberg-Osgood equation).

k'

Hardening coefficient of the cyclic curve (using Ramberg-Osgood equation).

Hardening Curve

Shows the cyclic true hardening curve of the material. Note the change in color marking on the graph the value of **Sy'**. To expand or shrink the graph, just double-click on it.

Strain Concentration Option

Strain concentration theory used when considering stress concentration factors on the hysteresis loops. Linear theory considers $K_e = K_t$ (strain concentration K_e is equal to K_t), while Neuber theory uses $K_e \cdot K_s = K_t^2$.

Elastoplastic Nominal Stress

Solves the Neuber system considering that the nominal stress is elastoplastic. This option gives more accurate results if the nominal stress is higher than S_y , but increases the computation time.

Calculate Hysteresis Loops Option

Option to or not to calculate the hysteresis loops. This option is a critical one in eN life calculations. If the option is off then the calculations are made without calculating and constructing the hysteresis loops, just directly applying the traditional eN equations (which can result in significant and probably **non-conservative** calculation errors). Especially if you have a **complex** loading history, then it is strongly recommended to set this option on in addition to the **Loop Corrections Option**, in order to obtain an accurate result.

Loop Corrections Option

Option to or not to correct the hysteresis loops using some experimentally proven criteria. It is highly recommended to set this option on because uncorrected hysteresis loops (taken directly from the hysteresis loops equations) can lead to unrealistic and probably **non-conservative** stress-strain predictions (see the Textbook "Fatigue Design under Complex Loading" for more information).

Plot Cyclic S-e Curve over the Loops Option

Option to or not to plot the stress-strain cyclic curve together with the hysteresis loops, just for visualization purposes. This curve is useful to visually compare the corrected and uncorrected hysteresis loops (set in the **Loop Corrections Option**).

Rainflow of Calculated Strains Option

Option to rainflow count the calculated strains. After the strains are calculated and the correct hysteresis loops are plotted, this option counts the peaks and valleys of the strain history using the rainflow method prior to the eN curve life calculation. The user can also input a strain amplitude filter (in **microstrains**), to discard the small events that cause no damage.

Define Loops to Plot Option

Option to define a range of hysteresis loops that the user wants to plot for visualization purposes. This range doesn't affect the calculations (the program needs to calculate ALL the hysteresis loops in any circumstances).

Number of Calculation Points

Resolution in number of points of each hysteresis loop for calculation accuracy purposes. In general 40 points is a good choice.

Number of Plotting Points

Resolution in number of points of each hysteresis loop for plotting purposes. If you're plotting too many hysteresis loops, you might have to reduce the number of plotting points for each loop. This number does not affect the calculation accuracy.

Hysteresis Loops Help Button

Shows a window with some useful information about hysteresis loops calculations.

Kt

Stress concentration factor of the specimen (relating the nominal loading history and the most stressed point). Its value can also be calculated using the **Calculate Kt Button | Typical** or the **Calculate Kt Button | Stored** commands.

Calculate Kt Button | Typical Command

Goes to the Calculate Typical Stress Concentration Factor (Kt) Window, where the user can calculate the value of **Kt** for Notched/Filleted Bars or Shafts of any dimensions.

Calculate Kt Button | Stored Command

Goes to the Smart Calculator window, where the user can calculate the value of **Kt** using the equations from the Kt Equations Database (or any other equation defined by the user).

OK Button

Calculates damage by the eN Method, using the **Loading Window** loadings, the material properties and the chosen options, and goes back to the Main Window.


Cancel Button

Cancels the eN Method calculation and goes back to the Main Window.

Calculate Life (eN) Simplified Window

Calculates the damage and remaining life using the eN Method (recommended in the presence of plastic deformations at the critical point, normally a notch root) and the **loading history** from the Main Window. The user can alter the material eN curve equation and calculate and input stress concentration factors. The default eN curve data in this window comes from the Materials database and the **Kt value** is maintained from your last calculation. Many more options are available in the extended Calculate Life (eN) window, using the **Tools | Options command** in the Main Window and the **Extended** option in the **Modeling** tab, prior to calculating life.

After tuning the desired properties, just click on the **OK button** to return to the Main Window and perform the calculations.

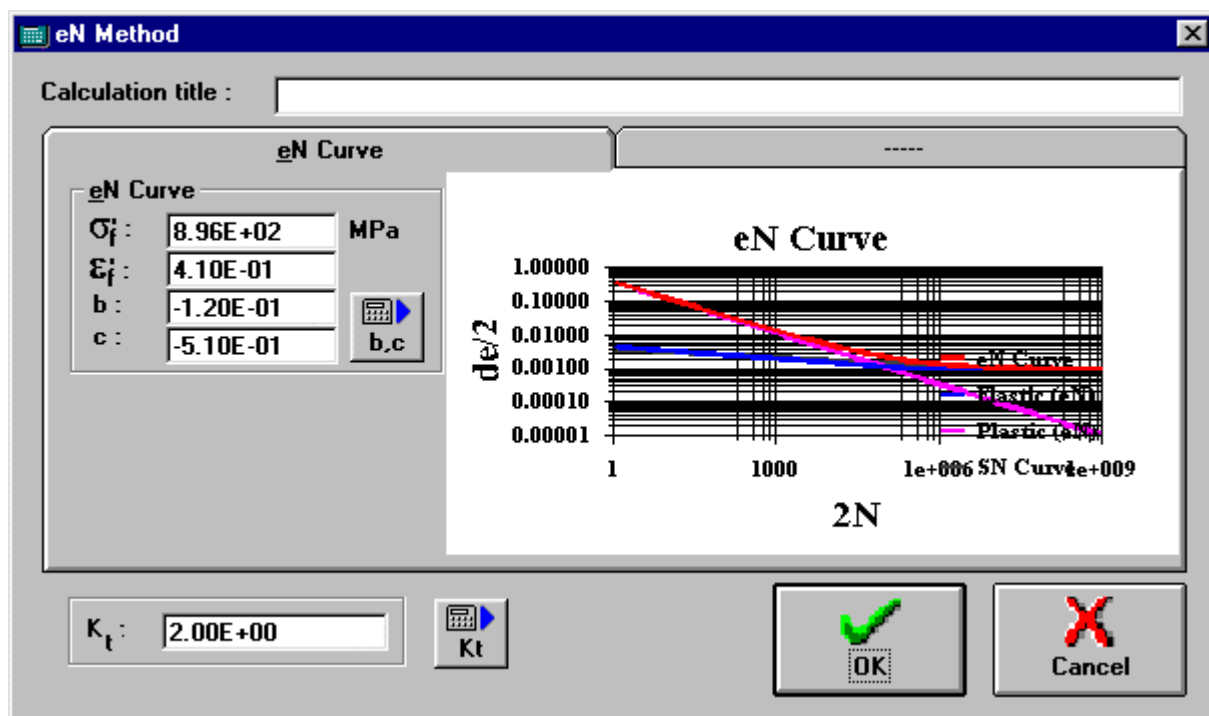

To check information on the available commands, please refer to the correspondent **extended** window.

Crack Growth (da/dN) Extended Window

Calculates unidimensional crack growth using the da/dN Method and the **loading history** from the Main Window. The user can input specimen characteristics (such as its **total width** and **crack initial size**), alter the material **Paris** or **Elber** law constants or include a new **da/dN** or **stress intensity factor equation** (which can be stored in the da/dN or KI Equations Database), input crack growth **retard effects**, **choose to use the RMS approach in the calculation** and many other options.

Some of the default data in this window comes from the Materials database and the rest is maintained from your last calculation. A simplified Crack Growth (da/dN) window (recommended for beginners) is also available by using the **Tools | Options command** in the Main Window and choosing the **Simplified** option in the **Modeling** tab, prior to calculating the crack growth. After tuning the desired properties, just click on the **OK button** to return to the Main Window and perform the calculations.

da/dN Curve Tab

Crack Growth (da/dN)

Calculation title : _____

da/dN Curve

ΔK_{th} : **7.00E+00** MPa√m
 K_{Ic} : **1.30E+02** MPa√m

☒ Paris A: **4.77E-07** Paris
m: **2.00E+00**

☒ Elber A: **5.33E-07** Elber
m: **2.00E+00**

☐ Walker [=Paris/(1-R')^p]
☐ Mod.Walker [=Elber/(1-R')^p]
p (pWa): **6.00E-01**

☒ other: **Typical**

Forman Mod.

$$\frac{da}{dN} = A [\Delta K - \Delta K_{th} \cdot (1 - R)]^m$$

Database

da/dN...
Fit

da/dN Curve (mm/cycle)

Y-axis: da/dN (mm/cy) [0.0000001 to 0.1000000]
X-axis: deltaK (MPa√m) [8 to 100]

Legend: Elber & Mod.Walker(R=0) (blue line), Forman Mod(R=0) (pink line)

Parameters Table:

A: 5.29E-06	H: 7.50E-01	r: 5.00E+00	z: 8.00E-01
b: 1.00E+02	I: 1.00E+00	s: 1.00E+00	
B: 1.30E+02	L: -5.00E-01	t: 3.00E+00	
d: 5.00E+02	m: 2.00E+00	v: 3.00E+01	
D: 1.00E+03	n: 1.00E+00	x: 1.00E+00	
h: 1.00E+01	p: 6.00E-01	y: 3.50E+00	

Buttons: Open, Save, OK, Cancel

Calculation Title

Title of the calculation that is about to be performed. This is an optional field, useful to identify and compare results from different calculations in the Calculation Logbook Window.

deltaKth (dKth)

Threshold Stress Intensity Factor of the material (value of deltaK below which the crack does not propagate). The default value of deltaKth is loaded from the Materials Database, but it can be changed by the user (be careful with the Elber da/dN equation since it's very sensitive to deltaKth).

KIc

Critical (Rupture) Stress Intensity Factor of the material. The default value of **KIc** is loaded from the Materials Database, but it can be changed by the user.

Paris Option

Option that let the user choose the Paris equation ($da/dN = A \cdot \Delta K^m$) among the da/dN equations he wants to use in the crack growth calculation. Checking all options makes the program calculate crack growth independently using all da/dN equations, but the calculation takes longer.

A (APa)

Coefficient **A** from the Paris equation ($da/dN = A \cdot \Delta K^m$). The default value of **A** is loaded from the Materials Database, but it can be changed by the user.

m (mPa)

Exponent **m** from the Paris equation ($da/dN = A \cdot \Delta K^m$). The default value of **m** is loaded from the Materials Database, but it can be changed by the user.

Calculate Paris Button | Materials Database Values Command

Loads the values of the **A** and **m** coefficients of the Paris da/dN equation $da/dN = A \cdot \Delta K^m$ from the Materials Database directly into the current window.

Calculate Paris Button | Fitted from Experimental Points Command

Loads the values of the **A** and **m** coefficients of the Paris da/dN equation $da/dN = A \cdot \Delta K^m$ from the Experimental Points tab in the Materials Database directly into the current window.

Calculate Paris Button | Rolfe-Barson Command

Calculates the **A** and **m** coefficients of the Paris da/dN equation $da/dN = A \cdot \Delta K^m$ from Rolfe-Barson's estimates that depend only on the steel microstructure.

Elber Option

Option that let the user choose the Elber equation ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m$) among the da/dN equations he wants to use in the crack growth calculation. Checking all options makes the program calculate crack growth independently using all da/dN equations, but the calculation takes longer.

A (AEI)

Coefficient **A** from the Elber equation ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m$). The default value of **A** is loaded from the Materials Database, but it can be changed by the user.

m (mEI)

Exponent **m** from the Elber equation ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m$). The default value of **m** is loaded from the Materials Database, but it can be changed by the user.

Calculate Elber Button | Materials Database Values Command

Loads the values of the **A** and **m** coefficients of the Elber da/dN equation $da/dN = A \cdot (\Delta K - \Delta K_{th})^m$ from the Materials Database directly into the current window.

Calculate Elber Button | Fitted from Experimental Points Command

Loads the values of the **A** and **m** coefficients of the Elber da/dN equation $da/dN = A \cdot (\Delta K - \Delta K_{th})^m$ from the Experimental Points tab in the Materials Database directly into the current window.

Walker Option

Option that let the user choose the Walker equation ($da/dN = A \cdot \Delta K^m / (1-R)^p$) among the da/dN equations he wants to use in the crack growth calculation. Checking all options makes the program calculate crack growth independently using all da/dN equations, but the calculation takes longer.

Modified Walker Option

Option that let the user choose the Modified Walker equation ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m / (1-R)^p$) among the da/dN equations he wants to use in the crack growth calculation. Checking all options makes the program calculate crack growth independently using all da/dN equations, but the calculation takes longer.

p (pWa)

Exponent **p** from the Walker ($da/dN = A \cdot \Delta K^m / (1-R)^p$) and Modified Walker ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m / (1-R)^p$) equations. The default value of **p** is loaded from the Materials Database, but it can be changed by the user.

Other Equation Option

Option that let the user choose the da/dN equation shown in the da/dN Formula field among the da/dN equations he wants to use in the crack growth calculation. Checking all options makes the program calculate crack growth independently using all da/dN equations, but the calculation takes longer.

Typical / Database Option

Option to use typical da/dN equations (faster computation time) or equations retrieved from the Equations Database.

Open da/dN Button

Shows the typical da/dN equation window, where the user can choose from different equations.

Fit Button

Automatically adjusts the constants of the Typical da/dN equation to the database values of Paris and Elber of the current material.

da/dN Equation Name

List of names of the available da/dN equations from the [Equations Database](#). Just click on the desired name to load its Formula.

da/dN Formula

Formula of the da/dN equation loaded from the [Equations Database](#) through the **da/dN Equation Names list**. The formula can also be edited by the user and even added to the [Equations Database](#) (by using the **Add button**). You can also easily tune in the coefficients of the **da/dN Formula** by interactively editing the **Variables Table** and using the **Graph | Redraw command** until the curve is visually compatible with the Paris and Elber curves in the **da/dN graph**.

Calculate da/dN Button

Calculates the value of da/dN for the current **Formula** and **Variables Table** values. The user is asked to input the stress intensity factor range deltaK and the ratio R=Kmin/Kmax for which he wants to calculate the da/dN value.

Save As New da/dN Button

Adds the da/dN equation present in the **da/dN Formula field** to the [Equations Database](#). The user will be asked to enter a name for this new equation.

Equation Interpreter Help Button

Shows (just for reference) a window with the equations syntax and all the material properties that can be literally used in the equations.

Variables Table

Table containing variables that can be set by the user. To set a variable, just click on it and type its new value. If these variables are present in the **da/dN** (or **KI**) Formula then their values are used in the calculations.

Open (Variables) Button

Loads a previously saved [Variables Table file \(*.var\)](#) containing the values of all variables from the **Variables Table**.

Save (Variables) Button

Saves the values of the variables from the **Variables Table** to a [Variables Table file \(*.var\)](#).

da/dN Graph

da/dN curves of the material using Paris and Elber laws (and a **third da/dN equation chosen by the user** when using the **Extended Modeling option**). Note that the value of **deltaKth** substantially affects the Elber law curve. The graph is updated after changes in its parameters only after the **Graph | Redraw command** is used. To expand or shrink the graph, just double-click on it.

Crack Tab

Crack Growth (da/dN)

Calculation title :

da/dN Curve

Initial Crack (a) : 1.00E+00 mm
Final Value : a = 0.00E+00 mm
(if Final Value=0 criterion is ignored)
Width (w) : 5.00E+02 mm

Crack

strip single-edge crack - Splitting forces (N)

Retardation/Options

Typical

Inf. strip single-edge crack - Splitting forces (WOL-specimen)
[a,w,2h=0.972w,a/w>0.1,?%]

Database

Charted

$$K_I = \frac{P}{t\sqrt{w}} \sqrt{\pi} \frac{(2+a/w)}{(1-a/w)^{1.5}} [0.4554 + 4.9976a/w - 17.0555(a/w)^2 + 23.1814(a/w)^3 - 13.6252(a/w)^4 + 2.7933(a/w)^5]$$

$$P = \sigma \cdot (w \cdot t)$$

Variables Table:

A: 5.29E-06	H: 7.50E-01	r: 5.00E+00	z: 8.00E-01
b: 1.00E+02	I: 1.00E+00	s: 1.00E+00	
B: 1.30E+02	L: -5.00E-01	t: 3.00E+00	
d: 5.00E+02	m: 2.00E+00	v: 3.00E+01	
D: 1.00E+03	n: 1.00E+00	x: 1.00E+00	
h: 1.00E+01	p: 6.00E-01	y: 3.50E+00	

Open Save OK Cancel

Initial Crack (a)

Initial size of the crack length **a**.

Final Value (a)

Size of the crack length **a** above which the calculation stops. This is one of the criteria to stop the calculations, and it can be used for instance to calculate the number of cycles that it takes to reach a certain crack size. If you don't want to use this criterion, just set it to a very high value (for unidimensional crack growth, set it to greater than the **specimen width w value**).

Width (w)

Width of the considered specimen (specimen dimension in the crack growth direction for unidimensional crack growth), used in the calculation of the stress intensity factor.

Typical / Database / Charted Option

Option to use typical KI, KII or KIII equations (faster computation time), equations retrieved from the Equations Database, or values interpolated using a chart containing the geometry factor beta for each crack size.

Open KI Button

Shows the typical KI equation window, where the user can choose from different KI equations.

Open KII, KIII Button

Shows the typical KII and KIII equation window, where the user can choose from different equations.

KI Equation Name

List of names of the available **KI** (stress intensity factor) equations from the Equations Database. Just click on the desired name to load its **Formula**.

KI Formula

Formula of the **KI** (stress intensity factor) equation loaded from the Equations Database through the **KI Equation Names list**. The formula can also be edited by the user and even added to the Equations Database (using the **Save As New button**).

Calculate KI Button

Calculates the value of **KI** (stress intensity factor) for the current **Formula** and **Variables Table** values. The user is asked to input the stress variation deltaSigma (S) for which he wants to calculate the **KI** value.

Save As New Button

Adds the **KI** (stress intensity factor) equation present in the **KI Formula field** to the Equations Database. The user will be asked to enter a name for this new equation.

KI Chart

Chart containing the geometry factor beta for each crack size, which will be interpolated to calculate KI.

New / Open / Save / Number of Rows Buttons

Commands to create a new, open, save or define the number of rows of the charted KI table. The KI charts can be loaded from *.ki files or from files generated by the Quebra Finite Element software.



View Button

Views the drawing of the specimen generated by the Quebra Finite Element software.


Retardation/Options Tab

Crack Growth [da/dN]


Calculation title :

da/dN Curve	Crack	Retardation/Options																								
Retardation <input checked="" type="radio"/> No Retardation  <input type="radio"/> Wheeler : <input type="text" value="1.30E+00"/> <input type="radio"/> Mod. Wheeler : <input type="text" value="6.50E-01"/> <input type="radio"/> da/dN Factor : <input type="text" value="[Zi/(Zol+aol-ai))^wh"/> <input type="button" value="Open"/> <input type="radio"/> deltaK Factor : <input type="text" value="[Zi/(Zol+aol-ai))^whm"/> <input type="button" value="Open"/> <input type="radio"/> Effective R = <input type="text" value="1 - dK / (2*Kmx - Kol*([Zol+aol-ai]/Zol)^0.5)"/> <input type="button" value="Open"/>																										
Integration Method <input checked="" type="radio"/> Cycle by Cycle (Sequential) <input type="radio"/> ΔK_{rms} (No Retardation) Resolution : <input type="text" value="0.1"/> % 																										
<table border="1"> <tbody> <tr> <td>A: 5.29E-06</td> <td>H: 7.50E-01</td> <td>r: 5.00E+00</td> <td>z: 8.00E-01</td> </tr> <tr> <td>b: 1.00E+02</td> <td>I: 1.00E+00</td> <td>s: 1.00E+00</td> <td></td> </tr> <tr> <td>B: 1.30E+02</td> <td>L: -5.00E-01</td> <td>t: 3.00E+00</td> <td></td> </tr> <tr> <td>d: 5.00E+02</td> <td>m: 2.00E+00</td> <td>v: 3.00E+01</td> <td></td> </tr> <tr> <td>D: 1.00E+03</td> <td>n: 1.00E+00</td> <td>x: 1.00E+00</td> <td></td> </tr> <tr> <td>h: 1.00E+01</td> <td>p: 6.00E-01</td> <td>y: 3.50E+00</td> <td></td> </tr> </tbody> </table> <div style="display: flex; justify-content: space-around; align-items: center;"> <div> <input type="button" value="Open"/> <input type="button" value="Save"/> </div> <div> <input checked="" type="button" value="OK"/> <input type="button" value="Cancel"/> </div> </div>			A: 5.29E-06	H: 7.50E-01	r: 5.00E+00	z: 8.00E-01	b: 1.00E+02	I: 1.00E+00	s: 1.00E+00		B: 1.30E+02	L: -5.00E-01	t: 3.00E+00		d: 5.00E+02	m: 2.00E+00	v: 3.00E+01		D: 1.00E+03	n: 1.00E+00	x: 1.00E+00		h: 1.00E+01	p: 6.00E-01	y: 3.50E+00	
A: 5.29E-06	H: 7.50E-01	r: 5.00E+00	z: 8.00E-01																							
b: 1.00E+02	I: 1.00E+00	s: 1.00E+00																								
B: 1.30E+02	L: -5.00E-01	t: 3.00E+00																								
d: 5.00E+02	m: 2.00E+00	v: 3.00E+01																								
D: 1.00E+03	n: 1.00E+00	x: 1.00E+00																								
h: 1.00E+01	p: 6.00E-01	y: 3.50E+00																								

Retardation



Retardation



Plastic Zone

☒ **Plane Stress** $Z_i = \frac{1}{2\pi} \cdot \left(\frac{K_{mx}}{S_y} \right)^2$
☐ **Plane Strain**
☐ **User**

Retardation Effect

Option of retardation effects due to overloads.

Retardation Effect Help Button

Shows a window with some information about the Retardation Effect models used by ViDa.

No Retardation Option

Option not to consider crack retardation effects.

Wheeler Option

Option to use the Wheeler retard effect correction. Here da/dN is multiplied by the factor $(PZ_i/(PZ_{ol}+a_{ol}-a_i))^w$, where **w** is the Wheeler exponent. **PZ_{ol}** and **a_{ol}** are the plastic zone and crack sizes on the overload, and **PZ_i** and **a_i** are the current plastic zone and crack sizes.

Modified Wheeler Option

Option to use the Modified Wheeler retard effect correction. Here deltaK is multiplied by the factor $(PZ_i/(PZ_{ol}+a_{ol}-a_i))^w$, where **w** is the Modified Wheeler exponent. **PZ_{ol}** and **a_{ol}** are the plastic zone and crack sizes on the overload, and **PZ_i** and **a_i** are the current plastic zone and crack sizes.

da/dN Factor Option

Generalization of the Wheeler Option, where da/dN is multiplied by an arbitrary equation defined by the user. To choose from some pre-defined equations, press the Open button next to this option.

deltaK Factor Option

Generalization of the Modified Wheeler Option, where deltaK is multiplied by an arbitrary equation defined by the user. To choose from some pre-defined equations, press the Open button next to this option.

Effective R Option

Option to model crack retardation effects by changing the value of the load ratio R (=K_{mn}/K_{mx}) to an effective value. To choose from some pre-defined equations (including the Willemborg model), press the Open button next to this option.

Minimum Overload

Minimum overload percentage that activates the calculation with retardation effects. If the overload percentage is smaller than this value, the retardation effects are neglected. Use the value 0% to always consider the retardation effects.

Retardation Resolution

Percentage of ($PZ_{ol} - PZ_i$) on the crack growth for which the retardation factor is recalculated (PZ_{ol} is the plastic zone on the overload and PZ_i is the current plastic zone). In order to speed up the calculations, the program only recalculates the retardation factor when the crack has grown more than this percentage of the distance between the overload and current plastic zones.

Retardation Graphs

Graphs of the retardation equations. The top graph plots the Wheeler, Modified Wheeler, da/dN Factor and ΔK Factor, while the bottom graph plots the Effective R for different load ratios R.

Plastic Zone

Equation used to calculate the size of the plastic zone ahead of the crack tip (for retardation calculations). The user can choose among plane stress, plane strain, or define a different factor for the equation of the plastic zone size.

Sequential Option

Option for sequential crack growth calculations. Click on this option to let **ViDa** calculate crack growth sequentially from the loading history (instead of using the **Root Mean Square approach**).

Krms Option

Option for crack growth calculations using the Root Mean Square approach. Click on this option to let **ViDa** calculate a RMS stress value of all the loading history and then integrate the da/dN equation to calculate the crack growth (instead of **sequentially calculating the crack growth for each loading**). Note that **this option cannot consider retardation effects**.

Resolution

For the Sequential option, this is the increase percentage of the square root of the crack size for which the Stress Intensity Factor **KI** is recalculated. In order to speed up the calculations, the program only recalculates **KI** when the square root of the crack size has grown more than this percentage. Typical values are in the 0.1 – 1.0% range. For the Krms option, this resolution is the integration step of Simpson's integral rule.

Help Button

Shows a window with some information about the square root of the crack size criterion.

OK Button


Calculates crack growth using the da/dN Method for the **Loading Window** loadings using the material properties and the chosen options, and goes back to the Main Window.

Cancel Button

Cancels the crack growth calculation and goes back to the Main Window.

Typical da/dN Curves Window


Lets the user choose from typical da/dN equations. To select the desired equation, just click on the respective figure.

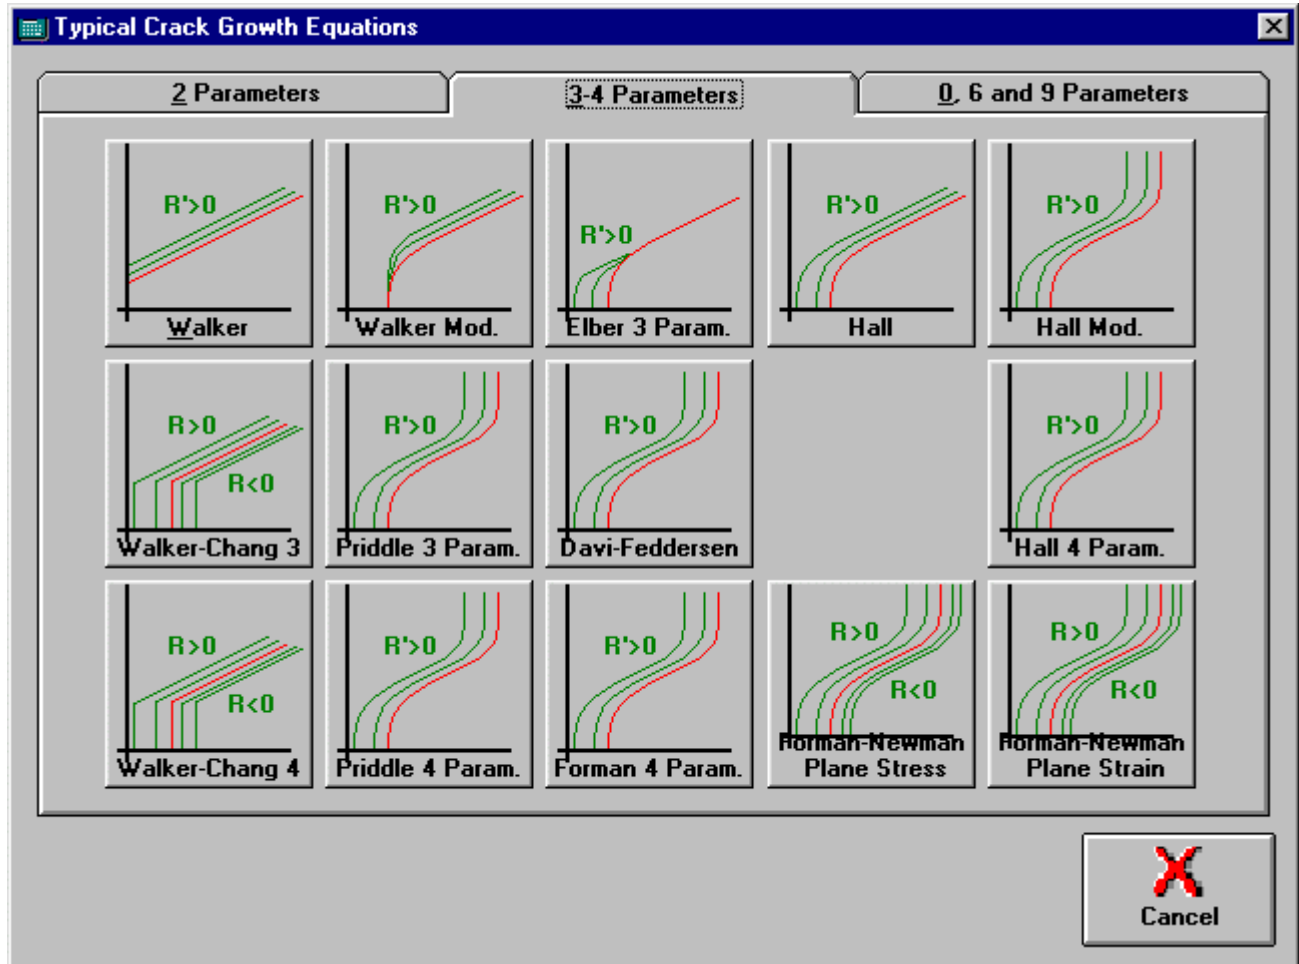


Typical Stress Intensity Factor Window

Lets the user choose from typical stress intensity factor equations, including KI, KII, KIII and KI 2D (for bidimensional crack growth) equations. To select the desired equation, just click on the desired specimen.


KI Equations

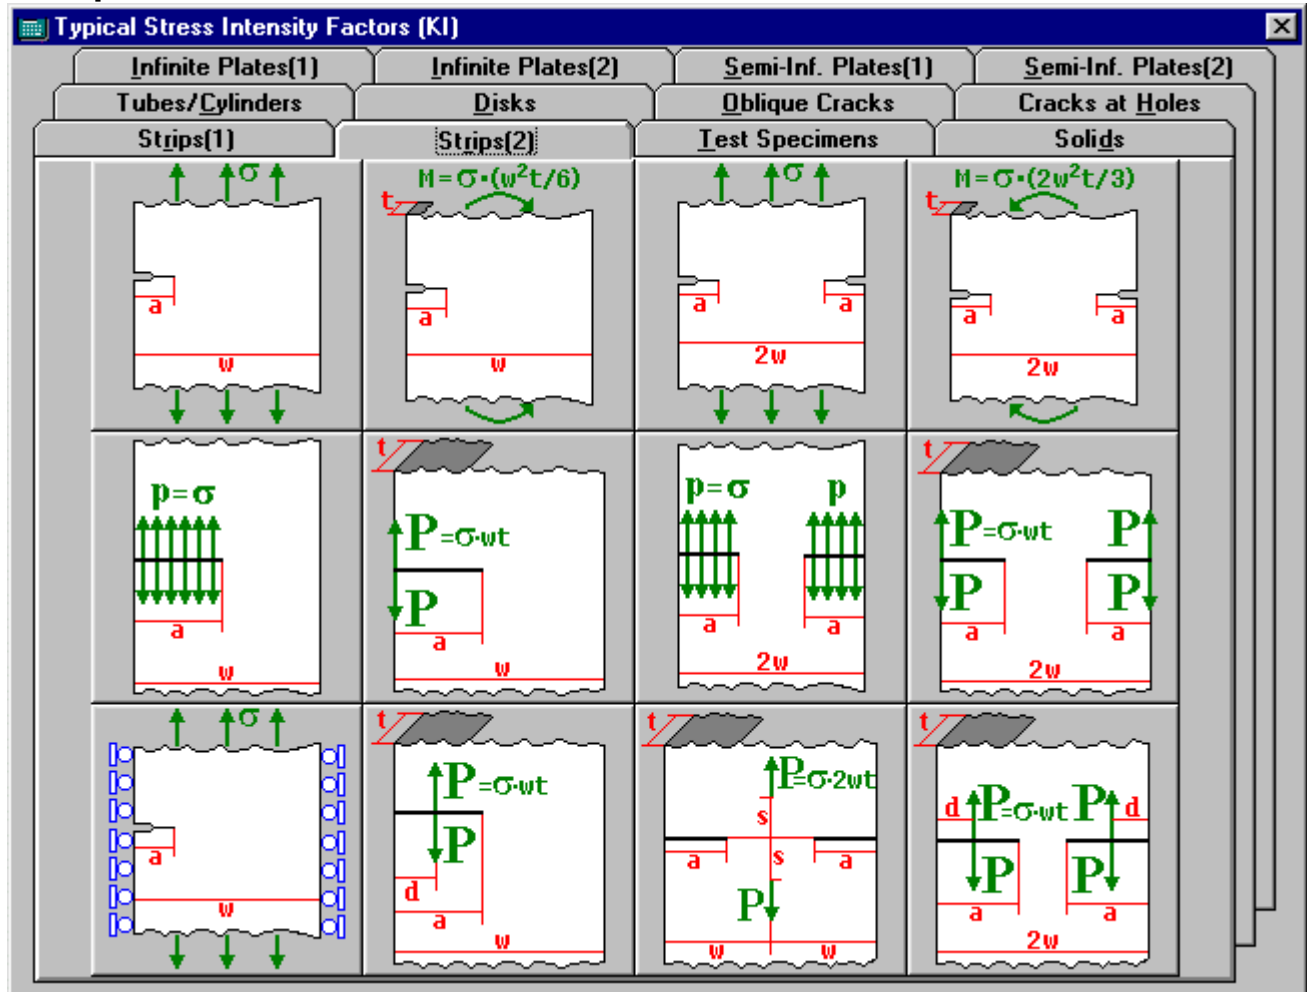

KII and KIII Equations

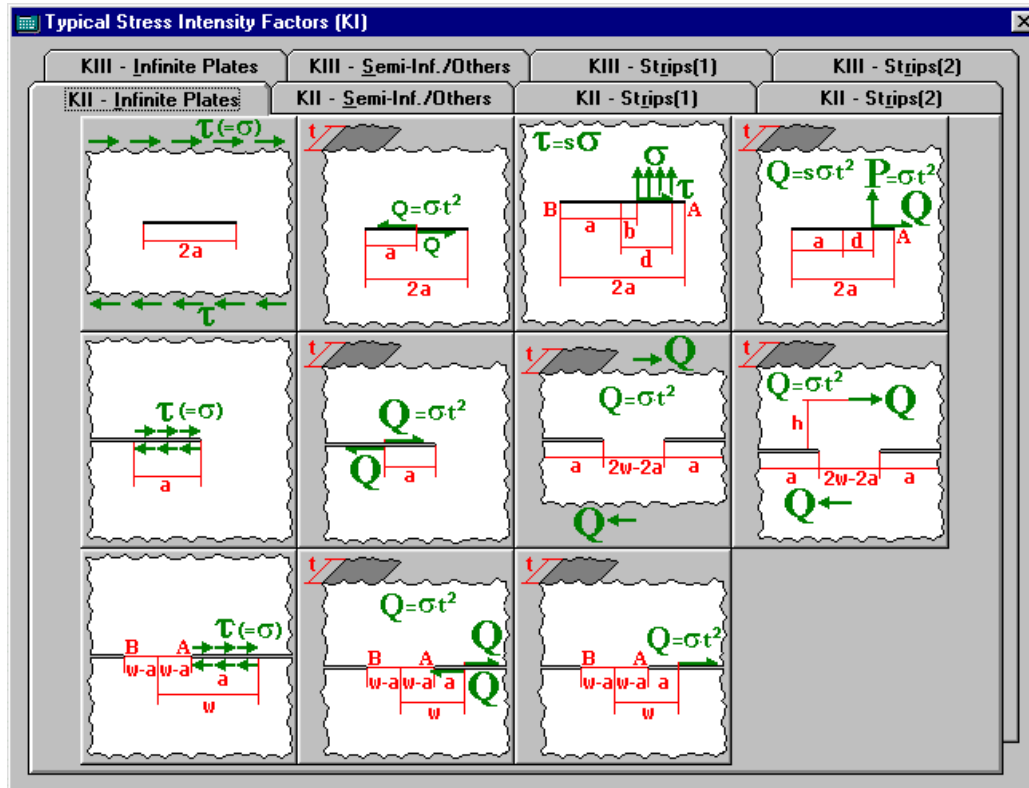

KI 2D Equations

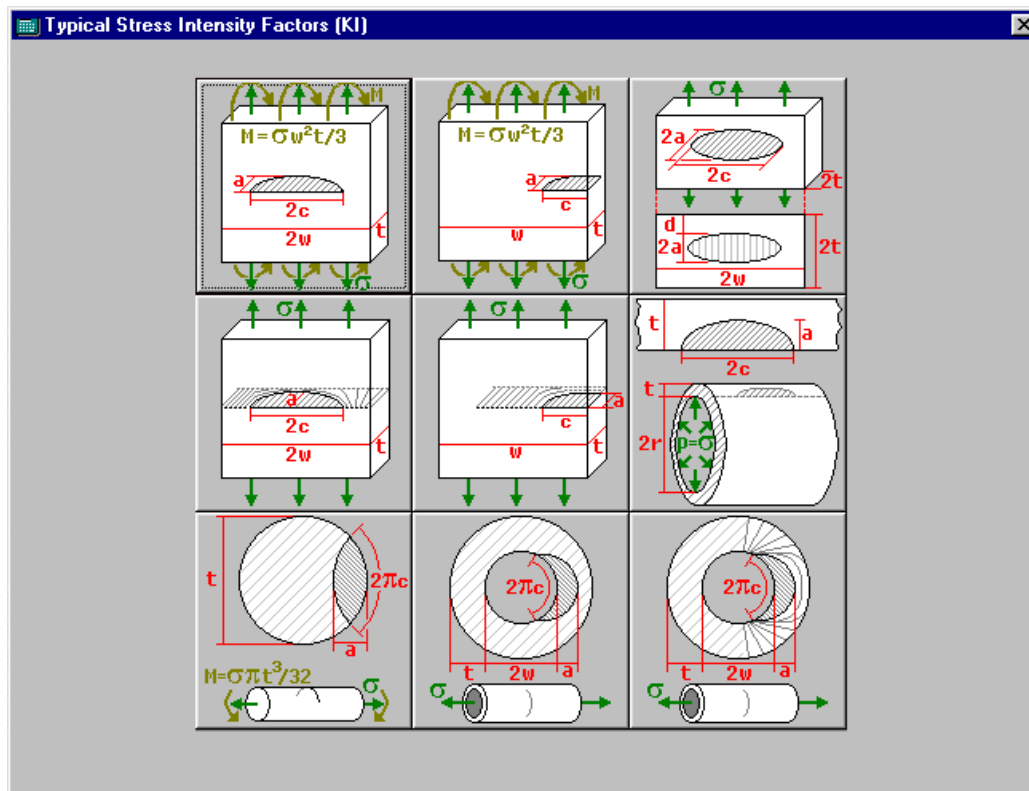


Crack Growth (da/dN) Simplified Window

Calculates unidimensional crack growth using the da/dN Method and the **loading history** from the Main Window. The user can input specimen characteristics (such as its **total width** and **crack initial size**), alter the material **Paris** or **Elber** law constants and **choose a stress intensity factor equation** (loaded from the KI Equations Database).

Some of the default data in this window comes from the Materials database and the rest is maintained from your last calculation. Many more options are available in the extended Crack Growth (da/dN) window, which is available by using the **Tools | Options | Simplified command** in the Main Window prior to calculating the crack growth.

After tuning the desired properties, just click on the **OK button** to return to the Main Window and perform the calculations.

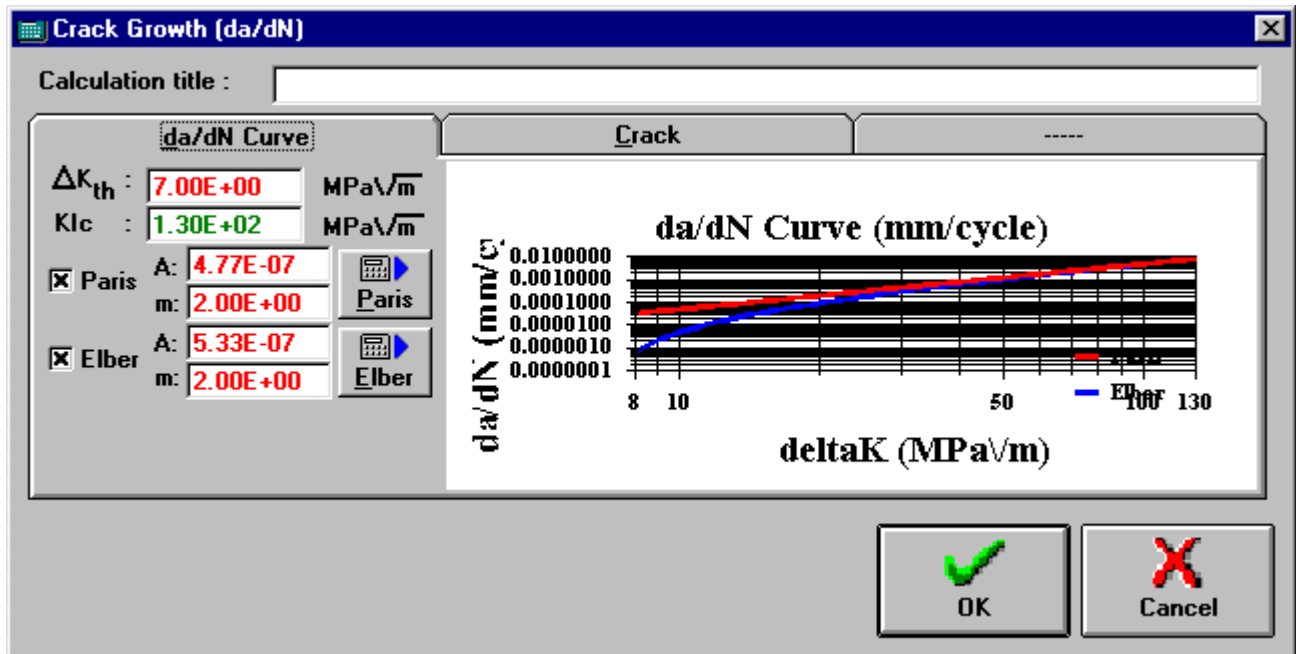

The screenshot shows the 'Crack Growth (da/dN)' window. The 'Calculation title' field is empty. The 'da/dN Curve' tab is active, displaying input parameters: Initial Crack (a) is 1.00E+00 mm, Final Value : a = 0.00E+00 mm. A note states '(if Final Value=0 criterion is ignored)'. The Width (w) is 5.00E+02 mm. The 'Crack' tab is also visible. The 'OK' and 'Cancel' buttons are at the bottom right.

To check information on the available commands, please refer to the correspondent **extended** window.


Bidimensional Crack Growth (da/dN and dc/dN) Window

Calculates bidimensional crack growth using the da/dN Method (combined with elliptical cracks stress intensity factor equations) and the **loading history** from the Main Window. The cracks are assumed elliptical in shape, with semi-axis **a** and **c**. The **corner crack** is assumed to be a quart ellipsis, the **surface crack** a semi ellipsis and the **internal crack** a full ellipsis. The cracks can change the **a/c** ratio during their propagation, but remain elliptical.

The user can input specimen dimensions and 2D-crack characteristics (such as its initial type and dimensions), alter the material **Paris** or **Elber** law constants or include a **new da/dN equation** (which is stored in the da/dN Equations Database), input crack growth **retard effects**, choose to **use the RMS approach** in the calculation, define desired output graphs to be plotted after the calculation and many other options.

Some of the default data in this window comes from the Materials database and the rest is maintained from your last calculation. This window is only available with the **Extended Modeling option** from the Options Window. After tuning the desired properties, just click on the **OK button** to return to the Main Window and perform the calculations.

da/dN Curve Tab

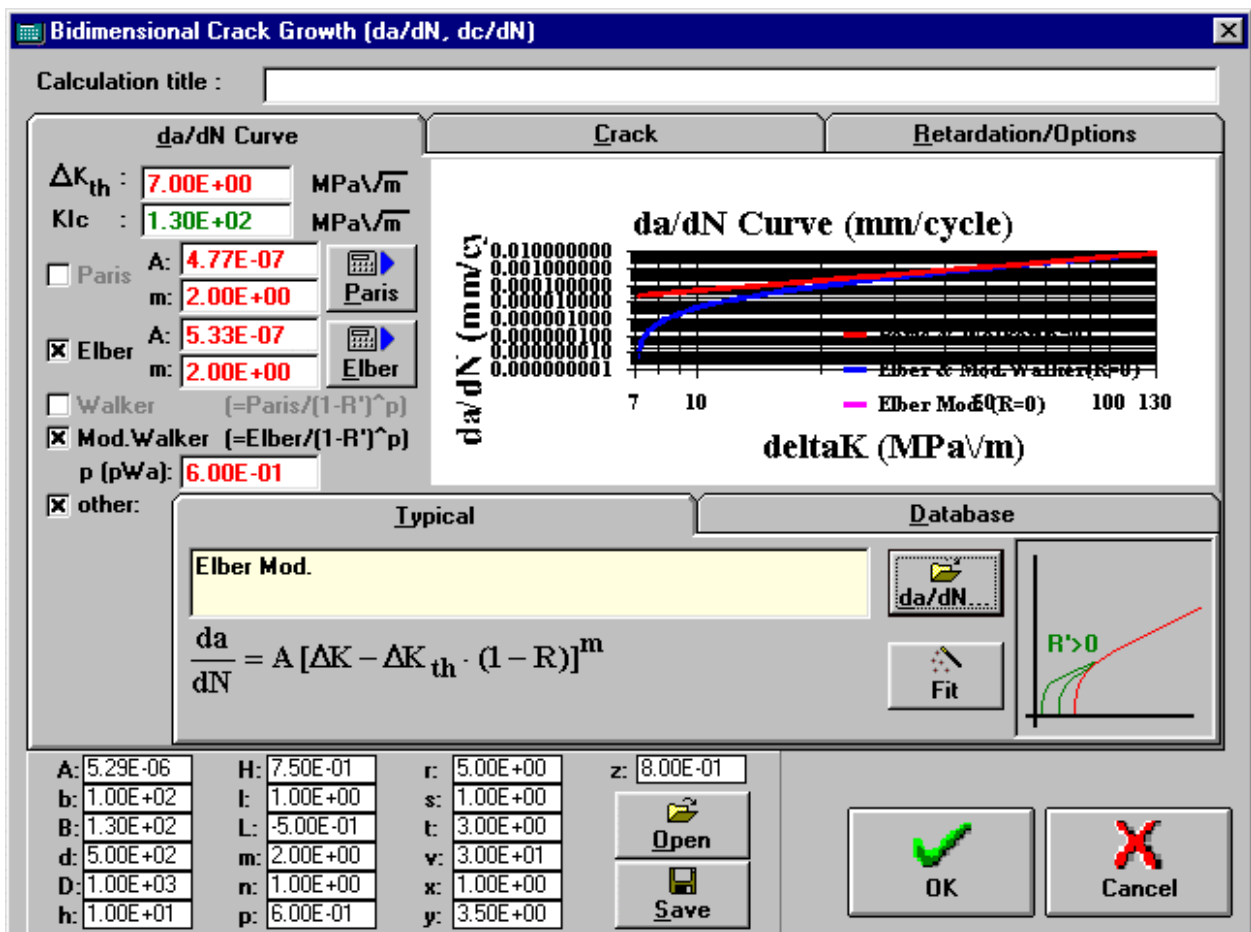

Calculation Title

Title of the calculation that is about to be performed. This is an optional field, useful to identify and compare results from different calculations in the Calculation Logbook Window.

deltaKth (dKth)

Threshold Stress Intensity Factor of the material (value of deltaK below which the crack does not propagate). The default value of deltaKth is loaded from the Materials Database, but it can be changed by the user (be careful with the Elber da/dN equation since it's very sensitive to deltaKth).

KIc

Critical (Rupture) Stress Intensity Factor of the material. The default value of **KIc** is loaded from the Materials Database, but it can be changed by the user.

Elber Option

Option that let the user choose the Elber equation ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m$) among the da/dN equations he wants to use in the crack growth calculation. Checking all options makes the program calculate crack growth independently using all da/dN equations, but the calculation takes longer.

A (AEI)

Coefficient **A** from the Elber equation ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m$). The default value of **A** is loaded from the Materials Database, but it can be changed by the user.

m (mEI)

Exponent **m** from the Elber equation ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m$). The default value of **m** is loaded from the Materials Database, but it can be changed by the user.

Calculate A, m (Elber) Button | Materials Database Values Command

Loads the values of the **A** and **m** coefficients of the Elber da/dN equation $da/dN = A \cdot (\Delta K - \Delta K_{th})^m$ from the Materials Database directly into the current window.

Calculate A, m (Elber) Button | Fitted from Experimental Points Command

Loads the values of the **A** and **m** coefficients of the Elber da/dN equation $da/dN = A \cdot (\Delta K - \Delta K_{th})^m$ from the Experimental Points tab in the Materials Database directly into the current window.

Modified Walker Option

Option that let the user choose the Modified Walker equation ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m / (1-R)^p$) among the da/dN equations he wants to use in the crack growth calculation. Checking all options makes the program calculate crack growth independently using all da/dN equations, but the calculation takes longer.

p (pWa)

Exponent **p** from the Modified Walker ($da/dN = A \cdot (\Delta K - \Delta K_{th})^m / (1-R)^p$) equations. The default value of **p** is loaded from the Materials Database, but it can be changed by the user.

Other Equation Option

Option that let the user choose the da/dN equation shown in the da/dN Formula field among the da/dN equations he wants to use in the crack growth calculation. Checking all options makes the program calculate crack growth independently using all da/dN equations, but the calculation takes longer.

Typical / Database Option

Option to use typical da/dN equations (faster computation time) or equations retrieved from the Equations Database.

Open da/dN Button

Shows the typical da/dN equation window, where the user can choose from different equations.

Fit Button

Automatically adjusts the constants of the Typical da/dN equation to the database values of Paris and Elber of the current material.

da/dN Equation Name

List of names of the available da/dN equations from the Equations Database. Just click on the desired name to load its **Formula**.

da/dN Formula

Formula of the da/dN equation loaded from the Equations Database through the **da/dN Equation Names list**. The formula can also be edited by the user and even added to the Equations Database (by using the **Add button**). You can also easily tune in the coefficients of the **da/dN Formula** by interactively editing the **Variables Table** and using the **Graph | Redraw command** until the curve is visually compatible with the Paris and Elber curves in the **da/dN graph**.

Calculate da/dN Button

Calculates the value of da/dN for the current **Formula** and **Variables Table** values. The user is asked to input the stress intensity factor range ΔK and the ratio $R = K_{min}/K_{max}$ for which he wants to calculate the da/dN value.

Save As New (da/dN) Button

Adds the da/dN equation present in the **da/dN Formula field** to the Equations Database. The user will be asked to enter a name for this new equation.

Equation Interpreter Help Button

Shows (just for reference) a window with the equations syntax and all the material properties that can be literally used in the equations.

Variables Table

Table containing variables that can be set by the user. To set a variable, just click on it and type its new value. If these variables are present in the **da/dN** (or **KI**) Formula then their values are used in the calculations.

Open (Variables) Button

Loads a previously saved Variables Table file (*.var) containing the values of all variables from the **Variables Table**.

Save (Variables) Button

Saves the values of the variables from the **Variables Table** to a Variables Table file (*.var).

da/dN Graph

da/dN curves of the material using Paris and Elber laws (and a **third da/dN equation chosen by the user** when using the **Extended Modeling option**). Note that the value of **deltaKth** substantially affects the Elber law curve. The graph is updated after changes in its parameters only after the **Graph | Redraw command** is used. To expand or shrink the graph, just double-click on it.

Crack Tab

Bidimensional Crack Growth (da/dN, dc/dN)

Calculation title :

da/dN Curve

Initial Crack (a) : mm
Final Value : a = mm
Initial Crack (c) : mm
Final Value : c = mm
(if Final Value=0 criterion is ignored)
Width (w) : mm

Crack

t. plate semi-elliptic surface crack - Tension

beta(a) beta(c)

Retardation/Options

Typical

Rect. plate semi-elliptic surface crack - Tension & Bending [2c,a, 2w,t]

Database

KI...

Tension Factor :
Bending Factor :

$M = \sigma w^2 t / 3$

a, 2c, 2w, t

A: 5.29E-06 H: 7.50E-01 r: 5.00E+00 z: 8.00E-01
b: 1.00E+02 l: 1.00E+00 s: 1.00E+00
B: 1.30E+02 L: -5.00E-01 t: 3.00E+00
d: 5.00E+02 m: 2.00E+00 v: 3.00E+01
D: 1.00E+03 n: 1.00E+00 x: 1.00E+00
h: 1.00E+01 p: 6.00E-01 y: 3.50E+00

Open Save OK Cancel

Initial Crack (a)

Initial size of the crack length **a**.

Final Value (a)

Size of the crack length **a** above which the calculation stops. This is one of the criteria to stop the calculations, and it can be used for instance to calculate the number of cycles that it takes to reach a certain crack size. If you don't want to use this criterion, just set it to a very high value.

Initial Crack (c)

Initial size of the crack length **c** (see the **Crack Type Drawings**).

Final Value (c)

Size of the crack length **c** above which the calculation stops. This is one of the criteria to stop the calculations, and it can be used for instance to calculate the number of cycles that it takes to reach a certain crack size. If you don't want to use this criterion, just set it to a very high value (e.g. greater than the **specimen width w value**).

Typical / Database Option

Option to use typical KI 2D equations (faster computation time) or equations retrieved from the Equations Database.

Open KI Button

Shows the typical KI 2D equation window, where the user can choose from different KI equations.

KI Equation Name

List of names of the available **KI 2D** (stress intensity factor) equations from the Equations Database. Just click on the desired name to load its **Formula**.

KI Formulas

Formulas of the **KI 2D** (stress intensity factor) equation in a and c loaded from the Equations Database through the **KI Equation Names list**. The formula can also be edited by the user and even added to the Equations Database (using the **Save As New button**).

Calculate KI Button

Calculates the value of **KI 2D** (stress intensity factor) in a and c for the current **Formula** and **Variables Table** values. The user is asked to input the stress variation deltaSigma (S) for which he wants to calculate the **KI** value.

Save As New Button

Adds the **KI 2D** (stress intensity factor) equation present in the **KI Formula fields** to the Equations Database. The user will be asked to enter a name for this new equation.

Tension / Bending / Pressure Factor

Factor by which the loadings of the **Loading Window** are multiplied and considered as Tension / Bending / Pressure Stresses applied to the specimen (see the red arrows in the **Crack Type Drawings**). If this factor is 1 then the **loading history** is used as these stresses, if it's zero then these stresses are not considered. Use these values to combine Tension / Bending and Pressure loadings.

Retardation/Options Tab

The screenshot shows the 'Retardation/Options' tab of the 'Bidimensional Crack Growth (da/dN, dc/dN)' software. The window has a title bar and a 'Calculation title' field. The main area is divided into several sections:

- Retardation:** Contains radio buttons for 'No Retardation' (selected), 'Wheeler', 'Mod. Wheeler', and 'da/dN Factor'. It also has input fields for 'Minimum Overload' (0%) and 'Retardation Resolution' (5%).
- Integration Method:** Contains radio buttons for 'Cycle by Cycle (Sequential)' (selected) and 'ΔK_{rms} (No Retardation)'. It has a 'Resolution' field set to 0.1%.
- Graph:** Contains checkboxes for 'a & c' and 'KI(a)' and 'KI(c)', with a multiplier of 1 and 'Events, 1/2 Cycles'.
- Plastic Zone:** Contains radio buttons for 'Plane Stress' (selected), 'Plane Strain', and 'User'. It includes the formula $Z_i = \frac{1}{2\pi} \cdot \left(\frac{K_{mx}}{S_y}\right)^2$.

At the bottom, there is a table of variables (A, B, D, H, L, m, n, p, r, s, t, v, x, y, z) with their respective values. There are also 'Open' and 'Save' buttons, and 'OK' and 'Cancel' buttons.

A:	5.29E-06	H:	7.50E-01	r:	5.00E+00	z:	8.00E-01
b:	1.00E+02	I:	1.00E+00	s:	1.00E+00		
B:	1.30E+02	L:	-5.00E-01	t:	3.00E+00		
d:	5.00E+02	m:	2.00E+00	v:	3.00E+01		
D:	1.00E+03	n:	1.00E+00	x:	1.00E+00		
h:	1.00E+01	p:	6.00E-01	y:	3.50E+00		

Retardation Effect

Option of retardation effects due to overloads.

Retardation Effect Help Button

Shows a window with some information about the Retardation Effect models used by ViDa.

No Retardation Option

Option not to consider crack retardation effects.

Wheeler Option

Option to use the Wheeler retard effect correction. Here da/dN is multiplied by the factor $(PZi/(PZol+aol-ai))^{wh}$, where **wh** is the Wheeler exponent. **PZol** and **aol** are the plastic zone and crack sizes on the overload, and **PZi** and **ai** are the current plastic zone and crack sizes.

Modified Wheeler Option

Option to use the Modified Wheeler retard effect correction. Here ΔK is multiplied by the factor $(PZi/(PZol+aol-ai))^{whm}$, where **whm** is the Modified Wheeler exponent. **PZol** and **aol** are the plastic zone and crack sizes on the overload, and **PZi** and **ai** are the current plastic zone and crack sizes.

da/dN Factor Option

Generalization of the Wheeler Option, where da/dN is multiplied by an arbitrary equation defined by the user. To choose from some pre-defined equations, press the Open button next to this option.

deltaK Factor Option

Generalization of the Modified Wheeler Option, where ΔK is multiplied by an arbitrary equation defined by the user. To choose from some pre-defined equations, press the Open button next to this option.

Effective R Option

Option to model crack retardation effects by changing the value of the load ratio $R (=K_{mn}/K_{mx})$ to an effective value. To choose from some pre-defined equations (including the Willemborg model), press the Open button next to this option.

Minimum Overload

Minimum overload percentage that activates the calculation with retardation effects. If the overload percentage is smaller than this value, the retardation effects are neglected. Use the value 0% to always consider the retardation effects.

Retardation Resolution

Percentage of $(PZol-PZi)$ on the crack growth for which the retardation factor is recalculated (**PZol** is the plastic zone on the overload and **PZi** is the current plastic zone). In order to speed up the calculations, the program only recalculates the retardation factor when the crack has grown more than this percentage of the distance between the overload and current plastic zones.

Retardation Graphs

Graphs of the retardation equations. The top graph plots the Wheeler, Modified Wheeler, da/dN Factor and ΔK Factor, while the bottom graph plots the Effective R for different load ratios R.

Plastic Zone

Equation used to calculate the size of the plastic zone ahead of the crack tip (for retardation calculations). The user can choose among plane stress, plane strain, or define a different factor for the equation of the plastic zone size.

Sequential Option

Option for sequential crack growth calculations. Click on this option to let ViDa calculate crack growth sequentially from the loading history (instead of using the **Root Mean Square approach**).

Krms Option

Option for crack growth calculations using the Root Mean Square approach. Click on this option to let ViDa calculate a RMS stress value of all the loading history and then integrate the da/dN equation to calculate the crack growth (instead of **sequentially calculating the crack growth for each loading**). Note that **this option cannot consider retardation effects**.

Resolution

For the Sequential option, this is the increase percentage of the square root of the crack size for which the Stress Intensity Factor **KI** is recalculated. In order to speed up the calculations, the program only recalculates **KI** when the square root of the crack size has grown more than this percentage. Typical values are in the 0.1 – 1.0% range. For the Krms option, this resolution is the integration step of Simpson's integral rule.

Help Button

Shows a window with some information about the square root of the crack size criterion.

Graph 1 Option

Option to plot or not the **Damage Curve / 2D Crack Graph** in the Main Window.

Graph 1 Data

List of the fields that can be plotted in the **Damage Curve / 2D Crack Graph** in the Main Window after the bidimensional crack growth calculations.

Graph 1 Sampling

Sampling rate of the events (or $\frac{1}{2}$ cycles) to be plotted in the **Damage Curve / 2D Crack Graph** in the Main Window after the bidimensional crack growth calculations.

Graph 2 Option

Option to plot or not the **Elliptic Cracks Graph** in the Main Window.

Graph 2 Data

List of the fields that can be plotted in the **Hysteresis Loops / Elliptic Cracks Graph** in the Main Window after the bidimensional crack growth calculations. If the '**Cracks**' value is chosen from the list, then the semi-elliptical crack fronts are plotted.

Graph 2 Sampling

Sampling rate of the events (or $\frac{1}{2}$ cycles) to be plotted in the **Hysteresis Loops / Elliptic Cracks Graph** in the Main Window after the bidimensional crack growth calculations.

OK Button

Calculates bidimensional crack growth using the da/dN Method for the **Loading Window** loadings using the material properties and the chosen options, and goes back to the Main Window.


Cancel Button

Cancels the bidimensional crack growth calculation and goes back to the Main Window.

Calculation Logbook Window

Stores the total damage and the residual life of the specimen (or the average da/dN and the total crack growth for crack growth calculations) for all the calculations performed by **ViDa** in the current session. The **Calculation Title** field in the calculation windows such as the Calculate Life (SN) window is also stored in order to easily compare the results of different calculations. Note that if the **Loading Time** is not set in the Main Window then the residual life is not added to the **Calculation Logbook** (since it cannot be calculated).

This window is a very useful tool to compare similar calculations with different option settings from the life/crack growth calculation windows. The tables can also be **saved or loaded from a file** (as a *.log file) or **printed** by the user, using the menu commands of the Main Window when the Logbook window is focused.

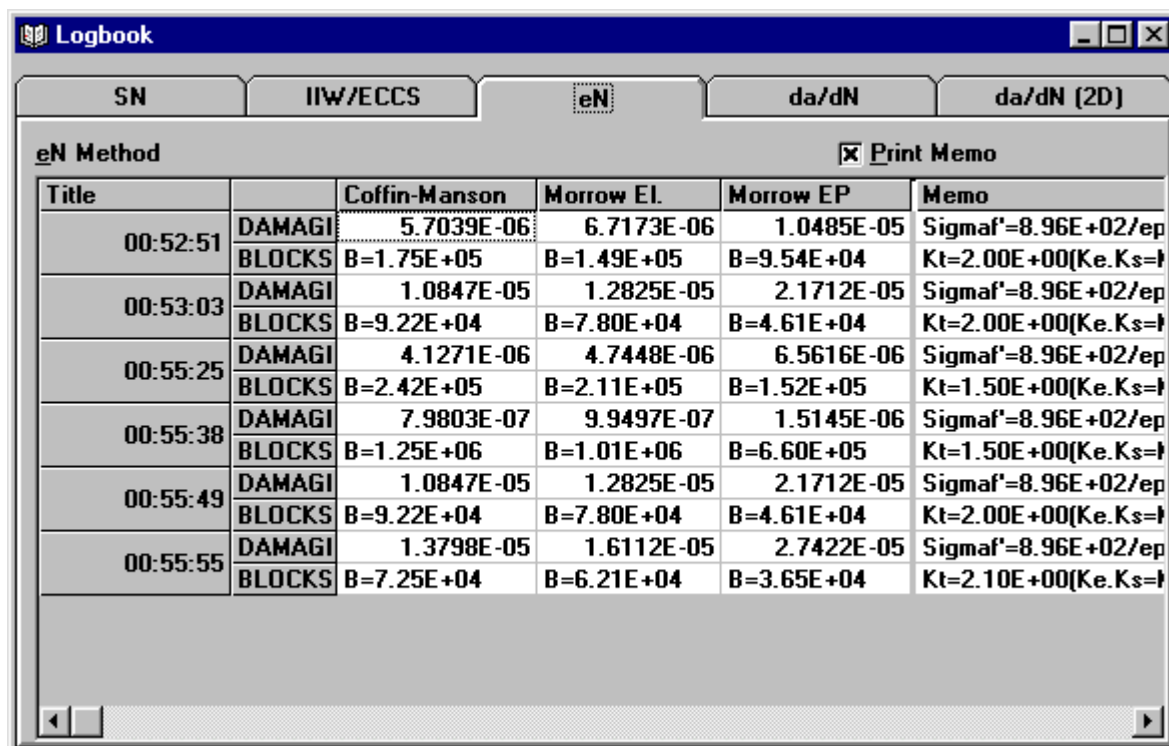

Logbook						
SN		IIW/ECCS		eN	da/dN	da/dN (2D)
eN Method <input checked="" type="checkbox"/> Print Memo						
Title		Coffin-Manson	Morrow El.	Morrow EP	Memo	
00:52:51	DAMAGI	5.7039E-06	6.7173E-06	1.0485E-05	Sigma f'=8.96E+02/ep	
	BLOCKS	B=1.75E+05	B=1.49E+05	B=9.54E+04	Kt=2.00E+00(Ke.Ks=1)	
00:53:03	DAMAGI	1.0847E-05	1.2825E-05	2.1712E-05	Sigma f'=8.96E+02/ep	
	BLOCKS	B=9.22E+04	B=7.80E+04	B=4.61E+04	Kt=2.00E+00(Ke.Ks=1)	
00:55:25	DAMAGI	4.1271E-06	4.7448E-06	6.5616E-06	Sigma f'=8.96E+02/ep	
	BLOCKS	B=2.42E+05	B=2.11E+05	B=1.52E+05	Kt=1.50E+00(Ke.Ks=1)	
00:55:38	DAMAGI	7.9803E-07	9.9497E-07	1.5145E-06	Sigma f'=8.96E+02/ep	
	BLOCKS	B=1.25E+06	B=1.01E+06	B=6.60E+05	Kt=1.50E+00(Ke.Ks=1)	
00:55:49	DAMAGI	1.0847E-05	1.2825E-05	2.1712E-05	Sigma f'=8.96E+02/ep	
	BLOCKS	B=9.22E+04	B=7.80E+04	B=4.61E+04	Kt=2.00E+00(Ke.Ks=1)	
00:55:55	DAMAGI	1.3798E-05	1.6112E-05	2.7422E-05	Sigma f'=8.96E+02/ep	
	BLOCKS	B=7.25E+04	B=6.21E+04	B=3.65E+04	Kt=2.10E+00(Ke.Ks=1)	

Table

Tables that store the total damage and the residual life of the specimen (or the average da/dN and the total crack growth for crack growth calculations) for all the calculations performed by **ViDa** in the current session. Just double-click on the title cells to edit its contents. Double-click on the internal cells to see the Memo of each calculation (the calculation parameters used in each case).

Print Memo

Option to print the Memo column of the table. To print the table, use the File | Print command from the main menu.

SN Tab

Tab containing the **Table** with the SN Method life calculation results.

IIW/ECCS Tab

Tab containing the **Table** with the Welded Structures life calculation results.

eN Tab

Tab containing the **Table** with the eN Method life calculation results.

da/dN Tab

Tab containing the **Table** with the unidimensional crack growth calculation results.

da/dN (2D) Tab

Tab containing the **Table** with the bidimensional crack growth calculation results.

Calculate Equivalent Stress Window

Tridimensional Peaks and Valleys Tab

Calculates **equivalent stresses** for a **list of 3D-stresses** (with normal and shear components). There are 4 ways to calculate these equivalent stresses: (i) **Mises criterion**, (ii) **Tresca criterion**, (iii) **Maximum Stress** (considering changes in sign for alternating stresses) and (iv) **Maximum Absolute Stress** (neglecting changes in sign for the stresses).

The user can also include **individual stress concentration factors** for each stress component prior to the calculation. The **3D-stresses Peak and Valley Table** can be **saved** to or **loaded** from a file. The **calculation results** can be **Transferred** to a new **Loading Window** in the Main Window.

Peak/Valley Type Tab

Lets the user choose between calculations from **3D** tensor components or from **Rosette** measurements. If the **Rosette** option is chosen, then the Calculate 3D Equivalent Stress Window 'turns into' the Calculate Rosette Equivalent Stress Window.

Tridimensional Table

Table from the Calculate 3D Equivalent Stress Window containing Peak/Valley stress or strain loading histories for all 6 tensor components XX, YY, ZZ, XY, XZ and YZ. This table is the input for equivalent loading history calculations.

Table Option

Option that defines if the values from the **Tridimensional** and **Peak/Valley** tables represent stresses (in MPa or ksi) or strains (in **microstrains**).

Kt

Stress concentration factor for each component of the 3D tensor, used in the equivalent history calculation.

Input / Output Graph

Graph that shows the **input 3D tensor components** and the **output equivalent Peaks and Valleys**. The values are plotted only after the calculation.

New Button

Clears the **Tridimensional Table**.

Open Command

Loads a Peak/Valley file (*.pic) into one or more of the columns of the **Tridimensional Table** (for XX, YY, ZZ, XY, XZ or YZ) or **Rosette Table** (for A, B or C). Just select any cells from the columns where you want to load the history and press the Open Button. You can also load a Tridimensional Peak/Valley file (file extension *.p3d), which contains all the **Tridimensional Table** columns XX, YY, ZZ, XY, XZ and YZ. You can also load a Rosette Peak/Valley file (file extension *.ros), which contains all the **Rosette Table** columns A, B and C (see the Calculate Rosette Equivalent Stress Window).

Save Button

Saves the **Tridimensional Table** as a Tridimensional Peak/Valley file (file extension *.p3d), which contains all the **Tridimensional Table** columns XX, YY, ZZ, XY, XZ and YZ. In the Calculate Rosette Equivalent Stress tab this command saves the **Rosette Table** as a Rosette Peak/Valley file (*.ros) instead.

Edit Button

Shows a Pop-up menu with commands to edit the **Tridimensional Table**. For more information on the Edit commands, see the **Edit menu** in the **Main Window**.

Calculate Button

Shows a Pop-up menu with the following commands:

Mises
Tresca
Maximum Principal Stress
Maximum Absolute Principal Stress

Calculate Button | Mises Command

Calculates an **equivalent Peak/Valley history** from the **Tridimensional Table** values using the distortion-energy (**Mises**) criterion. Note that even though the **Mises** criterion calculates absolute values, **ViDa** includes a sign in the **equivalent Peak/Valley history**. This sign is fundamental when calculating fatigue life, otherwise the tension-compression information would be lost.

Calculate Button | Tresca Command

Calculates an **equivalent Peak/Valley history** from the **Tridimensional Table** values using the maximum shear-stress (**Tresca**) criterion.

Calculate Button | Maximum Principal Stress Command

Calculates the **Maximum Principal Stresses** from the **Tridimensional Table** values and puts the result in the **Equivalent Peak/Valley Table**. The **Maximum Principal Stress** is the greatest value among the 3 principal stresses (e.g. if $S_x = -20$, $S_y = -5$, $S_z = 10$ then the MPS is 10). This command is very useful for crack growth calculations, since the crack tends to grow in the maximum **tensile** stress direction (the magnitude of **compressive** stresses doesn't influence crack growth).

Calculate Button | Maximum Absolute Principal Stress Command

Calculates the **Maximum Absolute Principal Stresses** from the **Tridimensional Table** values and puts the result in the **Equivalent Peak/Valley Table**. The **Maximum Absolute Principal Stress** is the greatest value among the absolute values of the 3 principal stresses (e.g. if $S_x = -20$, $S_y = -5$, $S_z = 10$ then the MPS is -20).

Equivalent Peak / Valley Table

Peak/Valley table containing the output from equivalent loading history calculations. The components of the **Tridimensional table** are combined (using Mises, Tresca, ...) and the resulting history is shown here.

Transfer Button

Copies the calculated **Equivalent Peak / Valley Table** values to a new **Loading Window** on the Main Window.

Exit Button

Exits the Calculate 3D Equivalent Stress Window and goes back to the Main Window.

Rosette Peaks and Valleys Tab

Calculates **equivalent stresses and strains** for a **list of strain triplets** measured from a rectangular or delta Rosette. The user can calculate the maximum or minimum equivalent stresses/strains, their **principal direction angle** or the projected stresses/strains onto a **user defined direction angle**.

The **Rosette Peak and Valley Table** can be **saved to** or **loaded from a file**. The **calculation results** can be **copied** to a new **Loading Window** in the Main Window.

Equivalent Stress

Tridimensional Peaks and Valleys

☐ Stress (MPa)
☒ Strain (µε)

Poisson : 0.292
 E(Young): 203 GPa
 Direction: deg.

Rosette Peaks and Valleys (µε)

Peaks and Valleys

A	B	C
0	0	0
0	60	60
0	20	20
0	120	120
0	80	80
0	180	180
0	0	0
0	80	80
0	-40	-40
0	220	220
0	160	160
0	240	240
0	160	160
0	240	240
0	0	0
0	120	120
0	-40	-40
0	160	160
0	60	60
0	240	240

Rectangular **Delta**

Calculate

Exit

Peak/Valley

Equivalent
0.0
80.0
26.7
160.0
106.7
240.0
0.0
106.7
0.0
293.3
213.3
320.0
213.3
320.0
0.0
160.0
0.0
213.3
80.0
320.0

Peak/Valley Type Option

Lets the user choose between calculations from **3D** tensor components or from **Rosette** measurements. If the **Tridimensional** option is chosen, then the Calculate Rosette Equivalent Stress Window turns into the Calculate 3D Equivalent Stress Window.

Rosette Table

Table from the Calculate Rosette Equivalent Stress Window containing Peak/Valley strain loading histories (in **microstrains**) for all 3 components **A**, **B** and **C**. This table is the input for equivalent loading history calculations.

Rectangular Rosette Tab

Option to consider Rectangular Rosettes in the calculations. The drawing shows the locations of the **A**, **B** and **C** strain components.

Delta Rosette Tab

Option to consider Delta Rosettes in the calculations. The drawing shows the locations of the **A**, **B** and **C** strain components.

Poisson

Poisson coefficient of the current material, used to transform the **Rosette strain history** into an **equivalent history**. The default **Poisson** coefficient is loaded from the Materials Database, but it can be changed by the user prior to the calculations.

E (Young)

Young modulus of the current material, used to transform the **Rosette strain history** into an **equivalent history**. The default **Young** modulus is loaded from the Materials Database, but it can be changed by the user prior to the calculations (be careful with the units!).

Direction

Direction to which the stresses or strains will be projected using the **Calculate Button | Projected Strain (or Stress)** commands from the menu. The direction is measured counter-clockwise in degrees, starting from the **X** axis (see **Rectangular** and **Delta Rosette drawings**).

Output Graph

Graph that shows the calculated **equivalent Peaks and Valleys**.

New Button

Clears the **Rosette Table**.

Open Command

Loads a Peak/Valley file (*.pic) into one or more of the columns of the **Tridimensional Table** (for XX, YY, ZZ, XY, XZ or YZ) or **Rosette Table** (for A, B or C). Just select any cells from the columns where you want to load the history and press the Open Button. You can also load a Rosette Peak/Valley file (file extension *.ros), which contains all the **Rosette Table** columns A, B and C, or you can load a Tridimensional Peak/Valley file (file extension *.p3d), which contains all the **Tridimensional Table** columns XX, YY, ZZ, XY, XZ and YZ (see the Calculate 3D Equivalent Stress Window).

Save Button

Saves the Rosette Peak/Valley file (file extension *.ros), which contains all the **Rosette Table** strains **A**, **B** and **C**. In the Calculate 3D Equivalent Stress Window this command saves the **Tridimensional Table** as a Tridimensional Peak/Valley file (*.p3d) instead.

Edit Button

Shows a Pop-up menu with commands to edit the **Rosette Table**. For more information on the Edit commands, see the **Edit menu** in the **Main Window**.

Calculate Button

Shows a Pop-up menu with the following commands:

Maximum Strain	
Minimum Strain	
Projected Strain	
<hr/>	
Maximum Stress	
Minimum Stress	
Projected Stress	
<hr/>	
Principal Direction	

Calculate Button | Maximum Strain Command

Calculates the **Maximum Principal Strain** for a Rectangular (or Delta) Rosette using the measured strain values from the **Rosette Table**.

Calculate Button | Minimum Strain Command

Calculates the **Minimum Principal Strain** for a Rectangular (or Delta) Rosette using the measured strain values from the **Rosette Table**.

Calculate Button | Projected Strain Command

Calculates the **Projected Principal Strain** in the direction defined by the **Direction field** for a Rectangular (or Delta) Rosette using the measured strain values from the **Rosette Table**.

Calculate Button | Maximum Stress Command

Calculates the **Maximum Principal Stress** for a Rectangular (or Delta) Rosette using the measured strain values from the **Rosette Table**, the **Poisson coefficient** and the **Young modulus (E)** of the current material.

Calculate Button | Minimum Stress Command

Calculates the **Minimum Principal Stress** for a Rectangular (or Delta) Rosette using the measured strain values from the **Rosette Table**, the **Poisson coefficient** and the **Young modulus (E)** of the current material.

Calculate Button | Projected Stress Command

Calculates the **Projected Principal Stress** in the direction defined by the **Direction field** for a Rectangular (or Delta) Rosette using the measured strain values from the **Rosette Table**, the **Poisson coefficient** and the **Young modulus (E)** of the current material.

Calculate Button | Principal Direction Command

Calculates the **direction of the Maximum Principal Strains** (in **degrees**) for a Rectangular (or Delta) Rosette using the measured strain values from the **Rosette Table**. Use this command to get an idea of the average direction of the main loadings in your history. You might want after to project the strains or stresses in this average direction using the **Direction field** and the **Calculate | Rectangular (or Delta) | Projected Strain** or **Calculate | Rectangular (or Delta) | Projected Stress** commands.

Equivalent Peak / Valley Table

Peak/Valley table containing the output from equivalent loading history calculations. The components of the **Rosette table** are combined and the resulting history is shown here.

Transfer Button

Copies the **Equivalent Peak / Valley Table** values to a new **Loading Window** on the Main Window.

Exit Button


Exits the Calculate Rosette Equivalent Stress Window and goes back to the Main Window, without transferring the **Equivalent Peak/Valley Table**.

Smart Calculator Window

Alphanumeric and RPN calculator that computes any formula using the material properties and user-defined variables. Some basic Mechanics of Solids equations are also embedded in the calculator and **computed results** can be used to **multiply the loadings** in the **Loading Window**. The **Smart Calculator** also has direct links to the Calculate Stress Concentration Factor (Kt) window to compute and import the values of **Kt**, **q** and **Kf=1+q*(Kt-1)** into the calculations, and you can load any equation from the **Kt, KI and da/dN Equations Database**.


Numeric Option

Sets the Smart Calculator as a RPN (Reversed Polish Notation) numeric calculator, with 4 registers X, Y, Z and T.

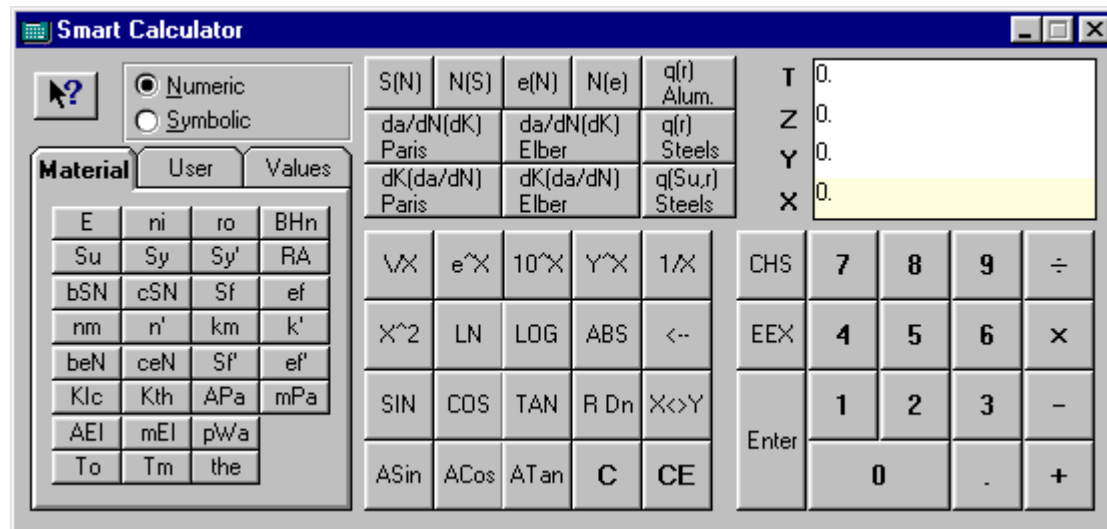

Symbolic Option

Sets the Smart Calculator as a Symbolic calculator, with a **Formula** field where the user can enter any symbolic equation. By using the **Calculate (SI or ksi) buttons**, the Formula is evaluated and the result is shown in the **X** field.

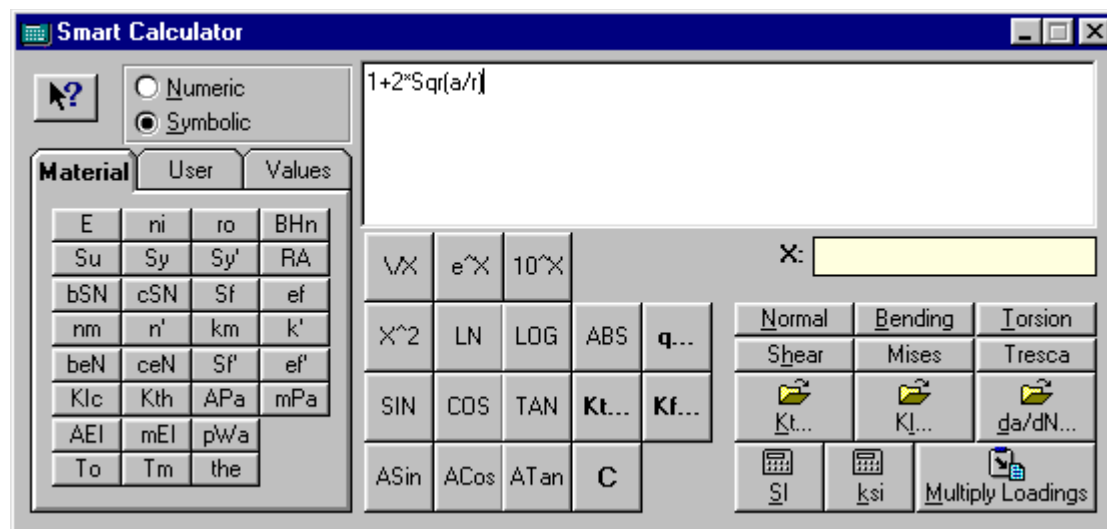

Material Tab

Tab containing buttons associated with the properties of the current material. Click on each button to show its numerical value (for the **Numeric** option) or to write the property name on the **Formula** field (for the **Symbolic** option).

User and Values Tabs (Variables Table)

Table containing variables that can be set by the user. To set a variable, just click on it and type its new value. If these variables are present in the **Formula field** then their values are used in the calculations.

Formula

Equation that will be computed in the Smart Calculator. This equation may include any variable from the **Variables Table**, any material property or even mathematical functions (click on the **Equation Interpreter Help Button** for more information).

X (Result)

Result of the calculation using the equation in the **Formula field**, material properties and **Variables Table** values.

Equation Interpreter Help Button

Shows a help window with all the variables, material properties and mathematical functions that can be used in the **Formula field** of the Smart Calculator.

C (Clear) Button

Clears the **Formula field** (for the **Symbolic** option), or the X, Y, Z and T registers (for the **Numeric** option).

Kt / Kf Button

Goes to the Calculate Typical Stress Concentration Factor (Kt) Window, where the user can calculate the value of **Kt** (or **Kf**) for Notched/Filleted Bars or Shafts of any dimensions. After pressing **OK** the program returns to the Smart Calculator Window carrying the **Kt** (or **Kf**) value and typing it in the **Formula field** on the cursor position (if some letters are highlighted, then they're deleted and replaced by the value).

q Button

Goes to the Calculate Notch Sensitivity (q) for Steels and Alumina Window, where the user can calculate **q** for steels or alumina given the notch radius and **Su**. After pressing **OK** the program returns to the Smart Calculator Window carrying the **q** value and typing it in the **Formula field** on the cursor position (if some letters are highlighted, then they're deleted and replaced by the **q** value).

Normal / Bending / Torsion / Shear Button

Writes the basic formula of **Normal** (or **Bending** or **Torsion** or **Shear**) stress in the **Formula field** on the cursor position (if some letters are highlighted, then they're deleted and replaced by the formula).

Mises / Tresca Button

Writes the basic formula of the **Mises** (or **Tresca**) criterion in the **Formula field** on the cursor position (if some letters are highlighted, then they're deleted and replaced by the formula).

Open Kt / KI / da/dN Button

Shows a list of all available equations to be loaded. Just click on the name of the desired equation to load it to the **Formula field**.

Calculate SI Button

Calculates the value of the equation in the **Formula field** using the material properties in SI units (e.g. using a SAE1020 steel, **KIc** in the **Formula field** would result in the value 250, corresponding to 250 MPaV/m).

Calculate ksi Button

Calculates the value of the equation in the **Formula field** using the material properties in English units (e.g. using a SAE1020 steel, **KIc** in the **Formula field** would result in the value 227.5, corresponding to 227.5 ksiV/in).

Multiply Loading Window Button

Multiplies ALL the loadings in the **Loading Window** by the value shown in the **Result field**. This command is useful for instance to transform force histories into equivalent stresses histories.


So, if for instance the **Loading Window** contains forces transversally applied to a beam, the user should compute the **bending** term $32 \cdot L / (\pi \cdot d^3)$ by setting the beam length (**L**) and diameter (**d**) in the **Variables Table**, pressing the **Calculate SI Button** and finally pressing the **Multiply Loadings Button**. Now the **Loading Window** contains the bending stresses (note that **ViDa** only handles Stresses or Strains, not Forces, so the described conversion would be necessary).

The user can even consider combined **bending** and **torsion** stresses in the above example. If the torque is proportional to the applied force by a constant **R**, then you could use the **Torsion** expression and **Mises** criterion, calculating the value of $((32 \cdot L / (\pi \cdot d^3))^2 + 3 \cdot (16 \cdot R / (\pi \cdot d^3))^2)^{.5}$.

Options Window

Window with ViDa general options. In order to make the changes effective, press the **Apply** or the **OK** buttons. To cancel the alterations, press **Cancel**. This window has 4 tabs:

Editor Tab

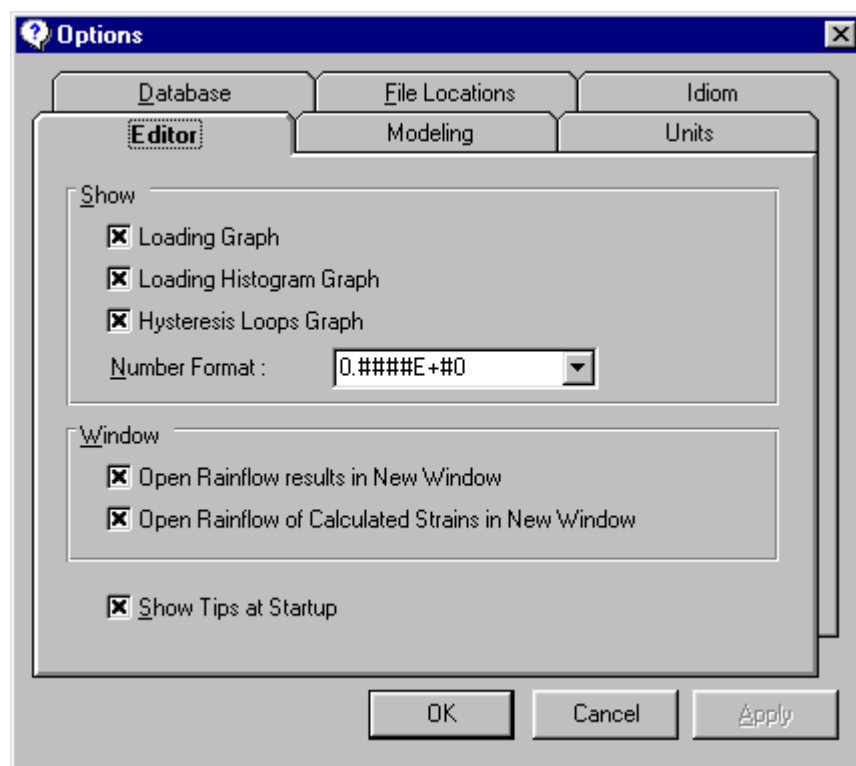

Show Loading Graph Option

Lets ViDa show a **Peak/Valley** graph of the Loading History on each **Loading Window**. This option is useful to visualize the loading history, but it may slow down ViDa if the history is too long.

Show Loading Histogram Graph Option

Lets ViDa show a 3D bar-chart of loaded bidimensional histograms. Bidimensional histograms are loaded by opening a **CSV (*.csv)** or **Excel (*.xls)** file and turning on both the **Histogram** and the **Mean Interval** options.

Show Hysteresis Loops Graph Option

Lets ViDa show the **Hysteresis Loops** plot for eN calculations. Note that, even if this option is turned off, the Loops are still calculated (but not plotted) if you chose the **Calculate Hysteresis Loops option** on the eN Method Window.

Number Format

Formatting mask to define the number of significant digits of all calculation results.

Open Rainflow Results in New Window Option

ViDa creates a new **Loading Window** when you use the **Rainflow** or **Sequential Rainflow** commands. If this option is turned off, the resulting **Alternate/Mean** component history is shown on the same window, replacing the original **Peak/Valley** data (in this case, ViDa asks if you want to save the **Peak/Valley** history before replacing it).


Open Rainflow of Calculated Strains in New Window Option

ViDa creates a new **Loading Window** when you choose the **Rainflow of Calculated Strains option** on the eN Method window. If this option is turned off, the resulting **Alternate/Mean** strain history is shown on the same window, replacing the original data (in this case, ViDa asks if you want to save the original history before replacing it).

Show Tips at Startup Option


Lets the program show the **Tip of the Day window** every time you run ViDa.

Modeling Tab

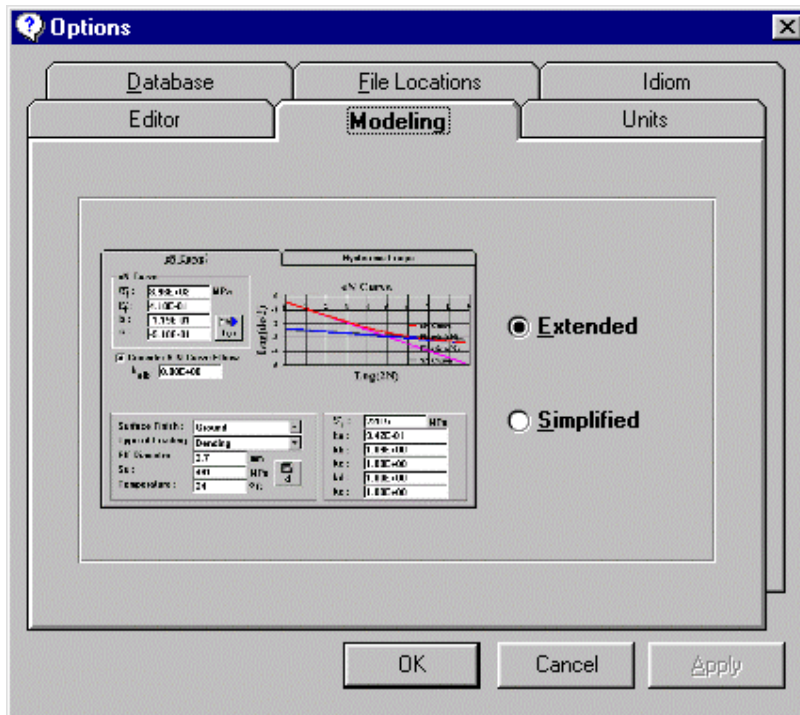


Lets the user choose between Simplified or Extended modeling. The SN, IIW, eN and da/dN windows will be significantly simplified if the Simplified Modeling is chosen, presenting much less options for the user. These hidden options are set to default values that reflect either the simplest or the traditional fatigue design techniques. Thus the Simplified option is recommended for beginners, whereas the full windows are for experts. Note also that the Bidimensional Crack Growth window is not available in the Simplified Modeling.

Units Tab

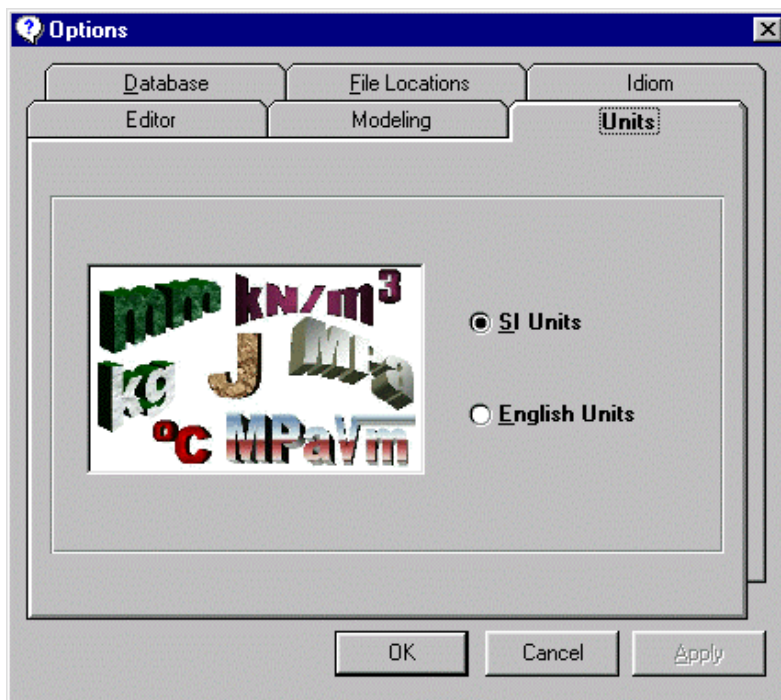


Lets the user choose between SI and English units. All the calculations and stress data from the **Loading Window** will be considered to be in MPa or ksi accordingly. Note that the Material window will also show the material properties in the desired units (even though the database actually saves the data in SI units).

Database Tab

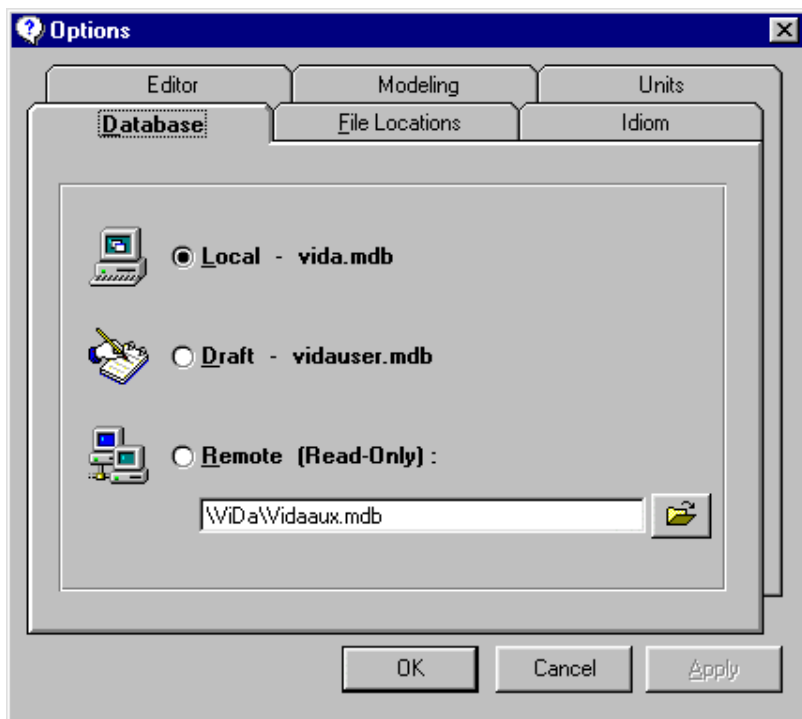

Lets the user choose the database used in all ViDa calculations. The Remote option allows the user to connect to a remote database file, which could be stored on a different computer, such as a server. In this case, the database is considered read-only (the user cannot change locally the data of the remote database). Note that once you change the database you need to exit and restart the ViDa program in order to make the changes effective.

File Locations Tab

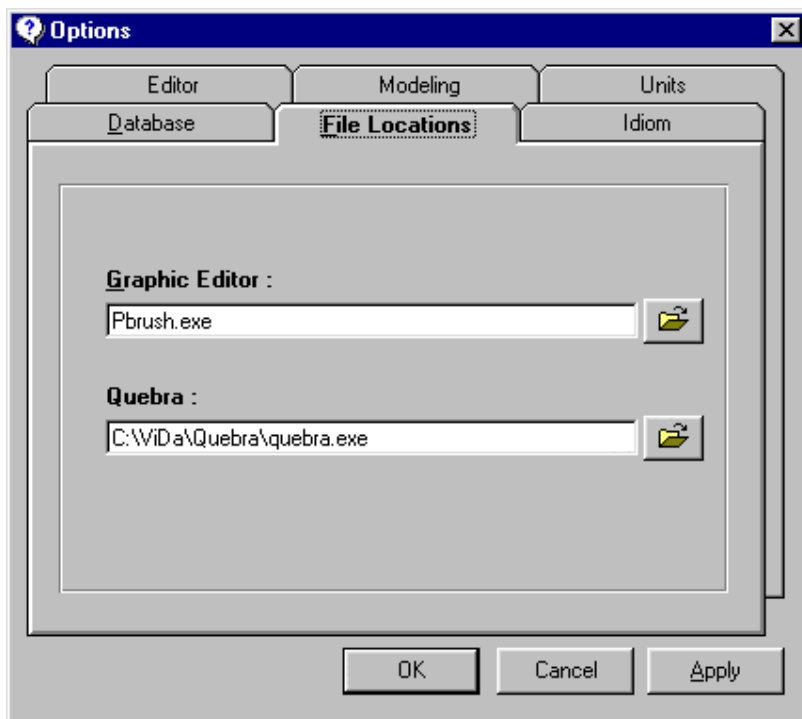

Locations of a Graphic editor program (used to edit the figures in the Equations Database) and of the Quebra Finite Element software.

Idiom Tab




Lets the user choose the desired idiom used by the entire program. The options are English, Portuguese, French, German, Italian, Spanish. Note that once you change the idiom you need to exit and restart the ViDa program in order to make the changes effective.

Multimedia Window

Window with links to the **Textbook "Fatigue Design under Complex Loading"**, **Published Papers**, and video/animations.


The **Slide Show** and **ViDa Papers** buttons go to the **PowerPoint Presentation Viewer**, where you can choose among the book **Fatigue Design under Complex Loadings**, or the Published Papers pertaining to **ViDa**.

The **Chain** button shows a small animation about the principles of structural integrity evaluation.

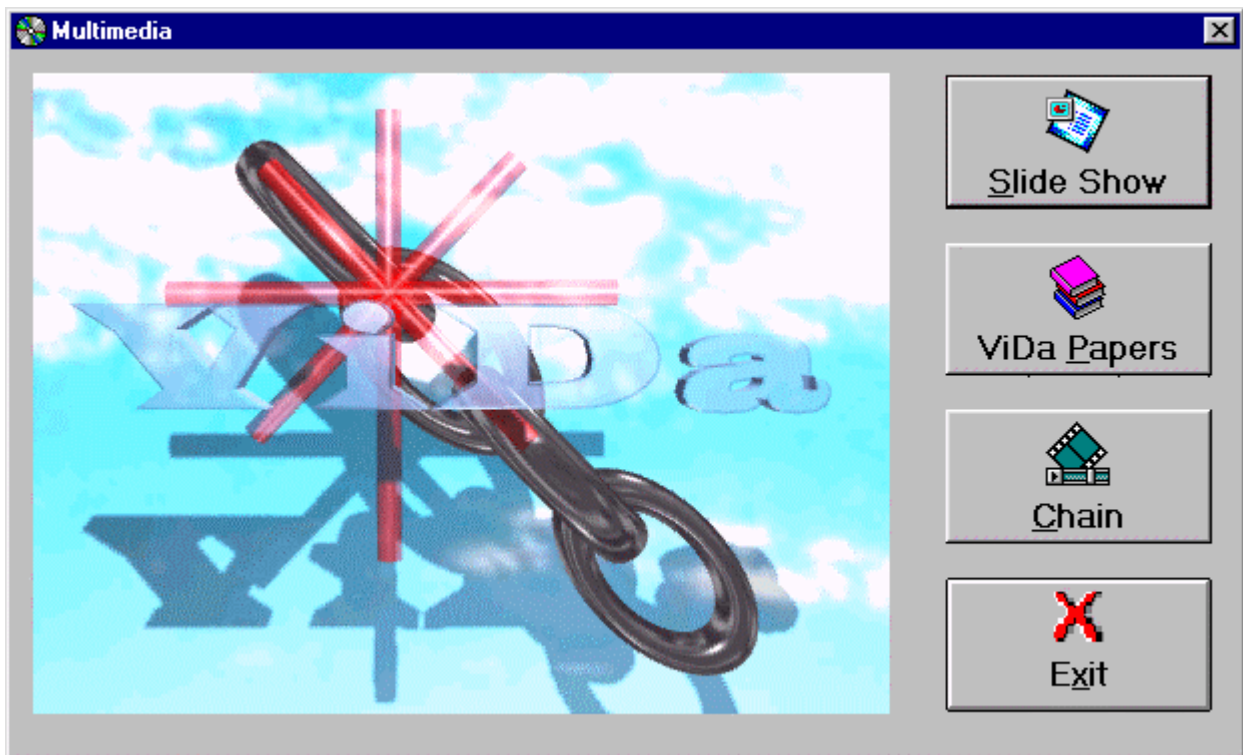

Tip of the Day Window

Show tips on working with ViDa at the startup. You can see more tips by pressing the **Next Tip** button, or you can view all tips using the **Show All** button. If you don't want to see the **Tip of the Day** window every time you run ViDa, just disable the **Show Tips at Startup** option and press **OK**.

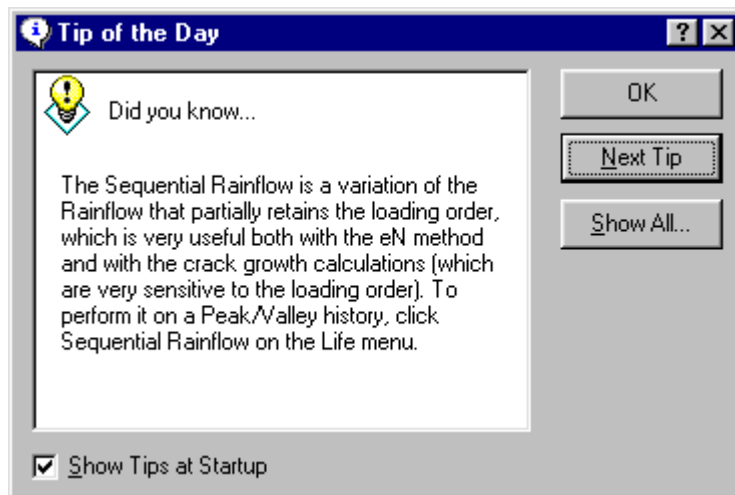

CHAPTER 4

ViDa Tutorials



This chapter presents some detailed tutorials on using **ViDa** to perform fatigue and fracture mechanics calculations. After working on these tutorials you'll be more familiar with the necessary calculation steps, and even use some of the advanced options in **ViDa**.

Contents

- How do I Calculate Damage using the SN method ?
- How do I Calculate Damage of Welded Structures ?
- How do I Calculate Damage using the eN Method ?
- How do I Calculate Unidimensional Crack Growth ?
- How do I Calculate Bidimensional Crack Growth ?
- How do I Use the Materials Database ?
- How do I Handle Experimental Data Points ?
- How do I Use the Equations Database ?
- How do I Handle Tridimensional Stress Histories / Rosette Data?
- How do I Use the Smart Calculator ?
- Useful Tips about ViDa
 - General Tips
 - Material Database Tips
 - SN Method and Welded Structures Tips
 - eN Method Tips
 - Crack Growth Calculation Tips
 - Other Tips

How do I Calculate Damage using the SN method ?

To calculate the fatigue damage and the remaining crack initiation life of a piece which critical point works under elastic stresses, you can (and probably should) use the **SN** method. Below there is a complete list of all steps you might need to go through to perform this calculation using **ViDa**. Note that some of these steps can be skipped in some cases and also that some of the options are not available in the **Simplified Modeling option** (the symbol (*) will denote options only available in the **Extended Modeling option**).

1. **Load a Loading History** or type it in the **Loading Window**. Fill out the **Loading Time** field with the duration (in seconds) of ALL the loading history, in order to calculate the estimated residual life (in days) of the piece.

2. If the loading is a sequential history, you might want first to **Check or Filter it**. Unless your loading history comes from an histogrammer as a set of Alternate/Mean/no. of **half** cycle components (thus not keeping order or sequencing information), it is recommended to use a **rainflow** counter. Make sure that the history in the **Loading Window** is expressed as a Peak/Valley sequence (by clicking on Peak/Valley in the **Sequencing Option**), enter a value for the **amplitude Filter** (optional), and then click **Life | Rainflow**. The **Loading Window** will then contain the Rainflow-filtered Peak/Valley history.

3. If you want to use a different material from the one shown in the **Loading Window**, go to the Materials database window and **choose the desired material** or **query for materials with certain desired properties** (in which case the Find Material window will appear). Note that you can alter the material properties, but you'll need to save the changes using the **File | Save command** prior to any calculations. It is possible to **estimate properties** or calculate them from experimental data, please refer to the How do I Use the Materials Database topic for more information. After choosing the desired Material, click on the **File | Exit command** to return to the **Main Window**.

4. Click on **Life | SN Method** to enter the Calculate Life (SN) window.

5. Enter the **Calculation Title** in order to further identify this calculation in the Calculation Logbook window.

6. Choose the **Surface Finish**, **Type of Loading** and enter the **Equivalent Diameter**, Ultimate Strength **Su** (the default value is loaded from the Materials Database) and the **Operating Temperature** of the specimen. These choices are used to automatically calculate the values of the endurance limit modifying factors **ka**, **kb**, **kc** and **kd**. Note that you can calculate the effective diameter for **circular**, **rectangular**, **channel** or **I-beam** cross sections under bending using the **Calculate d (Effective Diameter) button**. In this case, the Calculate Effective Diameter window will appear. You should click on the associated tab of the desired cross section and bending axis, enter the cross section dimensions and click on the desired value. The **resulting equivalent diameter** will be displayed. By pressing **OK** you'll return to the Calculate Life (SN) window carrying the **calculated value**.

7. You can alter directly the values of **ka**, **kb**, **kc**, **kd** and **ke** (and the value of the uncorrected endurance limit **Sf'**) prior to the calculations. Note that the next time you call the Calculate Life (SN) window the **ka**, **kb**, **kc** and **kd** values will retain the options chosen in step 6, meaning that altering their values directly will only affect the current calculation.

8. Choose the **type of SN curve** you want to use among **Automatic**, **b-Sf-Nf** or **b-c-Nf** and enter the appropriate values for these parameters of the SN curve. Note that in general you don't need to change these values, since they're automatically loaded from the Materials Database and corrected when you alter any **ka**, **kb**, **kc**, **kd** or **ke** values. You can also calculate the values of **b** and **c**, or retrieve them from the Materials Database, by using the **Calculate b, c button**. If you want, you can right-click on the **SN curve graph** and choose **Redraw** to see the changes in it.

9.(*) Enter the value of the **b** exponent after the SN curve elbow, **belb**. If this value is set to zero then the SN curve is horizontal after the elbow (if any), otherwise you'll obtain a SN curve with 2 different slopes. You can also right-click on the **SN curve graph** and choose **Redraw** to see the changes in it.

10.(*) Enter the value of the **End of life at damage field**. This is the total damage value that characterizes failure of the specimen. The Palmgreen-Miner rule suggests a total damage value of 1 for the end of life, but any other value can be chosen by the user.

11.(*) Enter the **name** and parameters of a **user-defined damage curve** that will be used in the calculations in addition to the **Goodman**, **Gerber** and **Soderberg** curves. These 4 curves can be visualized in the **SaSm graph** for any reference life by right-clicking on it and choosing the **Define Life for SaSm command**.

12.(*) Choose if you want (i) to **Consider the SN Curve Elbow**, (ii) to **Use the Stress Concentration Factor (Kt)** in the mean components of the loading history and (iii) to **plot the results for the Soderberg curve** calculations.

13.(*) Choose if you want to **consider Residual Stresses in the SN calculation**. In this case you'll have to enter the **Initial Residual Stress**. The program needs to draw hysteresis loops in order to consider residual stresses accurately, so you can also specify (i) the **range of hysteresis loops you want to plot**, (ii) the **accuracy of the calculations and plotting resolution** and (iii) which **Strain concentration theory** is to be used when **stress concentration factors** are present. Note that in order to consider residual stresses effects, **ViDa** changes from the SN to the eN method every time the local (at the notch root) stresses reach the **cyclic yield strength** (e.g., due to an overload), calculates the appropriate elastoplastic hysteresis loop by the eN method, and goes back to the SN method carrying on the damage and the residual stress caused by the elastoplastic event. The residual stress is added to the subsequent loads, and its effects are quantified by the **SaSm** rules. The main benefit of this technique is to decrease the computational effort as compared to the eN method.

14. Enter the values of the **Stress Concentration Factor (Kt)** and of the **Notch Sensitivity (q)**. These values can also be calculated using the **Calculate Kt button | Typical** (which goes to the Calculate Typical Stress Concentration Factor window and calculates both **Kt** and **q**, given a desired geometry and **Su**), the **Calculate Kt button | Stored** (which goes to the Smart Calculator window and calculates **Kt** from previously stored equations in the Kt Equations Database) or the **Calculate q (Notch Sensitivity)** (which goes to the Calculate Notch Sensitivity for Steels and Alumina window and calculates **q** for **steels** or **alumina** given **Su** and the notch radius) commands.

15. Check if all options are set as desired and press the **OK Button**.

The damage and residual life will be calculated and shown in the **Loading Window**. Note that the residual life (in days) depends on the **Loading Time** value from the Main Window.

How do I Calculate Damage of Welded Structures ?

To calculate the fatigue damage and the remaining crack initiation life of a welded structure which works under elastic stresses, you should use the IIW method. Below there is a complete list of all steps you might need to go through to perform this calculation.

1. Load a Loading History or type it in the **Loading Window**. Fill out the **Loading Time field** with the duration (in seconds) of ALL the loading history, in order to calculate the estimated residual life (in days) of the piece.

2. If the loading is a sequential history, you might want first to **Check or Filter it**. Unless your loading history comes from an histogrammer as a set of Alternate/Mean/no. of **half** cycle components (thus not keeping order or sequencing information), it is recommended to use a **rainflow** counter. Make sure that the history in the **Loading Window** is expressed as a Peak/Valley sequence (by clicking on Peak/Valley in the **Sequencing Option**), enter a value for the **amplitude Filter** (optional), and then click **Life | Rainflow**. The **Loading Window** will then contain the Rainflow-filtered Peak/Valley history.

3. Click on **Life | Welded Structures** to enter the Calculate Life of Welded Structures window.

4. Enter the **Calculation Title** in order to further identify this calculation in the Calculation Logbook window.

5. Enter the values of the **Weld Joint class** and the **exponent m** from the International Institute of Welding (IIW) equation $N(\text{cycles}) = 2,000,000 * ([\text{weld class}] / [\text{applied stress}])^m$. Enter also the values of the **Fatigue Limit N** (which is the number of cycles above which there is no fatigue damage for the Weld Joint) and the **End of life at damage field** (which is the total damage value that characterizes failure of the specimen). The Palmgreen-Miner rule suggests a total damage value of 1 for the end of life, but any other value can be chosen by the user. You can also choose a value for the reliability of the calculations (the default value defined by the International Institute of Welding is 97.7%). The default values of **m** and **N** are 3.0 and 5,000,000, and the **class value** depends on the weld joint detail.

6. Click on the **button of the desired weld joint**, and the chosen **weld joint class** and **description** will be shown on the bottom right of the window. Press the **OK button**.

The damage and residual life will be calculated and shown in the **Loading Window**. Note that the residual life (in days) depends on the **Loading Time** value from the **Loading Window**.

How do I Calculate Damage using the eN Method ?

To calculate the fatigue damage and the remaining crack initiation life of a piece which critical point works under elastoplastic stresses, you should use the eN method. This method can also be used for elastic stresses, but its computational effort is higher than the one required by the SN method. Below there is a complete list of all steps you might need to go through to perform this calculation. Note that some of these steps can be skipped in some cases and also some of the options are not available in the **Simplified Modeling option** (the symbol (*) will denote options only available in the **Extended Modeling option**).

1. Load a Loading History or type it in the **Loading Window**. Fill out the **Loading Time** field with the duration (in seconds) of ALL the loading history, in order to calculate the estimated residual life (in days) of the piece.

2. If the loading is a sequential history, you might want first to **Check or Filter it**. If your loading history consists of **deformation** Peak/Valleys, it is recommended to use a **rainflow** counter. Make sure that the history in the **Loading Window** is expressed as a Peak/Valley sequence (by clicking on Peak/Valley in the **Sequencing Option**), enter a value for the **amplitude Filter** (optional), and then click **Life | Rainflow**. The **Loading Window** will then contain the Rainflow-filtered Peak/Valley history. Note that the rainflow counting of the loading alters its sequencing and, in consequence, the calculated damage. It is strongly recommended that the eN method be applied to the original sequence of the loading if it consists of **stresses**. In the **Extended Modeling option** you can choose to **rainflow count the calculated strains**, which is the recommended method to guaranty the accuracy of the calculations, see the Textbook "Fatigue Design under Complex Loading".

3. If you want to use a different material from the one shown in the **Loading Window**, go to the Materials database window and **choose the desired material** or **query for materials with certain desired properties** (in which case the Find Material window will appear). Note that you can alter the material properties, but you'll need to save the changes using the **File | Save command** prior to any calculations. It is possible to **estimate properties** or calculate them from experimental data, please refer to the How do I Use the Materials Database topic for more information. After choosing the desired Material, click on the **File | Exit command** to return to the **Loading Window**.

4. Click on **Life | eN Method** to enter the Calculate Life (eN) window.

5. Enter the Calculation Title in order to further identify this calculation in the Calculation Logbook window.

6. (*) Choose the **Surface Finish**, **Type of Loading** and enter the **Equivalent Diameter**, Ultimate Strength **Su** (the default value is loaded from the Materials Database) and the **Operating Temperature** of the specimen. These choices are used to automatically calculate the values of the endurance limit modifying factors **ka**, **kb**, **kc** and **kd**. Note that the endurance limit is a concept originally used in the SN method, but in **ViDa** it can also be used to correct the elastic component of the eN curve. Note also that you can calculate the effective diameter for **circular**, **rectangular**, **channel** or **I-beam** cross sections under bending using the **Calculate d (Effective Diameter) button**. In this case, the Calculate Effective Diameter window will appear and you click on the effective diameter of the desired cross section and bending axis. The **resulting effective diameter** will be copied to the result field, and by pressing **OK** you'll return to the Calculate Life (eN) window carrying the **calculated value**.

7. (*) You can alter directly the values of **ka**, **kb**, **kc**, **kd** and **ke** (and the value of the uncorrected endurance limit **Sf'**) prior to the calculations. Note that the next time you call the Calculate Life (eN) window the **ka**, **kb**, **kc** and **kd** values will reflect the options chosen in step 6, meaning that altering their values directly will affect only the current calculation.

8. Enter the parameters of the eN curve you want to use. Note that in general you don't need to change these values, since they're automatically loaded from the Materials Database and the value of the **elastic exponent b** is corrected when you alter any **ka**, **kb**, **kc**, **kd** or **ke** values. You can also **calculate the values of the eN Curve parameters** or retrieve them from the Materials Database, by using the **Calculate b, c button** commands. Right-click on the **eN curve graph** and choose **Redraw** to see the changes in it.

9.(*) Enter the value of the **End of life at damage field**. This is the total damage value that characterizes failure of the specimen. The Palmgreen-Miner rule suggests a total damage value of 1 for the end of life, but other values can be chosen by the user.

10.(*) Choose which **Strain concentration theory** is to be used when **stress concentration factors** are present. **Linear** theory considers $K_e = K_t$ (strain concentration K_e is equal to K_t), while **Neuber** theory uses $K_e \cdot K_s = K_t^2$.

11.(*) Choose if you want to **Consider the SN Curve Elbow** applied to the elastic component of the eN Curve. This option lets the user neglect the damage associated to loadings under the endurance limit S_f ($S_f = k_a \cdot k_b \cdot k_c \cdot k_d \cdot k_e \cdot S_f'$) from the SN theory. Right-click on the **eN curve graph** and choose **Redraw** to see the changes in it due to the elbow.

12.(*) Choose if you want to **calculate hysteresis loops** in the eN calculations with the **Calculate Hysteresis Loops option**. This option is **highly recommended** for complex loadings, since not calculating the hysteresis loops in general leads to unrealistic and probably **non conservative** calculated strains. Choose also the **Loop Corrections option**, in order to make the program correct the wrong hysteresis loops that classical theory would predict. You can also **choose to plot the Cyclic Stress-Strain curve** together with the loops, in order to better visualize the importance of these loop corrections. Note that if the **Show Hysteresis Loops Graph option** from the Options window is not checked, the loops are not plotted on the screen, but they are calculated and corrected anyway.

13.(*) Once the **Calculate Hysteresis Loops option** is chosen, you can choose to calculate the **Rainflow of the calculated strains**, which is the **recommended** method (instead of performing Rainflow before drawing the hysteresis loops). If you use step 2 and **calculate Rainflow** before drawing the loops (instead of using the **Rainflow of Calculated Strains option**) you'll end up with different hysteresis loops than the actual ones, therefore you will calculate a **wrong** damage. Once you choose to **calculate the Rainflow of the calculated strains**, you can also choose (i) an amplitude filter in **microstrains**, (ii) to specify the **range of hysteresis loops you want to plot**, (iii) the **accuracy of the calculations** and (iv) the **plotting resolution**.

14. Enter the value of the **Stress Concentration Factor (K_t)**. This value can also be calculated using the **Calculate K_t button | Typical** (which goes to the Calculate Typical Stress Concentration Factor window and calculates K_t given a desired geometry) or the **Calculate K_t button | Stored** (which goes to the Smart Calculator window and calculates K_t from previously stored equations in the K_t Equations Database) commands.

15. Check if all options are set as desired and press the **OK Button**.

The damage and residual life will be calculated and shown in the **Loading Window**. Note that the residual life (in days) depends on the **Loading Time** value from the **Loading Window**.

How do I Calculate Unidimensional Crack Growth ?

To quantify fatigue damage in cracked structures, **ViDa** calculates crack growth using any da/dN equation specified by the user, recognizing **retardation** and even **crack arrest effects**. Below there is a complete list of all steps you might need to go through to perform this calculation. Note that some of these steps can be skipped in some cases and also some of the options are not available in the **Simplified Modeling option** (the symbol (*) will denote options only available in the **Extended Modeling option**).

1. Load a **Loading History** or type it in the **Loading Window**.

2. If the loading is a sequential history, you might want first to **Check or Filter it**. Unless your loading history comes from an histogrammer as a set of Alternate/Mean/no. of **half** cycle components (thus not keeping order or sequencing information), it is recommended to use a **rainflow** counter. Make sure that the history in the **Loading Window** is expressed as a Peak/Valley sequence (by clicking on Peak/Valley in the **Sequencing Option**), enter a value for the **amplitude Filter** (optional), and then click **Life | Rainflow**. The **Loading Window** will then contain the Rainflow-filtered Peak/Valley history. Note that the rainflow counting of the loading alters its sequencing and, in consequence, the calculated crack growth. It is strongly recommended that the **sequential** rainflow counter is used instead of the traditional rainflow because sequencing is a fundamental issue in crack growth calculations, see the Textbook "Fatigue Design under Complex Loading".

3. If you want to use a different material from the one shown in the **Loading Window**, go to the Materials database window and **choose the desired material** or **query for materials with certain desired properties** (in which case the Find Material window will appear). Note that you can alter the material properties, but you'll need to save the changes using the **File | Save command** prior to any calculations. It is possible to **estimate properties** or calculate them from experimental data, please refer to the How do I Use the Materials Database topic for more information. After choosing the desired Material, click on the **File | Exit command** to return to the **Loading Window**.

4. Click on **Life | Crack Growth** to enter the Crack Growth (da/dN) window.

5. Enter the **Calculation Title** in order to further identify this calculation in the Calculation Logbook window.

6. You can alter the values of **deltaK_{th}**, **K_{IC}**, **A** and **m** (from **Paris** law), **A** and **m** (from **Elber** law) and **p** (from **Walker** and **Modified Walker** laws) prior to the calculations. In general you don't need to change these values, since they're automatically loaded from the Materials Database for the current material. Note that the next time you call the Crack Growth (da/dN) window these properties will be loaded again from the Materials database, meaning that altering their values will only affect the current calculation. You can also calculate or retrieve the values of **A** and **m** from either **Paris** or **Elber** laws from the Materials Database, by using the **Calculate A, m (Paris or Elber)** buttons. Right-click on the **da/dN curve graph** and choose **Redraw** to see the changes in it.

7.(*) Choose **other da/dN equation** that can be used in the crack growth calculation (besides **Paris**, **Elber**, **Walker** and **Modified Walker** equations) from a **list of equation names** (loaded from the da/dN equations database). The chosen equation will be displayed in the **Formula field**. Right-click on the **da/dN curve graph** and choose **Redraw** to see the changes in it.

8.(*) You can directly alter the formula for the chosen equation in the **Formula field** (click on the **? button** for information on the available functions from the equation interpreter). Note that the next time you call the Crack Growth (da/dN) window this formula will be loaded again from the equations database, meaning that directly altering the **formula** will only affect the current calculation. In order to save an edited formula as a new equation you should use the **Save As New button** (or go to the da/dN Equations Database Window). Right-click on the **da/dN curve graph** and choose **Redraw** to see the changes in it.

9.(*) Alter the values from the **Variables Table** in order to adjust the parameters of the **chosen da/dN equation**. Just click on the desired variable and enter its new value (you can also load a previously saved Variables file (*.var), which contains all values from the **Variables Table**). You can visually adjust the **chosen da/dN equation** in order to be compatible with **Paris** and **Elber** equations by interactively altering

the **variables values** and right-clicking on the **da/dN graph** and choosing **Redraw** in order to see the changes in it. You can also **calculate the da/dN value** for a specific **deltaK** and **R** ($=K_{min}/K_{max}$) by clicking on the **Calculate button**.

10. Enter the values of the **specimen width w** (measured in the direction of the crack growth), the **initial crack size a** and also a **reference final crack size** for which the calculations should stop (in order to ignore this final value criterion, just set the **final value** to zero).

11. (*) Choose a **stress intensity factor (KI) equation** that will be used in the crack growth calculation from a **list of KI equation names** (loaded from the KI equations database). Note that the $\text{Sigma} \cdot \sqrt{\pi \cdot a}$ term is already built in, so the equations are actually the **geometry factors** (beta).

12. (*) After choosing **KI** from the **list**, the corresponding equation will be displayed in the **Formula field**. You can directly alter the formula for the chosen equation in the **Formula field** (click on the **? button** for information on the available functions from the equation interpreter). Note that the next time you call the Crack Growth (da/dN) window this formula will be loaded again from the equations database, meaning that directly altering the **formula** will only affect the current calculation. In order to save an edited formula as a new equation you should use the **Save As New button** (or go to the KI Equations Database Window).

13. (*) Alter the values from the **Variables Table** in order to adjust the parameters (if any, besides **a** and **w**) of the **chosen KI equation**. Just click on the desired variable and enter its new value (you can also load a previously saved Variables file (*.var), which contains all values from the **Variables Table**). You can also calculate the **KI** value for a specific stress variation **deltaSigma** by clicking on the **Calculate button**.

14. (*) Choose the calculation procedure to be used: **Sequential calculation** or the **Root Mean Square (RMS) approach**. If you chose the **RMS approach**, jump to step **16**.

15. (*) Enter the **Wheeler Retard Effect exponent beta (or gamma)** of the retard effect due to overloads (enter zero in order to neglect retard effects) and **choose between the Wheeler (corrects da/dN) or the Modified Wheeler (corrects deltaK) retard effect corrections**. Choose also the **percentage precision** in the Retard Effect calculation. Click on the **Retard Effect Help button** for additional information. Go to step **17**.

16. (*) Choose if you want to use the **Simpson Integral** in the **RMS crack growth** calculation. If this option is off, then the numerical integration of the da/dN equation is done with a 1 cycle integration step. If the **Simpson Integral option** is on, then the user may input a value for the integration step which is a percentage of the crack size. If you chose the **Simpson Integral option** then you can skip step **17**.

17. (*) Enter the **Percentage value of the Increase in Va Criterion** (increase percentage of the square root of the crack size for which the Stress Intensity Factor **KI** is recalculated, used to speed up the calculations). Typical values are in the 0.1 – 1.0% range. Click on the **Increase in Va Criterion Help button** for additional information.

18. (*) Choose to or not to **use logarithmic interpolation to iterate within each step in the numerical integration** (only applicable for the **Sequential calculations**). Since the value of da/dN varies within an integration step, setting this option on makes the program iterate once for each integration step. Slightly better accuracy is achieved with this option on.

19. Choose which equations you want to use in the crack growth calculation, among **Paris law**, **Elber law**, **Walker law**, **Modified Walker law**, and another da/dN equation (only available for the **Extended Modeling option**).

20. Check if all options are set as desired and press the **OK Button**.

The total crack growth and average da/dN will be calculated for all the **chosen da/dN equations** and shown in the **Loading Window**.

How do I Calculate Bidimensional Crack Growth ?

Surface cracks grow bidimensionally, i.e, both sideways and in depth. Certainly we cannot rely in pure unidimensional crack growth calculations. **ViDa** handles these bidimensional cracks and calculates crack growth in both directions, considering the changes in crack shape using any da/dN equation specified by the user, recognizing **retardation** and **crack arrest effects**. The cracks are assumed elliptical in shape, with semi-axis **a** and **c**. The **corner crack** is assumed to be a quart ellipsis, the **surface crack** a semi ellipsis and the **internal crack** a full ellipsis. The cracks can change the **a/c** ratio during their propagation, but remain elliptical.

1. Load a Loading History or type it in the **Loading Window**.

2. If the loading is a sequential history, you might want first to **Check or Filter it**. Unless your loading history comes from an histogrammer as a set of Alternate/Mean/no. of **half** cycle components (thus not keeping order or sequencing information), it is recommended to use a **rainflow** counter. Make sure that the history in the **Loading Window** is expressed as a Peak/Valley sequence (by clicking on Peak/Valley in the **Sequencing Option**), enter a value for the **amplitude Filter** (optional), and then click **Life | Rainflow**. The **Loading Window** will then contain the Rainflow-filtered Peak/Valley history. Note that the rainflow counting of the loading alters its sequencing and, in consequence, the calculated crack growth. It is strongly recommended that the **sequential** rainflow counter is used instead of the traditional rainflow because sequencing is a fundamental issue in crack growth calculations, see the Textbook "Fatigue Design under Complex Loading".

3. If you want to use a different material from the one shown in the **Loading Window**, go to the Materials database window and **choose the desired material or query for materials with certain desired properties** (in which case the Find Material window will appear). Note that you can alter the material properties, but you'll need to save the changes using the **File | Save command** prior to any calculations. It is possible to **estimate properties** or calculate them from experimental data, please refer to the How do I Use the Materials Database topic for more information. After choosing the desired Material, click on the **File | Exit command** to return to the **Loading Window**.

4. Make sure that the **Extended Modeling option** is chosen using the **Tools | Options command**. This option is required to let **ViDa** calculate bidimensional crack growth. Click on **Life | Bidimensional Crack Growth** to enter the Bidimensional Crack Growth (da/dN and dc/dN) window.

5. Enter the **Calculation Title** in order to further identify this calculation in the Calculation Logbook window.

6. You can alter the values of **deltaK_{th}**, **K_{Ic}**, **A** and **m** (from **Paris** law), **A** and **m** (from **Elber** law) and **p** (from **Walker** and **Modified Walker** laws) prior to the calculations. In general you don't need to change these values, since they're automatically loaded from the Materials Database for the current material. Note that the next time you call the Bidimensional Crack Growth (da/dN and dc/dN) window these properties will be loaded again from the Materials database, meaning that altering their values will only affect the current calculation. You can also calculate or retrieve the values of **A** and **m** from either **Paris** or **Elber** laws from the Materials Database, by using the **Calculate A, m (Paris or Elber)** buttons. Right-click on the **da/dN curve graph** and choose **Redraw** to see the changes in it.

7. Choose **another da/dN equation** that can be used in the crack growth calculation (besides the **Elber** and **Modified Walker** equations) from a **list of equation names** (loaded from the da/dN equations database). The chosen equation will be displayed in the **Formula field**. Right-click on the **da/dN curve graph** and choose **Redraw** to see the changes in it.

8. You can directly alter the formula for the chosen equation in the **Formula field** (click on the **? button** for information on the available functions from the equation interpreter). Note that the next time you call the Bidimensional Crack Growth (da/dN and dc/dN) window this formula will be loaded again from the equations database, meaning that directly altering the **formula** will only affect the current calculation. In order to save an edited formula as a new equation you should use the **Save As New button** (or go to the da/dN Equations Database Window). Right-click on the **da/dN curve graph** and choose **Redraw** to see the changes in it.

9. Alter the values from the **Variables Table** in order to adjust the parameters of the **chosen da/dN equation**. Just click on the desired variable and enter its new value (you can also load a previously saved Variables file (*.var), which contains all values from the **Variables Table**). You can visually adjust the **chosen da/dN equation** in order to be compatible with the **Elber** equation by interactively altering the **variables values** and right-clicking on the **da/dN graph** and choosing **Redraw** in order to see the changes in it. You can also **calculate the da/dN value** for a specific **deltaK** and **R** (=Kmin/Kmax) by clicking on the **Calculate button**.

10. Enter the values of the specimen dimensions **w** and **ti** (and **di** for **Internal cracks** and **Ri** for **cracks in cylinders under pressure**) beside the crack drawing (note that the Variables Table is not used here). Enter also the crack initial dimensions **a** and **c** and also a reference final crack size for **a** and **c** for which the calculations should stop (to ignore this final value criterion, just set the final values to zero).

11. Choose which type of bidimensional crack will be considered in the calculations by clicking on the **Elliptic**, **Corner**, **Internal**, or **Cylinder** tabs. The crack type will define the built-in stress intensity factor (**KI**) equations that will be used in the crack growth calculation.

12. For the **Elliptic** and **Corner** cracks, enter the **Tension** and **Bending** factors by which the loadings of the **Loading Window** are multiplied and considered as Tension and/or Bending Stresses applied to the specimen (see the arrows in the **Crack Type Drawings**).

13. Beside the **Graph 1 option**, choose the **field** (and **sampling rate**) to be plotted in the **Damage Curve / 2D Crack Graph** in the Main Window.

14. Beside the **Graph 2 option**, choose the **field** (and **sampling rate**) to be plotted in the **Hysteresis Loops / Elliptic Cracks Graph** in the Main Window.

15. Choose the calculation procedure to be used: **Sequential calculation** or the **Root Mean Square (RMS) approach**. If you chose the **RMS approach**, jump to step 17.

16. Enter the **Wheeler Retard Effect exponent beta (or gamma)** of the retard effect due to overloads (enter zero in order to neglect retard effects) and **choose between the Wheeler (corrects da/dN and dc/dN) or the Modified Wheeler (corrects deltaK) retard effect corrections**. Choose also the **percentage precision** in the Retard Effect calculation. Click on the **Retard Effect Help button** for additional information. Go to step 18.

17. **Choose if you want to use the Simpson Integral** in the **RMS crack growth** calculation. If this option is off, then the numerical integration of the da/dN and dc/dN equations is done with a 1 cycle integration step. If the **Simpson Integral option** is on, then the user may input a value for the integration step which is a percentage of the crack dimensions **a** and **c**. If you chose the **Simpson Integral option** then you can skip step 18.

18. Enter the **Percentage value of the Increase in Va (and Vc) Criterion** (increase percentage of the square root of the crack size for which the Stress Intensity Factor **KI** is recalculated, used to speed up the calculations). Typical values are in the 0.1 – 1.0% range. Click on the **Increase in Va (and Vc) Criterion Help button** for additional information.

19. Choose to or not to **use logarithmic interpolation to iterate within each step in the numerical integration** (only applicable for the **Sequential calculations**). Since the value of da/dN and dc/dN vary within an integration step, setting this option on makes the program iterate once for each integration step. Slightly better accuracy is achieved with this option on.

20. **Choose which equations** you want to use in the crack growth calculation, among **Elber** law, **Modified Walker** law, and another da/dN equation, and press the **OK Button**.

The total crack growth in the **a** and **c** directions and **average da/dN** and **dc/dN** will be calculated for the **chosen da/dN equations** and shown in the **Loading Window**.

How do I Use the Materials Database ?

In the Material window it is possible to manipulate the Materials database, **adding, deleting, changing** or just **selecting a specific material**. You can alter the material properties by clicking on the respective field and entering the new data. Note that this new value will only be effective after you save it using the **File | Save command**.

Values in black represent measured properties, while the values in red reflect estimated properties (which are less reliable). To toggle the black/red colors, press the space bar while editing the desired field (don't forget to **save the changes** after).

The following are some common procedures in the Material window. After **choosing the desired material** and setting the property values click on **File | Exit** to go back to the Main Window.

Selecting a material: click on the **File | Open command** to go to the Open Material window, which shows a **list of all available materials**. Just click on the name of the desired material to load it.

Searching a material with certain properties: click on the **File | Find command** to go to the Find Material window. There you can search for materials by their type by choosing from steels, alumina, etc. in the **Materials list**. You can set any property ranges to look for, just click on one of the **Property lists** and set the **range of the chosen property** on the two fields on the right, in the same row. Multiple criteria can be used in your search, **ViDa** will look only for the materials that match ALL the desired property ranges. You can also sort the matching materials by any property, just click on one of the **Order by lists** and choose between **Descendent** (to sort from the highest to the lowest values) or **Ascendant** sorting order.

Browsing all material properties: click on the **File | Browse command** to go to the Browse Material window. There you can see all properties of all materials on a single table. You can customize the table layout, change the order of the columns, and the materials are automatically sorted by the property on the first column of the table. Double-click on the name of the desired material to load it to the Material Window.

Altering material properties: just type the new value of the property and click on the **File | Save command**. Before saving you can also press the space bar on the value in order to toggle between black or red coding colors (black for measured, more reliable properties and red for estimated properties). Note that you need to **save the changes** for them to become effective and available for further calculations. Only after **saving the properties** the graphs in the window are updated.

Creating a new material: click on the **Edit | Clear All Properties command** to clear all properties. Now enter the **name of the new material**, which must be different from all other ones (since all materials must have an unique name in the database). You can also enter some comments in the **Name field** (such as the Brinnell hardness) in order to tell apart materials with the same name. Be sure to choose the material type (steel, aluminum, etc.) from the **Material list** and enter the values of the material properties. You can press the space bar on any value in order to toggle between black or red coding colors (black for measured, more reliable properties and red for estimated properties). After entering the known properties you can use the **Edit | Estimate using Nominal Values command** to estimate the remaining properties from Nominal Values and the known properties. Finally, click on the **File | Save As New command** to create the new material.

Estimating properties: you can estimate material properties from Nominal Values and the known properties. Just click on the **Edit | Estimate using Nominal Values command** to let **ViDa** estimate the missing properties (the ones with null values). If you want to clear the previously estimated properties (the ones color coded in red) you can use the **Edit | Clear Estimated Values command** prior to the **new estimation**. For more information on the estimates, click on the **Estimates Help button**, which shows (just for reference) a window with all the equations used to estimate properties from Nominal Values. You can also interactively estimate the values of **b** and **c** from the SN curve or the values of **A** and **m** from the **Paris law** using the **Calculate buttons**. Don't forget to use the **File | Save command** to save the estimated properties and make them effective and available for further calculations.

Entering experimental data points: to enter experimental data points, which can be used to fit SN, eN or da/dN curves and estimate their parameters, use the **Experimental Points tab**. Refer to the topic How do I Handle Experimental Data Points ?.

How do I Handle Experimental Data Points ?

The user can store experimental data points for the currently selected material. SN, eN and da/dN (**Paris** or **Elber**) curves can be **automatically fitted** to the experimental points, and the calculated properties data can be used for future calculations.

The following example shows how to store eN Curve data points and how to calculate the eN Curve parameters using a least squares fitting.

1. Go to the Experimental Points tab on the Material Window.
2. Click on the **eN Tab** to switch tab to the **eN curve experimental points table**.
3. With the help of the **Table** menu, type in the **eN table** the number of reversions (2N) and associated strain and stress amplitudes **d ϵ /2** and **dS/2**. **ViDa** needs the value of the stress amplitudes **dS/2** in the least squares fit because the eN Curve contains 4 parameters to be calculated. You can also load a CSV (Comma Separated Values) file into the table by using the **Table | Import command**. Note that **ViDa** ignores the first row of the CSV file (assuming that it just contains the column titles) and the file must have exactly 3 columns (for the eN table only, for the SN or da/dN tables it must contain 2 columns).
4. The user can convert the values from **ALL** 3 tables from SI to English units or vice-versa by using the **Table | MPa -> ksi** or the **Table | ksi -> MPa** commands. Since **ViDa** only saves the **numerical** values from each table, the user must be careful about which units the table values represent.
5. Choose the **Fit eN button** to fit the eN **experimental data points** (using a least squares method) for a **Coffin-Manson** equation. The 4 eN curve constants are calculated and the fitted curve is plotted on the **eN graph** as Log(**e**) x Log(**N**) (the Young modulus **E** comes from the **monotonic data**).
6. Choose the **File | Save command** if you want to save the **experimental data points** and the calculated constants to the Materials database. These points will be associated to the **current material**.
7. If you want to use the calculated eN curve constants in further calculations, you need to copy them from the **Experimental Points tab** and paste on the eN curve parameters on the **Fatigue and Fracture tab**.
8. If you copied any fitted parameters as described in step 7, you need to **save the changes** for them to become effective and available for further calculations. Use the **File | Save command** to save the changes.

How do I Use the Equations Database ?

In the Kt, KI or da/dN Equations Database window it is possible to **add**, **delete** or **change data** of a specific equation. You can alter the equations just by clicking on the desired field and entering the new data. Note that this new data will only be effective after you save it using the **Update button**.

The following are some common procedures in the Equations Database window.

Editing an current equation: just type the alterations in the **equation** and click on the **Update button**, making the changes effective and available for further calculations.

Creating a new equation: on the **last row** of the table, enter the **name of the new equation**, which must be different from all others (since all equations must have an unique name in the database). Type in the **equation Formula** (click on the **Equation Interpreter Help button** to get more information about the equations syntax) and the optional **Source** and **Memo** fields. Finally, click on the **Update button** to create the new equation.

Deleting an equation: click on the row of the equation you want to delete, and click on the **Delete button**.

How do I Handle Tridimensional Stress Histories / Rosette Data?

ViDa lets you calculate equivalent stresses (or strains) for a **list of 3D-stresses** (with normal and shear components) or for a **list of strain triplets** measured from a **rectangular** or **delta Rosette** in the Calculate Tridimensional Equivalent Stress and Calculate Rosette Equivalent Stress windows. Use the **Calculation Type tabs** to toggle between **3D** or **Rosette** components. These **equivalent stresses** can then be used in the **Loading Window** for damage and crack growth calculations.

1. For **3D** stresses, go to the Calculate Tridimensional Equivalent Stress window and type in the stress (or strain) tensor components XX, YY, ZZ, XY, XZ and YZ in the **Tridimensional Table**. You can choose between **Stress** or **Strain** loadings using the **Table option**. You can also enter **stress concentration factors for each component of the 3D tensor**, used in the equivalent history calculation.

2. For **Rosettes**, go to the Calculate Rosette Equivalent Stress window and type in the Peak/Valley **strain** (in **microstrains**) loading histories for all 3 Rosette components A, B and C in the **Rosette Table**. You can also alter the **Poisson coefficient** and the **Young modulus E** of the current material and even **define a direction** on which you want to project the calculated stresses/strains.

3. You can also **load a Peak/Valley file into one or more of the columns of the Tridimensional or Rosette Tables** (selecting the desired column(s) and loading a *.pic file), **load a Tridimensional Peak/Valley file (file extension *.p3d)** or **load a Rosette Peak/Valley file (file extension *.ros)**.

4. Choose the desired equivalent stress (or strain) calculation from the **Calculate button**. The result of the calculation is shown in the **Equivalent Peak / Valley table** and in the **Input / Output graph**.

5. The resulting stresses (or strains) shown in the **Equivalent Peak / Valley table** can be transferred to a new **Loading Window** of the **Main Window** using the **Transfer button**, returning to the Main Window.

Done. A new **Loading Window** has been created containing an equivalent Peak/Valley history. You can now calculate fatigue damage or crack growth using these loadings.

How do I Use the Smart Calculator ?

ViDa has an alphanumeric calculator that computes any **formula** using the material properties and **user-defined variable values**. Some basic Mechanics of Solids equations are also embedded in the calculator and **computed results** can be used to **multiply the loadings** in the **Loading Window**. The Smart Calculator also has direct links to the Calculate Typical Stress Concentration Factor (Kt) and Calculate Notch Sensitivity (q) for Steels and Alumina windows to compute the values of **Kt**, **q** and **Kf**.

The following example will show how to **convert a force history** from the **Loading Window** that causes bending and torsion stresses on a **filleted shaft** into a **history of equivalent stresses**. This conversion is fundamental since **ViDa** only deals with stresses or strains in its calculations (not forces).

1. Choose the **Symbolic option** and type in the **Formula field** the equation that will be computed in the Smart Calculator Window. This equation may include any variable from the **Variables Table**, any material property or even mathematical functions (click on the **Equation Interpreter Help Button** for more information). To calculate equivalent stresses, you can click on the **Mises button** in order to automatically type the equivalent stress equation $(s \cdot K_f)^2 + 3 \cdot (t \cdot K_f)^2)^{.5}$

2. Highlight the letter **s** in the equation using the mouse (by clicking the mouse button and dragging over the letter) and press the **Bending button**. The letter **s** will be replaced by the bending stress equation for a circular shaft, $32 \cdot M / (\pi \cdot d^3)$. Assuming that the bending moment **M** is equal to the applied force times the beam length **L**, replace the letter **M** by the letter **L** (you don't need to include the force since this expression will **multiply the force history** in the **Loading Window** at the end of the calculation).

3. Highlight the expression **Kf** that is beside the bending stress expression and click on the **Kf button**. The Calculate Typical Stress Concentration Factor (Kt) window will appear. Type in the **specimen dimensions** and click on the **filleted shaft group** and on the **figure corresponding to bending on a filleted shaft**. The values of **Kt** and **q** will be calculated and the resulting fatigue stress concentration factor **Kf** will be displayed. Click on the **OK button** to return to the Smart Calculator and automatically replace the expression **Kf** in the **Formula field** by the value of the **calculated Kf**.

4. Highlight the letter **t** in the equation using the mouse (by clicking the mouse button and dragging over the letter) and press the **Torsion button**. The letter **t** will be replaced by the torsion stress equation for a circular shaft, $16 \cdot T / (\pi \cdot d^3)$. Assuming that the torsion **T** is linearly related to the applied forces by a constant **t**, replace the letter **T** by the letter **t** (you don't need to include the force since this expression will **multiply the force history** in the **Loading Window** at the end of the calculation).

5. Highlight the expression **Kf** that is beside the torsion stress expression and click on the **Kf button**. Repeat step 3, but now choose the **figure representing torsion on a filleted shaft**. Click on the **OK button** to return to the Smart Calculator and replace the expression **Kf** in the **Formula field** by the value of the **calculated Kf**. The resulting expression should be similar to $((32 \cdot L / (\pi \cdot d^3) \cdot 1.41)^2 + 3 \cdot (16 \cdot t / (\pi \cdot d^3) \cdot 1.21)^2)^{.5}$

6. In the **Variables Table**, click on the **L**, **t** and **d** variables and enter the values of the **shaft length L**, the constant **t** relating the forces and torsion stresses and the **shaft diameter d**.

7. Click on the **Calculate SI button** to calculate the value of the **expression** using SI units (or **Calculate ksi button** for English units). Note that in this specific example we didn't use any of the material properties in the **Formula field**, so it doesn't matter if we click on the **Calculate SI** or **Calculate ksi buttons**. The **calculated value** is a constant that can multiply the force history to convert it into an equivalent stress history (see step 8). Watch out for the units: if the forces in the **Loading Window** are in Newtons and the values of **L**, **t** and **d** are in meters than you need to type **1E6*** on the left of the formula prior to calculation (since the stresses should be calculated in MPa, not Pa).

8. Click on the **Multiply Loadings button** to multiply ALL the loadings from the **Loading Window** by the value shown in the **Result field**. The **Loading Window** will now contain an equivalent stress history (with stress concentration factors already included).

9. Close the Smart Calculator window to return to the Main Window.

Useful Tips about ViDa

General Tips

1. ViDa has Rainflow counters, Tridimensional Stress handling, Rosettes, Stress Concentration Factor tables, and much more! To know more about ViDa, click Contents on the Help menu, and refer to 'Working with ViDa Windows'.
2. To change the current material without needing to go to the Material Database window, just select its name from the Material dropdown list on the Main Window.
3. The Calculation Logbook is a very useful tool to compare the results of similar fatigue calculations performed under different option settings. To save to a file (*.log), open or print the Logbook tables, click Save, Open or Print on the File menu.
4. By filling out the 'Calculation Title' field on the calculation windows, it is possible to easily compare the results of different calculations in the Calculation Logbook window.
5. ViDa accounts for the damage (or crack growth) in a sequential manner, from the first to the last event. Therefore, it can quantify sequence effects, such as overload-induced residual stresses, which can significantly alter the fatigue life of the piece.
6. To stop a calculation in progress, press the ESC key.
7. To select the Simplified modeling option, recommended for beginners, click Options on the Tools menu and click the Simplified option on the Modeling tab. All life calculation windows are then significantly simplified, and the hidden options are set to default values which are either the simplest or the traditionally used by the fatigue design techniques.
8. To change the idiom used in ViDa among English, Portuguese, French, German, Italian or Spanish, click Options on the Tools menu and select the Idiom tab. You'll need to exit and restart ViDa to make the changes effective. You can even add a 7th idiom if you have a Windows Resource editor to edit the 'Vida.res' file.
9. To choose between SI or English units, click Options on the Tools menu and select the Units tab. All the calculations and stress data in ViDa are then considered to be in MPa or ksi accordingly (even though the Material database physically saves the data in SI units).
10. To add one or more rows on the Loading Datasheet, highlight the number of rows to be added (by dragging the mouse while pressing the left button), and click Add Rows on the Edit menu. The rows are added above the selection.
11. To delete one or more rows from the Loading Datasheet, highlight the rows to be deleted (by dragging the mouse while pressing the left button), and click Delete Rows on the Edit menu.
12. To replicate a group of rows of the Loading Datasheet (in order to enter repetitive blocks), select the rows you want to copy (by dragging the mouse on them while clicking the left button), click Clone Block on the Edit menu, and enter the number of times to copy this block. The copied blocks are inserted below the last selected row.
13. To assign a value to a group of cells of the Loading Datasheet, select the cells to be set (by dragging the mouse), click Fill on the Edit menu, and enter the desired numerical value. Alternatively, try dragging one cell with the mouse while pressing CTRL, to copy its value to all your selection.
14. To multiply ALL the values of the Alternate and Mean (or Peak/Valley) columns of the Loading Datasheet by a constant value, click Multiply by Constant on the Edit menu and enter the value of this constant.
15. To convert the numerical values of ALL stresses on the Loading Datasheet from MPa to ksi (or ksi to MPa), click MPa->ksi (or ksi->MPa) on the Edit menu. Note that this only changes the Loading Datasheet. To choose English or SI units for the whole software, select Options on the Tools menu and the Units tab.
16. To check the coherence (to avoid two successive peaks or valleys) of a Peak/Valley history, click Check Peak/Valley on the Edit menu. The incoherent events are automatically eliminated from the Loading Datasheet.

17. To automatically convert the Loading Datasheet entries from Alternate/Mean to Peak/Valley components (or vice-versa), click on the Peak/Valley (or Alternate/Mean) option above the Datasheet.
18. The loading time is the duration in seconds of ALL events in the Loading Datasheet. Use it to estimate how long it would take to end the life of the specimen, provided that the same loading rates would continue to be applied.
19. The Sequential Rainflow is a variation of the Rainflow that partially retains the loading order, which is very useful both with the eN method and with the crack growth calculations (which are very sensitive to the loading order). To perform it on a Peak/Valley history, click Sequential Rainflow on the Life menu.
20. Be careful when using the amplitude filter (above the Loading Datasheet), since greater filter values can significantly decrease the computational effort, but also can lead to non-conservative damage calculations. To use it, type in a value different than zero and click Filter (Edit menu), Rainflow or Sequential Rainflow (Life menu).
21. Some keyboard commands for editing the Loading Datasheet: [Enter - move down one cell] [Arrows - move along cells] [Ctrl+Arrows - jumps to the beginning or end of table] [Shift+Arrows - selects group of cells, for copying, etc.] [Ctrl+dragging the mouse - copies current cell value to all your selection].
22. To import a CSV file (*.csv) to the Loading Datasheet, click Open on the File menu and choose which column to load. ViDa automatically eliminates points that are not peaks nor valleys. You can also specify a conversion factor to multiply the loaded values and even use a Racetrack Filter to limit the size of the history.
23. To import output files from the Kyowa RHS-500A histogrammer into the Loading Datasheet, click Open on the File menu and select the files of type 'Kyowa Files (*.1*)'.
24. To import porthole files (*.port) from the ADINA Finite Element software into the Loading Datasheet, click Open on the File menu and select the files of type 'ADINA Porthole Files (*.port; *.por)'.
25. To expand or shrink any graph in ViDa, double-click on it with the mouse.
26. To view the coordinates of a point in any graph, click on it with the mouse, and its coordinates will appear in the Main Window status bar.
27. To import CSV files (*.csv) to the Hysteresis Loops / Elliptic Cracks graph, right-click on the graph with the mouse and select Import CSV File. You'll have the option to select 2 columns from the file to be plotted against each other.
28. To save the Hysteresis Loops / Elliptic Cracks graph values as a CSV file (*.csv), right-click on the graph with the mouse and select Save As CSV File. You can later Import this CSV file to review old calculation plots.
29. To save most graphs in ViDa as a CSV file (*.csv), right-click on it with the mouse and select Save As CSV File. The first row in the saved file will contain the legend titles of each set in the graph, and the following rows will contain the respective data for each set.
30. To print any graph in ViDa, change its axes scale (useful to keep the aspect ratio of plotted elliptical cracks fronts) or even export its values as a CSV file (*.csv), right-click on it with the mouse and select the appropriate command.
31. To redraw the Hysteresis Loops graph using thin lines, right-click on it with the mouse and select Change Curve Thickness. Making the curves thinner helps in visualizing graphs with too many lines.
32. To toggle between Log-Log or Linear representations of any SN, eN and da/dN graphs, right-click the respective graph with the mouse and choose the desired option.

Material Database Tips

33. ViDa has a complete Material Database with stress-strain curves, SN, eN and da/dN data and many other properties of over 400 materials! This database can be expanded by the user with no storage limits and all the materials can be searched by user defined criteria. To enter the database, click Data | Material.
34. If you change properties in the Material Database, you need to click Save on the File menu to be able to use these changes in the life calculations. To create a new material, click Save As New on the File menu.

35. To search for materials by their type (steels, alumina, etc.), by any property ranges (e.g. steels with S_u between 600 and 800 MPa), or any combinations of properties, click Search on the File menu of the Material window. You can also sort the matching materials by any property.
36. ViDa has a read-only table where you can browse through all available materials and property values, and easily group or sort them by any property. To access the Browser Table you can either click Material Browser on the Data menu, or go to the Material window and click Browser on its Tools menu.
37. The simplest way to create a new material on the Material window is to click Clear All Properties on the Edit menu, type in the material name, type and known properties, click Estimate Using Nominal Values on the Tools menu (to estimate the unknown properties), and click Save As New on the File menu.
38. The properties in red on the Material Database denote properties that were calculated/estimated from others, without having been directly measured or imported from a reliable reference. This color can be toggled by pressing the Space bar on the desired field (don't forget to save after).
39. To estimate unknown material properties on the Material window, click Estimate Using Nominal Values on the Tools menu. Each missing property is estimated from nominal values and the remaining known properties, and it is color coded in red. For more information on the estimates, click on the Estimates Help button.
40. To toggle between True or Engineering stress-strain hardening curves on the Material window, right-click the graph with the mouse and choose the desired option.
41. You can store experimental data points for the each material on the Material window. SN, eN and da/dN (Paris or Elber) curves can be automatically fitted to these points, and the calculated properties data can be used in future calculations.
42. To import a CSV file (*.csv) into an experimental data table (SN, eN or da/dN) of the Material window, select the tab containing it and click Import on the Table menu.
43. To fit the eN experimental data points on the Material window to a Coffin-Manson equation, click Fit eN on the Tools menu. Note that since there are 4 constants in the eN curve, you need not only the values of $2N$ and $d\epsilon/2$, but also the corresponding stress variation $dS/2$.
44. Steels x Alumina: Steels have in general a fatigue endurance limit (the SN curve elbow) associated to a 1,000,000 cycle life. Alumina, on the other hand, do not have an endurance limit. Also, the Notch Sensitivity q doesn't depend on S_u for Alumina, while for Steels it does depend.

SN Method and Welded Structures Tips

45. The SN method is recommended only if the stress/strain history at the critical point - normally a notch root - is elastic. If the loading induces plastic deformations at the critical point, then the eN method should be used instead.
46. It is recommended to use the Sequential Rainflow counter (which preserves most ordering information) before any SN calculations on long loading histories. Fill in the Filter field (above the Loading Datasheet) to enable the removal of small events that cause no damage, and click Sequential Rainflow on the Life menu.
47. The SN curve shown on the Material window is the Standard Estimated SN Curve, which ignores the values of the endurance limit modifiers k_a , k_b , k_c , k_d and k_e . These modifiers are then used to estimate the Piece SN Curve, which is shown on the SN method window.
48. ViDa lets you define the SN curve ($N \cdot S^b = c$) in 3 ways: Automatic (interpolates the points $[N, S] = [1000, 0.9 \cdot S_u]$ and $[1E6, S_f]$ for steels), b-Sf-Nf (uses $[N, S] = [N_f, S_f]$ and the supplied value of b), and b-c-Nf (uses the supplied values of b , c and the elbow location N_f , also enabling the 'Calculate b and c' buttons).
49. To use a SN curve with 2 different slopes in fatigue calculations, enter a value different than zero for belb (the b exponent after the elbow) either on the Material window or on the SN method window.
50. Since both SN and eN methods should predict the same damage for high cycle calculations, it is possible to estimate the SN curve parameters from the elastic part of the eN curve. On the SN method window, click on the 'Calculate b and c (SN) from eN Curve' button.

51. To automatically calculate the values of the endurance limit modifying factors k_a , k_b , k_c and k_d on the SN (or eN) method window, enter the Surface Finish, the Type of Loading, the Effective Diameter, the Ultimate Strength (S_u) and the Operating Temperature of the piece. You can also alter these modifying factors manually.
52. To calculate the effective diameter of circular, rectangular, channel or I-beam cross sections under bending, click on the Effective Diameter button on the SN (or eN) method window. ViDa uses this diameter to automatically calculate the fatigue endurance limit modifying factor k_b (the size factor).
53. A better surface finish (k_a) increases the fatigue endurance limit of a piece (less imperfections). Note that it is the surface finish of the critical point (where the damage calculation is made) that matters. Note also that the surface finish does not affect the fatigue life when significant plastic deformation is involved (eN).
54. The endurance limit modifier k_b (the size factor), despite being widely used, can be questioned under the argument that since size effects are caused by stress gradients, the size that matters should be the notch root, which is already considered by the notch sensitivity q . ViDa lets you choose to or not to use k_b .
55. Small specimens (high fatigue limit modifier k_c) at lower temperatures (high k_d) have greater fatigue endurance limit than large ones (which have greater surface area subject to imperfections and high stresses) at higher temperatures (easier dislocation propagation).
56. Be careful not to include the stress concentration factor K_t or K_f in the value of the endurance limit modifier k_e . Remember that K_t is a parameter related to the applied stresses, while k_e is related to the specimen resistance, they're two different concepts.
57. ViDa considers the mean load effect in the SN method calculations, as predicted by the Soderberg, Goodman and Gerber damage models, and even by a custom model.
58. For calculations using the SN method, some theories suggest that the stress concentration factor K_t should only be applied to the alternate stress and ignored for the mean. To consider these theories, clear the Use K_t in S_{mean} option on the SN method window.
59. For compressive mean stresses, the SaSm damage curve is modeled in ViDa as a straight line with a slope ranging from 0% (flat) to 100% of the Goodman curve slope. The beneficial influence of compressive mean stresses (which can extend life) can then be valorized by increasing this percentage on the SN method window.
60. To view the SaSm diagram for a user defined life (in number of cycles), right-click on it with the mouse on the SN method window and choose Define Life for SaSm. The default plotting life is $1E6$ cycles, but it can be drawn for any other value. Note that this command doesn't influence at all the life calculation.
61. To define the total damage value that characterizes failure of the piece, type the desired value on the 'End of Life at Damage' field on the SN, IIW or eN method window. The Palmgreen-Miner rule suggests a total damage value of 1, but you can enter any other value.
62. To calculate Stress Concentration Factors (K_t) on the SN (or eN) method window, click either on the Calculate Typical K_t button (which lets you calculate both K_t and q given a desired geometry and S_u), or on the Calculate Database K_t button (which lets you calculate K_t from previous entries in the Equation Database).
63. To easily calculate the stress concentration factor (K_t) and the notch sensitivity (q) of typical notched and filleted bars and shafts, click Calculate K_t on the Tools menu (or on the SN method window), select the desired specimen, and enter its dimensions.
64. To add your own Stress Concentration Factor (K_t), Stress Intensity Factor (K_I) or Crack Growth (da/dN) equations, which will be available for future life calculations, click Equation on the Data menu.
65. To easily calculate the notch sensitivity (q) for steels or alumina, given S_u and the specimen notch radius, click Calculate q on the Tools menu (or on the SN method window).
66. To consider plasticity-induced sequence effects in SN, check 'Consider Residual Stress' on the SN method window. When yielding occurs at the notch root, ViDa automatically switches to the eN method, calculates the damage and induced residual stresses (later added to the mean stress component), and switches back to the SN method.

67. Fatigue design for welded structures is actually a simplified form of the SN method, based on full-sized structures instead of small specimens. The methodology has been normalized by the International Institute of Welding (IIW) and the American Welding Society (AWS), among others.
68. Welded structures fatigue calculations do NOT depend on the material properties. They only depend on the IIW Weld Joint Class.
69. Welded structures are relatively insensitive to the mean component of the applied stresses, because a large amount of residual stresses has already been introduced by the welding process, which is already taken into account by the Weld Joint Class.
70. The value of the Weld Joint Class, defined by the International Institute of Welding (IIW), is actually the fatigue strength (in MPa) of the weld joint associated with a life of at least 2,000,000 cycles, within a 97% reliability.

eN Method Tips

71. To achieve reliable results by the eN strain-life method, it is highly recommended to calculate the correct elastoplastic hysteresis loops which act at the critical notch root. To enable corrected hysteresis loops calculations, click eN Method on the Life menu and check both the Calculate Hysteresis Loops and Loop Corrections options.
72. To calculate hysteresis loops in the eN calculations, check Calculate Hysteresis Loops on the eN method window. Since not calculating the loops in general leads to unrealistic and probably non conservative calculated strains, this option (combined with the Loop Corrections option) is highly recommended.
73. The eN curve of any material should converge to its SN curve for high cycle lives, where elastic deformations dominate. The eN method window lets you consider an elbow on the elastic component of the eN curve (derived from the SN's fatigue endurance limit), and also plots together both SN and eN curves for comparison purposes.
74. When considering strain concentration factors on the hysteresis loops, two main theories are commonly used: Linear theory, which considers $K_e = K_t$ (strain concentration K_e is equal to K_t), and Neuber theory, which uses $K_e \cdot K_s = K_t^2$. ViDa lets you choose any of these theories on the eN method window.
75. The eN method window lets you automatically correct the eN curve elastic exponent b using $S_f = k_a \cdot k_b \cdot k_c \cdot k_d \cdot k_e \cdot S_f'$ (the SN curve approach), introduce an elbow (with the Consider SN Curve Elbow option), and even set a value of the eN curve slope after this elbow (by setting the SN curve's exponent b_{elb}).
76. Since all plastic events induce memory, it is strongly recommended that the eN method be applied to the original sequence of the loading stresses. You should not rainflow count the loading before eN calculations, it is recommended that you select the option to rainflow count the calculated strains (on the eN method window) instead.
77. Rainflow counting the calculated strains is the recommended method for eN calculations (available on the eN method window). Rainflow counting the stress history before drawing the hysteresis loops alters the loading order, ending up with wrong hysteresis loops and wrong calculated damage!
78. When Rainflow counting the calculated strains (on the eN method window), the hysteresis loops are calculated following the original loading order, the resulting calculated strain history is Rainflow counted, and finally the eN life calculation is performed. The user can also input a strain amplitude filter, in microstrains.

Crack Growth Calculation Tips

79. To obtain the A and m coefficients of the Paris da/dN equation ($da/dN = A \cdot \Delta K^m$) from the Rolfe-Barson estimates, click the 'Rolfe-Barson' button on the da/dN method window. These estimates are only valid for steels, and they depend only on its microstructure.

80. To obtain the constants of the Paris law ($da/dN = A \cdot dK^m$) from the eN curve parameters, click the 'From eN Curve' button on the da/dN method window. These estimates use the assumption that the crack growth is caused by the successive breaking of tiny eN specimens, each with a width da , which fail when they achieve their critical damage.
81. To adjust almost any da/dN curve to your experimental data, fit them to the Paris and Elber laws on the Material window, and select any da/dN formula on the Crack Growth window. Finally, tune in its coefficients by interactively editing the variables and redrawing the da/dN graph until it is visually compatible with the fitted Paris and Elber curves.
82. To plot a da/dN equation on the Crack Growth window for different values of $R = K_{min}/K_{max}$, right-click on the da/dN graph with the mouse, choose Vary R, and input the range of the R values and the number of curves to be plotted. This plot is very useful to visualize the influence of R on crack growth for each da/dN equation.
83. The Critical Stress Intensity Factor (K_{Ic}), the amount of energy absorbed during a standard Charpy test, and the value of the critical CTOD (Crack Tip Opening Displacement) are all measures of fracture toughness.
84. Traditional Rainflow counting of the loading history alters its original sequencing and, in consequence, the calculated crack growth. It is strongly recommended to use instead the Sequential Rainflow counter before any crack growth calculations.
85. To calculate crack growth sequentially (instead of the RMS approach), click on the Sequential tab on the Crack Growth window. The crack increment per half-cycle is then assumed to be: $da_i = f(\Delta K_i, R_i)/2$, where ΔK_i and R_i are the respective stress intensity range and loading ratio, and f is the crack growth law.
86. To calculate crack growth using the Root Mean Square approach, click on the Krms tab on the Crack Growth window. A RMS stress value of all the loading history is calculated and then used to integrate the da/dN equation (instead of sequentially calculating the crack growth for each loading).
87. To calculate the number of cycles it takes to reach a certain crack size, set a value different than zero to the 'Final Value' field on the Crack Growth window. This value is the maximum allowable crack length, after which the calculation stops. The Bidimensional Crack Growth window also has this feature, and you can set both a and c Final Values.
88. ViDa recognizes retardation and even crack arrest effects in crack growth calculations. To consider retardation effects, go to any crack growth window and type the Wheeler exponent of the material on the Retard Effect field. To consider crack arrest effects, check as well the M.W. (Modified Wheeler) option.
89. Crack growth retardation effects are modeled using the Wheeler approach, where each instantaneous crack growth rate da/dN_i is multiplied by a retardation factor (which is a function of eventual stress overloads). The Modified Wheeler (M.W.) approach is very similar, except that it corrects ΔK_i , which can predict crack arrest.
90. ViDa predicts the behavior of surface cracks by calculating crack growth both sideways and in depth, considering the changes in crack shape and the retardation and crack arrest effects. Click Bidimensional Crack Growth on the Life menu, and choose among Semi-Elliptic, Corner or Internal cracks.
91. The bidimensional crack model in ViDa assumes corner cracks to be a quart ellipsis, surface cracks a semi ellipsis and internal crack a full ellipsis, recognizing that these cracks normally change their shape ratio during the propagation, i.e., despite remaining elliptical they can vary the a/c ratio at each loading cycle.
92. You can choose among several different plots in the Bidimensional Crack Growth calculations. For instance, you can plot K_I in depth against K_I in the width direction, or even plot the shape of the crack fronts.
93. It is possible to consider the loading history as a superposition of Normal and Bending stresses on some of the pieces of the Bidimensional Crack Growth window. Use the Tension and Bending Factor fields to set the values (from 0 to 1) by which the loadings are multiplied.

Other Tips

94. You can calculate equivalent stresses (or strains) for a 3D-stress history (with normal and shear components, each with its own stress concentration factor) using Mises or Tresca criteria on the Equivalent Stress window. Click Equivalent Stress on the Tools menu to enter it. The resulting 1D components can then be used for life calculations.
95. When working with a 3D-stress history that will be used in crack growth calculations, choose Maximum Principal Stress on the Calculate menu. This option is most appropriate for crack growth since cracks tend to grow perpendicular to the maximum tensile stress direction, not being influenced by compressive stresses.
96. You can calculate equivalent stresses (or strains) for a list of strain triplets measured from a rectangular or delta Rosette on the Equivalent Stress window. Click Equivalent Stress on the Tools menu to enter it. The resulting 1D components can then be used for life calculations.
97. When working with strain triplets from a Rosette, click Principal Direction on the Calculate menu to view the principal directions. If these directions significantly vary along the history, using the Maximum Stress values could be too conservative. Instead, type an average value on the Direction field and click Projected Stress (or Strain).
98. An alphanumeric calculator that computes any formula using the material properties and user-defined variables is available by clicking Smart Calculator on the Tools menu. It features some basic Mechanics of Solids equations, and computed results (in SI or English units) can be multiplied to the loadings in the Loading Datasheet.
99. The Smart Calculator can easily convert force histories on known geometries into stresses. It has built-in Mechanics of Solids equations (e.g. bending, torsion, Mises), it is linked to the Kt database, and it lets you multiply forces on the Loading Datasheet by the calculated conversion factor, obtaining the associated stress history.
100. The Input File Formats recognized by ViDa are: Peak/Valley (*.pic), Alternate/Mean (*.alt), 3D Peak/Valley (*.p3d), Rosette Peak/Valley (*.ros), CSV (*.csv), Excel (*.xls), ADINA porthole (*.port; *.por), Kyowa histogrammer (*.1*), Calculation Logbook (*.log) and Variables Table (*.var) files.
101. The main files installed in the ViDa directory are: Vida.exe (the main program), vida.ini (keeps all user settings since the last time ViDa was loaded), vida.mdb (material and equation database file), vida.res (resource file with all the strings in ViDa, in up to 7 different idioms), vida.hlp and vida.cnt (ViDa help and table of contents files).
102. The word 'fatigue' originated from the Latin expression 'fatigare' which means 'to tire'. Even though it has become a terminology in engineering vocabulary a long time ago, its first descriptive definition was published in 1964 in the 'General Principles for Fatigue Testing of Metals', in Geneva.
103. Griffith's pioneering work in 1921 with brittle materials, such as glass, originated all modern theories of fracture in metals. However, Griffith was fired because his employer never understood why a metal researcher was working with glass specimens!
104. Paris, one of the fathers of LEFM, was the first to suggest that crack growth could be related to the stress intensity factor, but his original paper was not accepted by any leading journal in his field. He ended up publishing his famous paper in 1961 on his university's news bulletin, 'The Trend in Engineering'!
105. The fatigue failures of the jet aircraft Comet, which led to several accidents in the 1950s, heavily obstructed the prominent role played by the British aircraft industry. It is widely believed that this fatigue problem served as a catalyst in the emergence of the rival Boeing in USA as a world leader in commercial aviation!
106. To see who's behind ViDa, click the authors' names on the About window!

CHAPTER 5



Advanced Issues

This chapter covers a variety of topics, ranging from troubleshooting most common problems to viewing details on the ViDa input files.

Contents

- Troubleshooting
- Database Information
- Input File Formats

Troubleshooting

This topic shows frequently asked questions and troubleshooting of **ViDa**.

Problems During ViDa Installation

My CD-ROM can't read the ViDa CD.

ViDa comes in a recordable CD media (called CD-R), requiring a CD-ROM drive with Multiread capability. Most CD-ROM drives are Multiread compatible, however older ones may not be fast enough to run the ViDa CD. If you have access to a computer with a Multiread CD-ROM, you can copy the files in the Setup2002 directory to 1.44 MB diskettes, and then install ViDa on the original computer.

I inserted the ViDa CD, but nothing happened.

The ViDa CD features autorun, so a few seconds after being inserted it should display a welcome window. If autorun doesn't start, double-click on the AUTORUN.EXE file in the Windows Explorer.

The setup program is interrupted in the beginning of the installation process.

Check if you have previously run the ViDa setup and canceled the installation. Sometimes Windows 'forgets to delete' temporary files in your computer (especially in the c:\Windows and c:\Windows\Temp directories) that may cause problems in future installations. To correct this problem, search and delete **all vida*.cab** files that you might find in your Windows (or Winnt) folder. Delete also the folder **Msftqws.pdw** (if any) from the Windows\Temp folder. Finally, if any of the files **\Windows\System\Vb6stkit.dll** or **\Windows\St6unst.exe** has a size of 0 bytes, delete them. Then retry installing ViDa.

I received an 'access violation' error message.

Access violation errors occur when you try to install files that are already running in your computer. Just choose 'Ignore' and then confirm by pressing 'Yes'. This message is very common with the mfc40.dll file. To prevent these messages, it is recommended to close all open applications before installing, or even restart your computer before installation.

I received a 'path/file access' error message at the end of the installation.

Just click 'Retry' and the installation will proceed. This error may occur if you previously tried to install ViDa and aborted the installation process. To avoid this message, search and delete all **vida*.cab** files that you might find in your hard-disk before installation.

When I run ViDa for the first time, I receive a message that some file is missing.

The ViDa CD contains copies of all installed files in the **AllFiles** directory. Copy the missing file to the hard-disk and retry running ViDa. You might need to uncheck the 'Read-Only' attribute of the copied file in your hard-disk.

If the missing file is **nslock15vb6.ocx**, you'll also need to register it. Copy this file from the **AllFiles** directory in the CD to your **Windows\System** directory. Then register the control by clicking on Start menu, selecting 'Run' and typing:

regsvr32 c:\windows\system\nslock15vb6.ocx

If you still have problems, run the **\AllFiles\Vbrun60.exe** file from your CD, and retry the above.

Problems While Running ViDa

The numbers after the decimal point in any text box are disappearing after I type them.

Check if the Decimal Symbol from the Regional Settings (Windows Control Panel) is set to a point (.). ViDa may not work properly if the decimal point is set to comma (,).

Data from a CSV (comma separated value) file is not properly loaded to ViDa.

Check if the List Separator from the Regional Settings (Windows Control Panel) is set to a comma (,).

I can't load an Excel file into ViDa.

You need to have Microsoft Excel 97 or later installed in your machine to open Excel files in ViDa.

I can't see the ViDa papers.

ViDa installs all necessary files to display the slides in your machine. However, if you still have a problem, you can install Microsoft PowerPoint Viewer by running the installation file Vuelo6k1o.exe, located in the Media sub-directory of ViDa.

When I run ViDa, I receive a message that some file is missing.

The ViDa CD contains copies of all installed files in the AllFiles directory. Copy the missing file to the hard-disk and retry running ViDa. You might need to uncheck the 'Read-Only' attribute of the copied file in your hard-disk.

Database Information

The **ViDa** database contains properties of all materials used in the program and also the **Kt**, **KI** and da/dN equations database. It is a **Microsoft Access 97** database consisting of the **ViDa.mdb** file. Make sure that this file is present in the same directory as the **ViDa.exe** file.

The user doesn't need to have **Microsoft Access** since all data can be entered through the **ViDa** program.

Input File Formats

This topic shows a description of the **8** file formats used by **ViDa**. These files are:

- Peak/Valley files (*.pic)
- Alternate/Mean files (*.alt)
- 3D Peak/Valley files (*.p3d)
- Rosette Peak/Valley files (*.ros)
- CSV files (*.csv)
- Kyowa histogrammer output files (*.1*)
- Calculation Logbook files (*.log)
- Variables Table files (*.var)

Peak/Valley files (*.pic)

ASCII files containing a sequence of **peaks and valleys**. The first row contains the number of remaining rows in the file (the number of events), the value of the **Table Option** (0 for Stress values and 1 for Strain values) and the **Loading Time** in seconds (duration of ALL the loading history).

The remaining rows contain the values of the **peaks and valleys**.

Example of a (*.pic) file for 4 loadings expressed in strains and duration of 6 seconds:

```
4      1      6
0
1000
500
1800
```

Alternate/Mean files (*.alt)

ASCII files containing a sequence of **alternate and mean** components. The first row contains the number of remaining rows in the file (the number of events), the value of the **Table Option** (0 for Stress values and 1 for Strain values) and the **Loading Time** in seconds (duration of ALL the loading history).

The remaining rows contain the values of the **alternate and mean** components and the number of **half cycles** in which they were applied.

Example of an (*.alt) file for 2 loading events (10000 cycles of 0 to 100 to 0 and 4000 cycles of -70 to 70 to -70) expressed in stresses and duration of 3600 seconds:

```
2      0      3600
50     50     20000
70     0      8000
```

3D Peak/Valley files (*.p3d)

ASCII files containing a sequence of **peaks and valleys** for all 6 tensor components XX, YY, ZZ, XY, XZ and YZ. The first row contains the number of remaining rows in the file (the number of events), the value of the **Table Option** (0 for Stress values and 1 for Strain values) and the values of the **stress concentration factors** for each of the 6 tensor components.

The remaining rows contain the values of the **peaks and valleys** for each of the tensor components XX, YY, ZZ, XY, XZ and YZ.

Example of a (*.p3d) file for 5 loadings expressed in stresses and stress concentration factor of 2 in the ZZ and YZ directions:

```
5      0      1      1      2      1      1      2
100    50     200    0      0      0
-50    -100    0      0      0      0
200    200    200    0      0      0
50     50     40     10     15     25
0      0      0      -10    15     -25
```

Rosette Peak/Valley files (*.ros)

Files containing a sequence of **strain peaks and valleys** for all 3 Rosette direction components A, B and C. The first row contains only the number of remaining rows in the file (the number of events). Note that all Rosette data represent **Strain** values, expressed in **microstrains**.

The remaining rows contain the values of the **strain peaks and valleys** for each of the **rectangular** (or **delta**) Rosette components A, B and C.

Example of a (*.ros) file for 4 loadings:

```
4
1000      500      2000
-500      -1000     0
2000      2000     2000
500       500      400
```

CSV (Comma Separated Value) files (*.csv)

Files containing a list of data separated by commas. These files can be automatically generated from many other software such as the **Instron's Wavemaker** or **Microsoft Excel**. One of the columns of these files can be **loaded** to the **Loading Window**.

The first row contains the titles describing each of the columns of the following rows. The next rows have sequential data corresponding to the fields described in the first row.

Note: in order to load these files to **ViDa**, check if the **List Separator** from the **Regional Settings (Windows Control Panel)** is set to a **comma (,)**.

Example of a (*.csv) file with 4 values:

```
Time, Sequence, Block, Cycle, Position mm, Load kN, Strain
0, 1, 1, 1, 0.087, 0.37, -0.0034
0.006, 1, 1, 1, 0.096, 1.51, -0.0019
0.008, 1, 1, 1, 0.10, 3.06, -0.0024
0.01, 1, 1, 1, 0.11, 4.97, -0.0028
```

Kyowa histogrammer output files (*.1*)

Output file generated from the **Kyowa RHS-500A histogrammer**. These are rather specific files that **ViDa** recognizes and therefore won't be described here in this help. Refer to the **Kyowa RHS-500A histogrammer** Manual for more information on these files.

Calculation Logbook files (*.log)

Files containing data from all 5 tables of the [Calculation Logbook window](#).

The first row contains the number of rows of each of the **tables** SN, eN, da/dN, IIW and da/dN 2D (in that order). Let these numbers be **a**, **b**, **c**, **d** and **e**. Then the next 6*(**a**-1) rows in the file contain data from the SN table (counting from left to right for each row in the table). Then the next 7*(**b**-1) rows contain data from the eN table, the next 5*(**c**-1) from the da/dN table, the next 4*(**d**-1) from the IIW table and finally the last 6*(**e**-1) rows contain data from the da/dN (2D) table. When a cell doesn't contain any data then a minus (-) character is saved.

Variables Table files (*.var)

Contains the values of all variables of the **Variables Table**.

Each row contains one of the values. The 22 rows contain respectively the values of a, A, b, B, c, d, D, h, H, I, L, m, n, p, r, s, t, v, w, x, y and z.

References



Papers:

- 1 - Meggiolaro, M.A. & Castro, J.T.P., "**ViDa** - Software for Fatigue Life Prediction under Complex Loadings", III Symposium on Experimental Stress Analysis, pp.7-10, ABCM (Brazilian Society of Mech. Eng.) 95 (in Portuguese).
- 2 - Meggiolaro, M.A. & Castro, J.T.P., "Advances in Fatigue Design Automation under Complex Loadings", II Fracture Mechanics Seminar, pp.99-118, ABM 96 (in Portuguese).
- 3 - Meggiolaro, M.A. & Castro, J.T.P., "Remarks on Fatigue Design under Complex Loadings using the eN Method", IX SIBRAT (COTEQ 96), pp.157-160, IBP & ABCM 96 (in Portuguese).
- 4 - Meggiolaro, M.A. & Castro, J.T.P., "Comments on Fatigue Crack Propagation under Complex Loadings", IX SIBRAT (COTEQ 96), pp.145-148, IBP & ABCM 96 (in Portuguese).
- 5 - Castro, J.T.P. & Meggiolaro, M.A., "Residual Life Prediction of Cracked Structures", Proceedings of COTEQ 97, pp.263-268, IBP and ABCM, 97 (in Portuguese).
- 6 - Meggiolaro, M.A & Castro, J.T.P., "Equationing of Fatigue Crack Growth Curves", Proceedings of the II International Congress of Metallurgic and Material Technology, ABM, 97 (in Portuguese).
- 7 - Meggiolaro, M.A & Castro, J.T.P., "Sequencing Effect Modeling in Fatigue Crack Growth", Proceedings of the II International Congress of Metallurgic and Material Technology, ABM, 97 (in Portuguese).
- 8 - Meggiolaro, M.A & Castro, J.T.P., "Sequencing Effects in Hysteresis Loop Prediction using the eN Method", Proceedings of the II International Congress of Metallurgic and Material Technology, ABM, 97 (in Portuguese).
- 9 - Meggiolaro, M.A. & Castro, J.T.P., "ViDa 96 - Visual Damagemeter to Automate Fatigue Design under Complex Loading", submitted to RBCM, 97 (in Portuguese).
- 10 - Castro, J.T.P. & Meggiolaro, M.A., "Remarks on the Automation of the eN Method for Fatigue Design under Complex Loading", submitted to RBCM (in Portuguese).
- 11 - Castro, J.T.P. & Meggiolaro, M.A., "A Note on the Modeling of the Fatigue Crack Growth Curve", submitted to RBCM (in Portuguese).
- 12 - Castro, J.T.P. & Meggiolaro, M.A., "A Note on the Automation of Fatigue Crack Propagation Reckoning under Complex Loading", submitted to RBCM (in Portuguese).

Courses:

- 1 - "Advances in Fatigue Design Automation" - Marco A. Meggiolaro and Prof. Jaime Tupiassú P. de Castro, Ph.D. - August 7-9, 1996 - **PUC-Rio**, Rio de Janeiro - RJ, Brasil.
- 2 - "**ViDa** - Visual Damagemeter to Automate Fatigue Design under Complex Loading" - Marco A. Meggiolaro and Prof. Jaime Tupiassú P. de Castro, Ph.D. - November 12, 1996 at **M.I.T.** and November 13, 1996 at **UConn**.